STR-6065

Set using ISO screws

General Export Model

CANADA Model 1st revision

Serial Number 700,401 and later

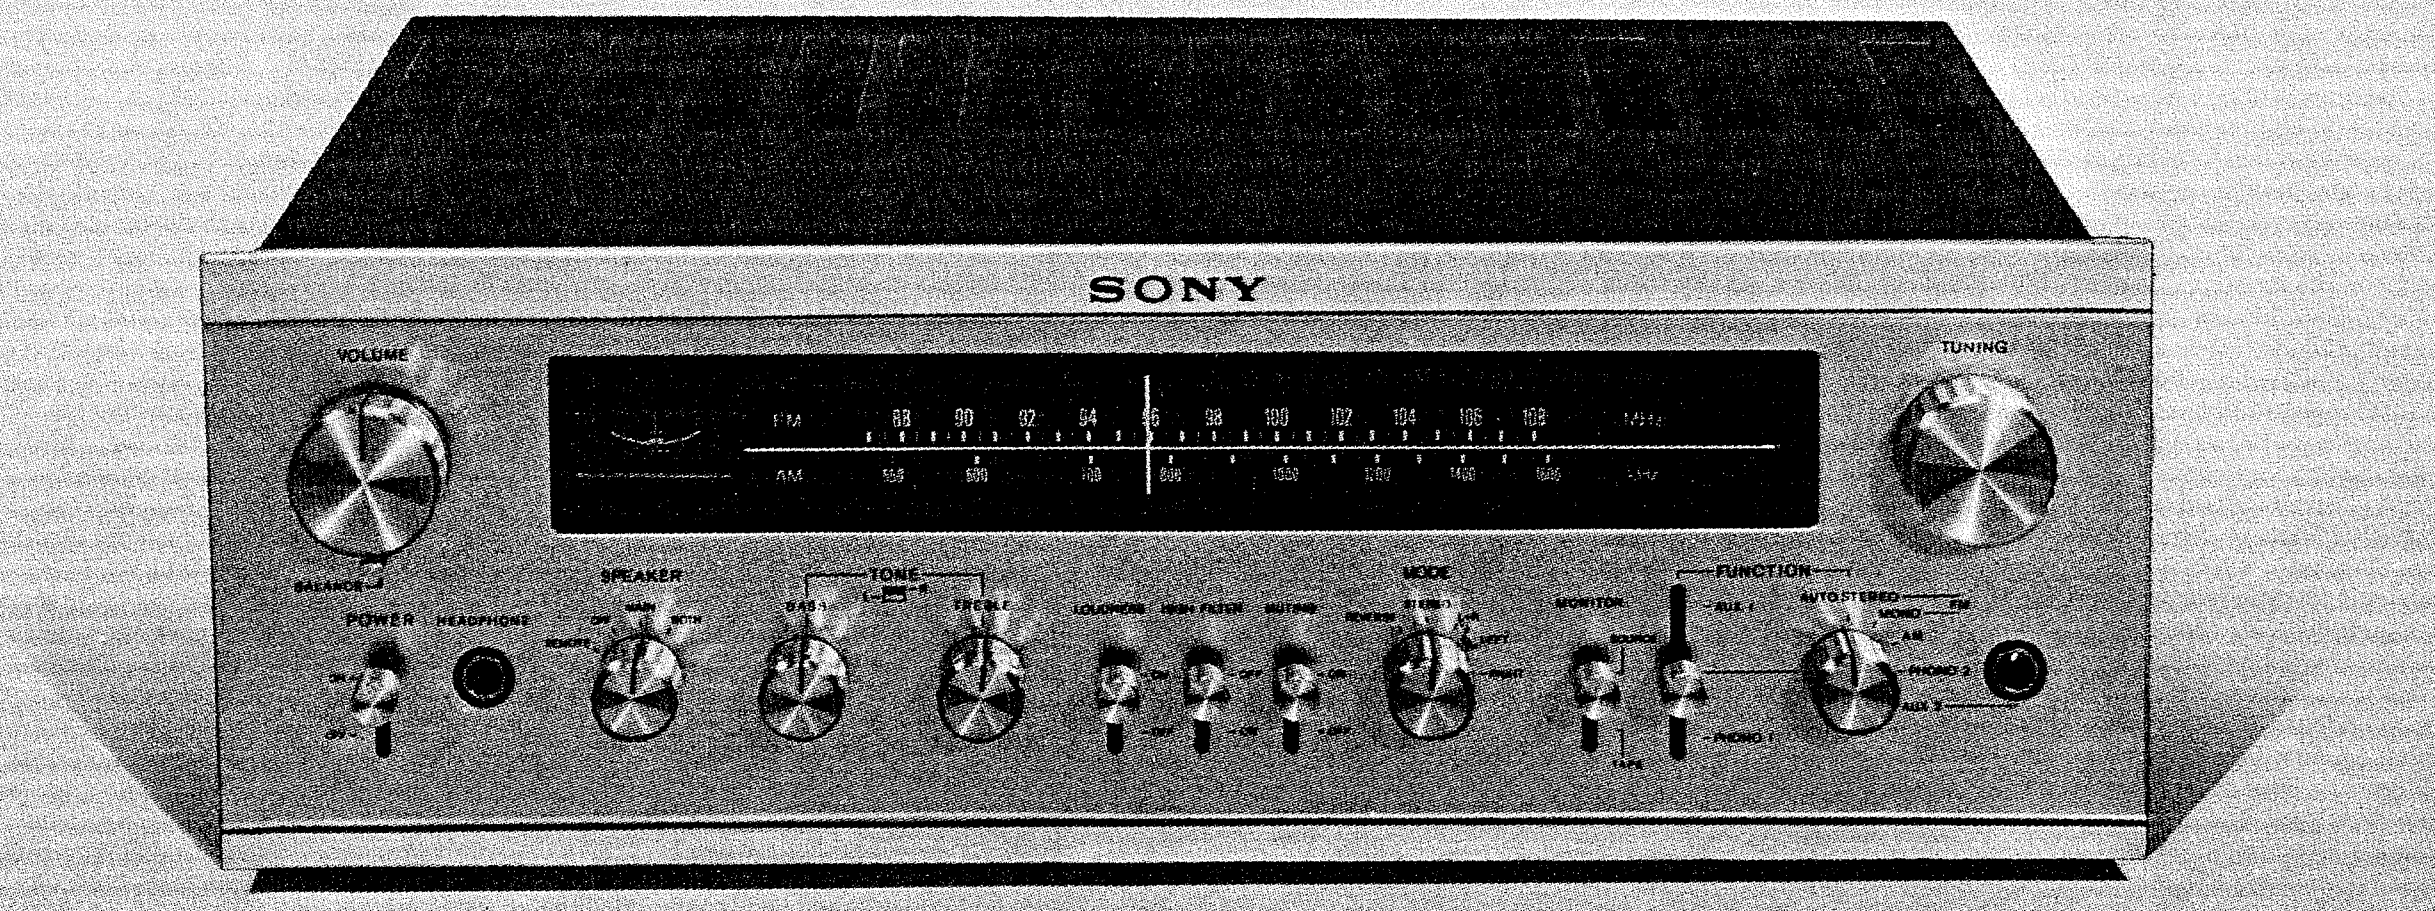
SONY
VOLUME
TUNING
POWER
SPEAKER
TONE
BASS
TREBLE
MODE
MONITOR
FUNCTION

SERVICE MANUAL

TABLE OF CONTENTS

Page

SECTION 1 TECHNICAL DESCRIPTION

1-1. Technical Specifications .... 1~2
1-2. Detailed Circuit Analysis .... 2~12
1-3. Level Diagram 10
1-4. Block Diagram – Tuner Section – 11
1-5. Block Diagram – Audio Section – 12

SECTION 2 DISASSEMBLY AND REPLACEMENT PROCEDURES

2-1. Tools Required 13
2-2. Hardware Identification Guide 13
2-3. Top Cover and Bottom Plate Removal 13
2-4. Front Panel Removal .... 13~14
2-5. Dial-Cord Restringing .... 14~16
2-6. Mechanical Dial Calibration 16
2-7. Dial Scale Replacement 16
2-8. Pilot-Lamp Replacement .... 16~17
2-9. Tuning Meter Replacement 17
2-10. Control and Switch Replacement .... 17~18
2-11. Rear Panel Removal 18
2-12. Replacement of Components Secured to the Rear Panel by Rivets .... 18~19
2-13. Power Transistor Replacement 19
2-14. Chassis Layout 20

SECTION 3 ALIGNMENT AND ADJUSTMENT PROCEDURES

3-1. Fm I-f Strip Alignment .... 21~22
3-2. Fm Discriminator Alignment .... 22~23
3-3. Muting Adjustment 23
3-4. Fm Frequency Coverage Alignment .... 23~24
3-5. Fm Stereo Separation Adjustment .... 24~26
3-6. A-m I-f Strip Alignment 26
3-7. A-m Frequency Coverage and Tracking Adjustment .... 26~28
3-8. Power-Amplifier Adjustment .... 28~30

SECTION 4 REPACKING 32

SECTION 5 DIAGRAMS

Mounting Diagrams
- – Loudness Control Board – 33
- – Equalizer Board – 34
- – Fm Front End – 35
- – Fm I-f Board – .... 36~37
- – MPX Board – .... 38~39
- – A-m I-f Board – .... 40~41
- – Power Amplifier Board – .... 42~43
- – Power Supply Board – .... 44~45
- – Tone Control Board – 46

Schematic Diagrams
- – Tuner Section – .... 47~48
- – Audio Section – .... 49~50

SECTION 6 EXPLODED VIEW .... 51~54

SECTION 7 ELECTRICAL PARTS LIST .... 55~60

SECTION 1
TECHNICAL DESCRIPTION

1-1. TECHNICAL SPECIFICATIONS

Technical specifications for the STR-6065 are given in Table 1-1.

TABLE 1-1. TECHNICAL SPECIFICATIONS

Fm Tuner Section

Antenna:	300 ohms balanced
Tuning range:	87.5 to 108 MHz
Sensitivity:	2.2μV (IHF usable sensitivity) 1.8μV (S/N 30 dB) 1.4μV (S/N 20 dB)
S/N ratio:	70 dB
Capture ratio:	1.5 dB
Selectivity:	80 dB
Image rejection:	70 dB
I-f rejection:	90 dB
Spurious rejection:	100 dB
A-m suppression:	65 dB
Frequency response:	20 Hz to 15 kHz $\pm^{0.5}_{1}$ dB
Separation:	38 dB at 400 Hz
Harmonic distortion:	Mono: 0.2%, IHF (400 Hz 100% Mod) Stereo: 0.5%, IHF (400 Hz 100% Mod)
19 kHz, 38 kHz suppression:	60 dB
Muting level:	less than 5μV

A-m Tuner Section

Antenna:	Built-in ferrite bar antenna with external antenna terminal
Tuning range:	530 to 1,605 kHz
Sensitivity:	48 dB/m, built-in antenna (S/N: 20 dB) 20μV, external antenna
I-f rejection:	46 dB at 1,000 kHz
Harmonic distortion:	0.8%

Audio Amplifier Section

IHF Dynamic power:		255 watts (4Ω), both channels operating (constant power supply method) 220 watts (8Ω), both channels operating (constant power supply method)
Rated output: (RMS Power)		80 watts (4Ω) per channel, both channels operating 70 watts (8Ω) per channel, both channels operating 110 watts (4Ω), each channel 80 watts (8Ω), each channel
20 Hz ~ 20 kHz power:		50 watts (8Ω) both channels operating
Power band width:		15 Hz to 30 kHz, IHF
Harmonic distortion:		less than 0.2% at 1 kHz at rated output less than 0.1% at 1W output
Frequency response:	PHONO	RIAA curve
	TAPE	10 Hz to 60 kHz
	REC/PB	10 Hz to 60 kHz
Input sensitivity and impedance:	PHONO-1, -2	1.4 mV 47 k
	AUX-1, -2	140 mV 100 k
	TAPE	140 mV 100 k
	REC/PB	140 mV 100 k
Signal output and output impedance:	REC OUT	250 mV 10 k
	REC/PB	30 mV 80 k
	CENTER CHANNEL OUT:	5 V 1 k
S/N ratio:	PHONO-1, -2	greater than 70 dB (weighting network "B")
	TAPE AUX-1, -2	greater than 90 dB (weighting network "A")
	REC/PB	greater than 90 dB (weighting network "A")
Tone controls:	BASS	±10 dB at 100 Hz
	TREBLE	±10 dB at 100 Hz
Filter:	HIGH	6 dB/oct. above 5 kHz
Loudness:		50 Hz, +10 dB 10 kHz, +4 dB (with 30 dB attenuation)

General

Power consumption:	Approx. 240 watts (CANADA Model) Approx. 250 watts (General Export Model)
Power requirement:	100, 117, 220, 240 volts ac (General Export Model) 117V only (CANADA Model)
Dimensions:	440 mm (width) x 148 mm (height) x 354.5 mm (depth) 17$\frac{5}{16}$" (width) x 5$\frac{13}{16}$" (height) x 13$\frac{15}{16}$" (depth)
Net weight:	13.5 kg (29 lb 12 oz)
Shipping weight:	17.5 kg (38 lb 9 oz)

1-2. DETAILED CIRCUIT ANALYSIS

The following describes the function or operation of all stages and controls. The text sequence follows signal paths. Stages are listed by transistor reference designation at the left margin; major components are also listed in a similar manner. Refer to the block diagram on page 11 to 12 and the schematic diagram on page 47 to 50.

Stage/Control	*Function*
Fm Front End	
Balun B901	This transformer matches 300-ohm twin lead to the fm front-end's input stage and thereby couples the receiver signal to the front-end.
Passive rf circuit	A triple-tuned circuit is employed between the antenna and mixer transistor. This passive coupling circuit contains no active amplifiers, so it is perfectly linear and cannot produce distortion and overload components. Thus, the factors that contribute to spurious responses are eliminated ahead of the mixer.
Local oscillator Q102	Supplies heterodyning voltage to the mixer via L104. The circuit is a modified Hartley type with feedback applied to the emitter from the tap on L104.
AFC circuit D101, D102 C120 C120	An automatic frequency control circuit is incorporated in the oscillator circuit to eliminate frequency drift and precise tuning difficulty. The principle of afc operation is as follows: When the tuner is correctly tuned, the intermediate frequency is 10.7 MHz and no dc correction voltage is produced by the ratio detector as shown in the "S" curve response of Fig. 1-1. Thus the voltage applied to diode D101 is determined solely by the positive fixed reverse bias vòltage supplied by zener diode D102. Now assume that the local oscillator frequency changes by $+\Delta f$. This means that the new intermediate frequency is 10.7 $+\Delta f$. See Fig. 1-1. As the result a positive dc component is fed back to the anode of D101, decreasing the reverse voltage to it, and making D101's barrier capacitance increase. This decreases the local oscillator's frequency, since the series circuit composed of C120 and D101 is connected in parallel with the tank circuit of the local oscillator. Conversely, if the local oscillator frequency decreases a negative dc voltage is fed back to D101 increasing the local oscillator frequency.
Mixer Q101	RF signals and local oscillator voltage are heterodyned in the gate-source junction of mixer Q101 to produce 10.7 MHz i-f output signal.
IFT101	Transformer IFT101 and capacitor C106 and C107 form a 10.7 MHz "high-C" tuned circuit. This type of circuit has the advantage of reducing the higher order harmonics of 10.7 MHz which cause cross-modulation or spurious interference.

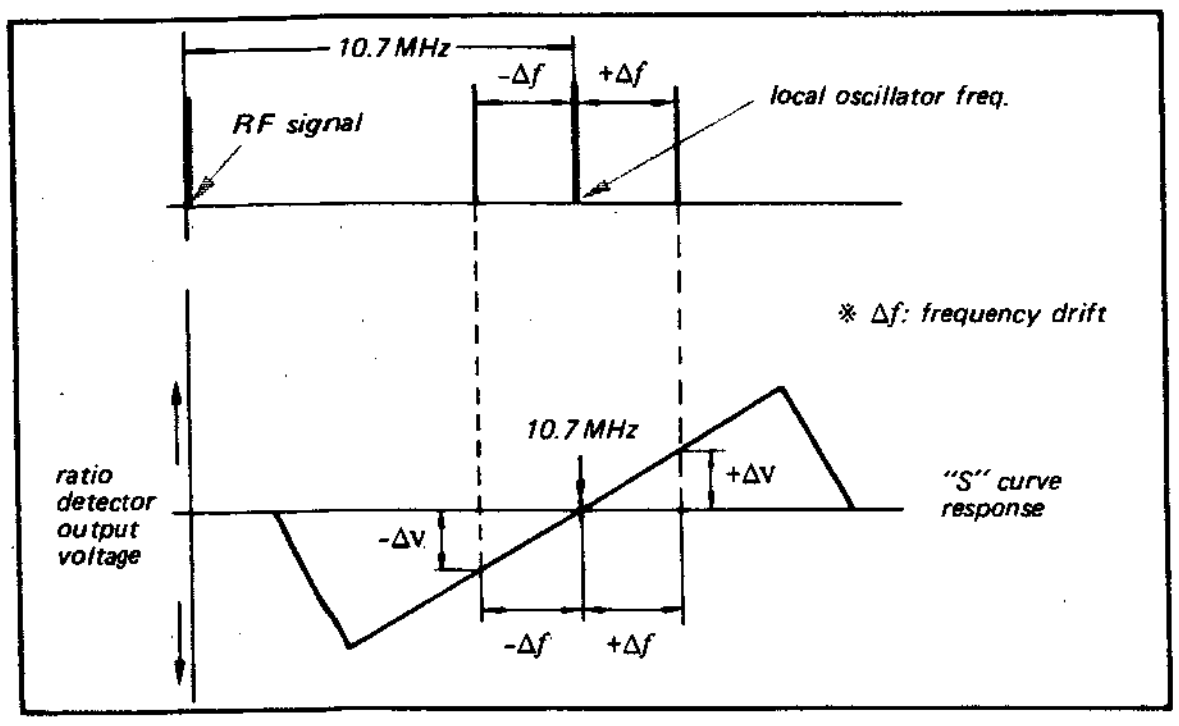

Fig. 1-1. *Local oscillator's frequency drift and afc voltage relationship*

Stage/Control	*Function*
I-f preamplifier Q103	The i-f signal coupled to the base of i-f preamplifier Q103 by the secondary winding of IFT101 is amplified to achieve a favorable signal-to-noise ratio before application to the filters in the i-f strip.

I-f Amplifier

Stage/Control	*Function*
I-f amplifiers Q201 to Q205 CF201 to CF206	These i-f stages are basically RC coupled amplifiers (except Q205) that provide essentially flat response. The selectivity of this section is determined by three pairs of filters CF201, CF202, CF203, CF204, CF205 and CF206 in the interstage coupling path. Each of these filters is a two-section ceramic filter that operates in the "trapped-energy" mode. The filters provide extremely-sharp skirt selectivity and flat response inside the passband. Thus, these filters largely determine overall tuner selectivity.
I-f output Q206	Signal at the base of Q206 has had all amplitude variations removed by the preceding limiters, and only selected signals have been passed by ceramic filters. Q206 provides power to drive the ratio detector.
Diode limiters D201 to D206 D209, D210	Limiting is accomplished by diode pairs, connected in parallel and poled in opposite directions. The diodes conduct when the signal across them exceeds the barrier potential of about 0.6 volts in the forward direction. Thus the signal is limited in both directions to 1.2 volts peak-to-peak. The diodes provide symmetrical limiting.
Ratio detector D207, D208	T201 and diodes D207 and D208 form a balanced ratio detector that transforms the frequency-modulated signal into an audio signal. Output appears across C216.
Muting circuit Q207, Q208, Q209, Q210 D211 to D213	The i-f signal is extracted from limiter diodes D203 and D204 to drive the muting circuit. The extracted i-f signal is amplified by Q208 (FET) enough to drive voltage doubler D212 and D211 through tuned transformer T202. D213 provides positive fixed bias for Q209 through D212 and D211. T202 determines the bandwidth necessary to control the muting circuit without generating interstation or detuning noise. The output of the voltage doubler is a positive dc voltage proportional to the carrier levels of weak rf signals. Q209 and Q210 form a switching circuit which is driven by the voltage doubler. Q209 is normally cut off, thus forcing Q210 into conduction. The collector of Q210 is connected to the gate of FET Q207 through MUTING switch S7. FET Q207 acts as an electronic switch which is inserted between the ratio detector and MPX decoder, and is controlled by the gate voltage applied. With the MUTING switch ON, fm signals of average strength keep Q209 saturated, thus cutting off Q210. This causes Q207 to conduct and maintain normal operation. Weak stations and interstation noise can not produce sufficient dc voltage at the base of Q209 to keep it conducting. As a result, Q209 cuts off.

Stage/Control	*Function*
	This saturates Q210 and cuts off Q207, accordingly, the audio output is muted. With the MUTING switch OFF, Q207 is kept conducting regardless of the strength of the fm signal by a positive bias voltage on its gate. RV201 adjusts the muting level.
Stereo-mono automatic-switching circuit Q210, D409	The collector of Q210 is also connected to the output terminal of the MPX decoder's frequency doubler through diode D409. This prevents noisy stereo reception by automatically switching the MPX decoder's operation into the monaural mode. This is needed because in fm stereo broadcasting, the S/N ratio of a demodulated stereo signal degrades much more rapidly than that of a mono signal when the input signal strength decreases. As Q210 is forced into conduction by weak stations, the frequency doubler's output is effectively grounded, stopping the operation of the stereo demodulator. Thus, automatic switching of stereo to mono according to the input rf signal level is achieved.
TUNING meter M901 R243, R244	Center-zero meter assures correct tuning by utilizing the ratio detector's characteristic. As indicated in Fig. 1-1 no dc voltage is produced across connection of R243 and R244 and ground when the tuner is correctly tuned. Deflection on the meter indicates the amount of deviation from the carrier frequency received. Note that the meter will indicate zero-reading when the tuner is not receiving any off-the-air signal.
SCA trap L203, C220	The composite signal containing monaural information from 0 to 15 kHz, the 19 kHz pilot carrier, and the fm stereo signal at 38 kHz is fed to Q207 through trap L203-C220. This trap removes the unwanted SCA signal to the base of Q401 (the 19 kHz amplifier) through Q207.
MPX Decoder	
19 kHz amplifier Q401	This stage serves two functions. It extracts the 19 kHz pilot signal by means of a tuned circuit at its drain, and provides a low-impedance source of composite stereo signal (without pilot carrier) at its source. By using an FET, harmonics of the 19 kHz and 38 kHz components are reduced to a low level thereby causing less carrier leak or beat interferance.
Frequency doubler D401, D402	Signals developed at the drain of Q401 are transformer coupled to a fullwave rectifier consisting of D401 and D402. The output of this rectifier is not filtered, resulting in two positive pulses for each input cycle. Thus, the 19 kHz pilot-carrier frequency is effectively doubled by D401 and D402. However, the wave form is not sinusoidal at the base of Q402.
38 kHz amplifier Q402	The 38 kHz pulses produced by D401 and D402 are amplified by Q402. The tank circuit at the collector of Q402 is tuned to 38 kHz to restore these pulses to a sinusoidal waveform. This signal is transformer coupled to the bridge-type demodulator to supply sampling drive for the demodulator.
STEREO lamp circuit Q403	The STEREO indicator lights when the FUNCTION switch is set to the FM-AUTO STEREO position and an fm stereo signal is received. The emitter of Q402 is connected to the base of Q403 (which is normally cut off). The circuit operates as follows: When a composite stereo signal is applied to the multiplex decoder, the 38 kHz pulses pro-

Stage/Control	*Function*
	duced at the output of the frequency doubler yield a higher average current flow through Q402. This forces Q403 into conduction, lighting STEREO indicator lamp PL904.
Multiplex demodulator D405, D406, D407, D408	The demodulator circuit employs four diodes in a balanced-bridge arrangement. This system has the advantage of cancelling residual rf components (38 kHz signal, some 19 kHz signal, and higher-order harmonics of these frequencies.) "L" and "R" components are developed at each side of the bridge as the result of demodulation, when the receiver is operated in the stereo mode. In the monaural mode, diodes D405 and D408 are forward biased by supply voltage through R405, the stereo indicator lamp, R412, R414, and R413, so these diodes merely act as small resistances. Under this condition, the monaural signal is applied to both "L" and "R" audio amplifiers.
De-emphasis capacitors C902, C903 C422, C423	These capacitors provide the roll off at high audio frequencies necessary to compensate for pre-emphasis at the transmitter. S10 should be set to the proper time constant. Specified de-emphasis time constant is 75 micro-seconds in USA and CANADA, 50 micro-seconds in Europe.
Audio preamplifier Q404, Q405 Q406, Q407	Demodulated L and R signals are amplified by these stages to the level required at the input of the following low pass filter.
Separation control RV401	The network that connects the emitters of Q404 and Q405 provides a form of negative feedback between left and right channels. Any residual "L" signal in the "R" channel (which is about 180° out of phase) is cancelled out by the "L" signal from the "L" channel.

Stage/Control	*Function*
	The same is true of residual "R" signal in the "L" channel. RV401 is therefore set for maximum separation.
LPF401	Filters out the unwanted higher-order harmonics of 19 kHz and 38 kHz leakage to obtain clear audio.
A-m Tuner	
Antenna circuit	A-m signals are received by the antenna tank circuit formed by L904, C302, L902, CV901, CT301, C305 and C304. C302 is selected not for its effect upon tuning, but to reduce spurious radiation by the local oscillator.
Low-pass filter L301	The low pass filter (L301 - C302) reduces the spurious radiation caused by local oscillator which may interfere another receiver or communication system through the external antenna.
Local oscillator Q305	This stage supplies the injection voltage necessary to receive a-m signals. In this modified Hartley oscillator circuit, feedback is applied to the emitter of Q305 from a low-impedance winding on oscillator coil T301.
Mixer Q301	Incoming rf signal is fed to the base of Q301, while the local oscillator voltage is injected to the emitter circuit of Q301. These two signals are heterodyned in the base-emitter junction of Q301 to produce the 455-kHz output. This stage functions as the gain control element of the agc system due to Q302 in the emitter circuit, as will be explained later.
CFT301	CFT301 is a combination unit which contains a double-tuned circuit and one ceramic filter tuned to 455 kHz. It develops the i-f signal, and determines the selectivity inside the passband. It also provides

Stage/Control	*Function*
	link coupling to i-f amplifier Q303.
I-f amplifier Q303	This stage is basically an RC-coupled amplifier and amplifies the i-f signal to the proper level required by the following stages.
I-f amplifier Q304	Q304 and IFT301 form a tuned amplifier circuit which provides power to drive diode detector D302.
Detector D302	The i-f signal from the secondary side of IFT301 is rectified by diode D302. The i-f components of the output signal are filtered by C318, R320 and C319 and then cleaned audio signal is fed to the audio preamplifier through FUNCTION switch S1.
TUNING Meter M901	The detector's (D302) output is also fed to TUNING meter M901 as the dc component in the rectified a-m signal is roughly proportional to the input signal level (not exactly for strong signals due to agc action).
AGC circuit	There are two feedback loops which provide proper agc operation. One is the minor loop applying AGC to the i-f amplifier Q304's base circuit. The other is the major feedback loop applying dc from the emitter circuit of Q304 to the emitter circuit of Q301 through Q302. The minor feedback loop consists of D301, R317, C326, R326, C325 and R314. The a-m i-f signal is extracted from the collector circuit of Q304 through C314 and rectified by diode D301. The output of the diode D301 is a positive dc voltage roughly proportional (not exactly due to agc action) to the carrier levels of input signal and fed to the base of Q302 through a filter circuit. Thus the output of diode D301 controls the current flow in Q304 and its emitter voltage as well. Major feedback is produced by the emitter circuit of Q304, R315, C322, C321, R325 and Q302. The emitter voltage of Q304 is applied to the base of Q302 through the filter circuit, determining the positive bias on Q302. As the Q302 shunts the emitter resistor of mixer Q301, it controls the operation of Q301 as a forward agc element. When the strong signal is received, Q302 is forced into conduction, shorting Q301's emitter to ground through R305. As a result, current flow in the Q301 (mixer) increase, reducing its current gain and allowing stable operation in a strong field-strength area.

Preamplifier Section

Stage/Control	*Function*
Equalizer amplifier Q501, Q502, Q503	This direct-coupled three stage amplifier amplifies the small signal provided by the phono cartridge to the level required at the input of the following tone-control amplifier.
Bias circuit R503, R510	Dc bias voltage for Q501 is extracted from R510 in the emitter circuit of Q503 and fed back to the base of Q501 through R503 and R504. This dc negative feedback technique provides stable operation during temperature changes.
Equalization circuit R512, R513, R514 R506 C506, C507	RIAA equalization is achieved by the negative-feedback loop containing R512, R513, R514, R506, C506 and C507. Be sure to use replacement components with the exact same values.
Equalization circuit	R515 (R565) in the output circuit prevents interaction between left and right channel-equalization when the MODE switch is set to L+R.
MODE switch S4	In the STEREO position of S4,

Stage/Control	*Function*
	left and right input signals are routed to their respective amplifiers. In the L+R position, the left and right signals are added and the sum is then fed to both amplifier channels. A rotary switch having two sections is used to obtain L+R signal even if the MONITOR switch is set to the TAPE position.
VOLUME control RV601 (RV651)	The equalized phono signals and signals applied to the other input terminals are fed to the VOLUME control through the MONITOR and MODE switches. The level of the signal applied to the following tone-control amplifier is determined by the setting of RV601.
LOUDNESS switch S5	This switch and R601, R602, C601, C602 compensate for the characteristics of the human ear which vary according to the loudness of the sound being heard. When this switch is set to ON and the VOLUME control is set for 30 dB attenuation, the overall frequency response is increased 10 dB at 50 Hz and 4 dB at 10 kHz with reference to the level at 1 kHz.
Tone-control amplifier Q601, Q602 (Q651, Q652)	This direct-coupled two-stage amplifier has basically flat response, but it operates as a negative-feedback type tone-control circuit. The output generated at the collector circuit of Q602 is fed back to the emitter circuit of Q601 through the treble and bass tone-control network.
TREBLE control RV603 (RV653)	Increases or decreases the amount of negative feedback voltage determined by the setting of RV603. It has a range of ±10 dB at 10 kHz.
BASS control RV604 (RV654)	Similar to the treble control except for filter components and frequency characteristics, however in this circuit the negative feedback voltage is determined by the setting of RV604. This has a range of ±10 dB at 100 Hz.
HIGH FILTER S6	The high-cutoff filter (R616 and C613) eliminates unwanted high-frequency components (5 kHz and higher) from the input signal when this switch is ON.

Power Amplifier Section

Preamplifier Q701, Q702	Q701 and Q702 form a paraphase amplifier but signal output is extracted from the collector circuit of Q701. This circuit has a various advantages in direct coupling system. One is high stability despite temperature variations and another is high input impedance without reducing the amplifier's gain. The ac output appears across load resistor R707 (R757) in the collector circuit. An emitter decoupling dircuit is formed by the emitter-base resistance of Q702, C702 and R710 in the base circuit of Q702. This circuit forms a frequency-selective ac bypass circuit to reduce the amplifier's gain at very low frequencies. Common emitter-resistor R709 keeps the dc current flow constant in the Q701 and Q702, thus increasing dc stability.
Bias power supply D701, D702 DC balance adj. RV701 (RV751)	These diodes are forward biased by positive and negative power supply voltage through RV701 and RV751. They provide a stabilized voltage to bias transistor Q701 that is used to make the output terminal balance at zero dc through RV701.
Thermal compensation and noise suppressor D703	As all the stages are directly coupled, dc stability is required. The negative temperature coefficient of D703 provides thermal compensation for the following driver stage. It also acts as a noise suppressor to reduce the popping noise due

Stage/Control	*Function*
	to unbalanced current flow in the following stages when the power switch in turned off.
Driver Q703	Though this stage is a conventional flat amplifier, it determines the output voltage swings because the following stages are basically in the emitter-follower configuration. The ac load resistor for this stage is R716.
Dc bias adj. (idling current) Q704, RV702	Q704 is forced to conduct and operates as a small resistance providing the necessary forward bias on the two cascaded emitter-followers. RV702 controls the base bias of Q704, determining the impedance between the emitter and collector of Q704, and thereby controls the dc bias voltage for the following complementary circuit.
Thermal compensator for dc bias D901	The negative temperature coefficient of D901 provides thermal compensation for the complementary and power transistor circuits. D901 is attached to the power transistor's heat sink to detect temperature increases in the power transistors.
Complementary circuit Q708, Q709	These transistors operate as emitter-followers to provide the current swings demanded of the output stages and also provide the necessary phase inversion. Phase inversion is performed by using PNP and NPN type transistors.
Power transistor Q901, Q902	The output transistors (Q901 and Q902) are connected directly to a power supply of about ±50V. Q902 supplies power to the load during the positive half cycle and Q901 operates during the negative half cycle. As all the stages are directly coupled and designed to obtain zero potential at the output terminal, the large coupling capacitor at the output

Stage/Control	*Function*
	(which may cause power loss or distortion at low frequencies) is eliminated.
Protection circuit	To protect overloaded power transistors from destruction, a new protection circuit is employed. In the event of a short circuit at the output terminals, the protection circuit holds the current in the power transistor low enough not to make it overheat and also limit the input drive signals. Fig. 1-2 shows a partial schematic diagram detailing the protection circuit. With reference to this diagram, the protection circuit operates as follows: Since the protection circuit is identical for positive going half cycles and negative going half cycles, only the positive going half cycle operation is described here. Q705 limits the positive-going half cycle of the drive voltage applied to the base of Q708 when power consumption at the Q902 collector exceeds the safety margin. Since power dissipation at the collector can be considered a function of collector voltage and current, the trigger signal for Q705 is taken from the collector and emitter. Base voltage is partly determined by the ratio of resistance of R722 and series resistance of R729, R738 and RL (load). Base voltage is also determined by the current flow in the R738 and the collector voltage of Q902. During normal operation, Q705 is cut off. When excessive current flows in the power transistor or power dissipation at the collector of power transistor exceeds the specified value, Q705 turns on and limits the input drive voltage to the power transistor. Limiting operation is also actuated by the condition of the load.

Stage/Control	*Function*
	The base voltage of Q705 is determined by the resistances R738, R729, R723, R724 and RL (load). D707 is employed to stop reverse voltage from applied being during the negative going-half cycle. Q705 turns on limiting the input drive voltage to the power transistor when the load resistance decreases to some extent. Under reactive load conditions in class B amplifiers maximum current will flow when the voltage across the power transistor is maximum and this is the worst case for secondary breakdown. See Fig. 1-3. As all speakers have reactive properties, a protection circuit which oovers the reactive region is required. Fig. 1-3 shows the operating load lines for one half of a class B output stage under conditions of equal load impedance; in one case the load is purely resistive and in the other case purely reactive. It is apparent that the reactive load case could result in transistor failure. D708, C708 and R727 form a charging circuit charging the base voltage according to the reactive voltage induced in the load to obtain proper protection operation. C708 and R724 form a discharging circuit to detect reactive dc voltage. D705 protects Q705 from breakdown between base and emitter due to detected reactive voltage across C708. D704 protects Q705 from the breakdown between collector and emitter during the negative-going half cycle.

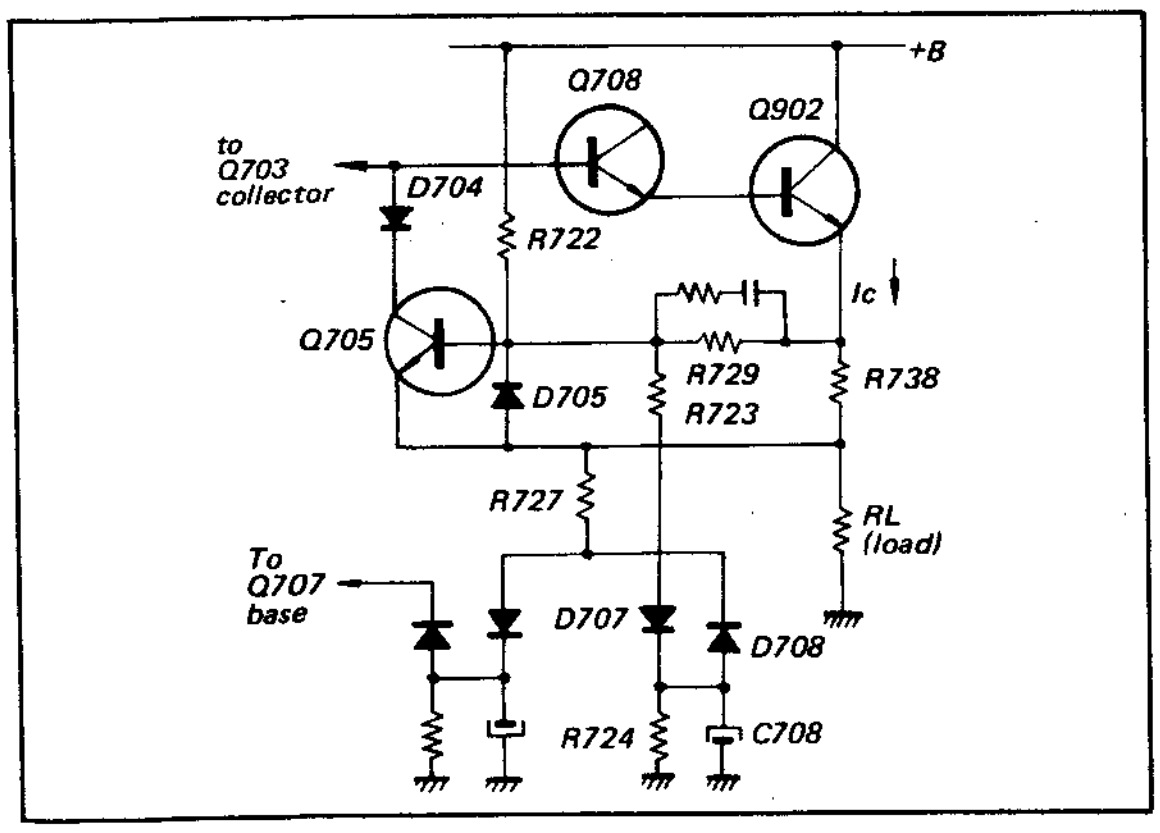

Fig. 1-2. Simplified protection circuit

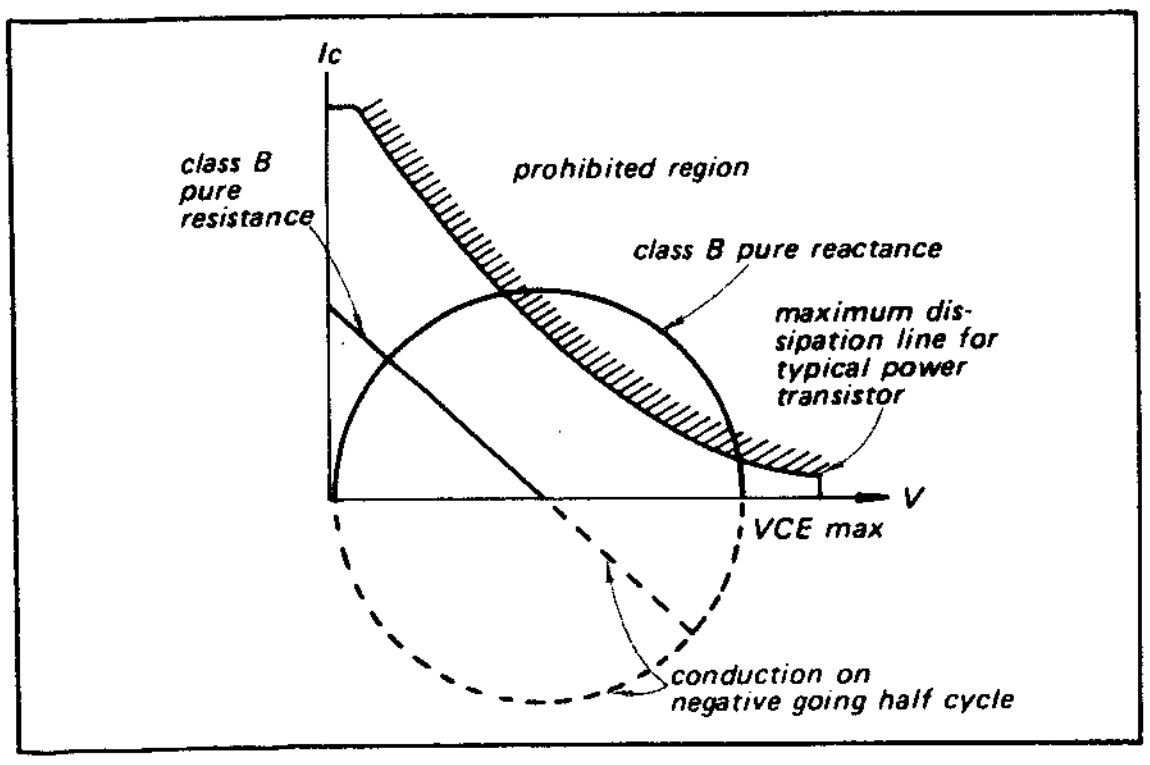

Fig. 1-3. Resistive and reactive load lines for class B output stage showing breakdown risk in purely resistive load

Stage/Control	*Function*
Q706	Q706 is inserted in the collector circuit of Q707 to increase protection sensitivity of negative going half-cycle.
Power supply rectifier D801	A full-wave bridge rectifier provides a positive and a negative dc power supply for the power amplifier.
Rectifier D802, D803	A half-wave rectifier D802 (D803) and ripple filter (C808, R801) supply well-filtered dc power to the complementary stage.
Ripple filter Q801 R804, R806 C810 Q802 R803, R805 C809	These components reduce the ripple voltage in the dc power supply for the pre-driver and driver stages of the power amplifier section to an extremely-low value. Q801 and Q802 serve as an electronic filter to supply well filtered dc of about ±54V to each stage.
Muting circuit for tone-amplifier and ripple filter Q803, Q804, Q805 R813, C814	This muting circuit prevents a loud "pop" (due to initial current flow to the tone amplifier) that might damage a delicate high-fidelity speaker system. R813 and C814 comprise an RC network with a long time

Stage/Control	*Function*
	constant. This eliminates poping because Q805 (ripple filter) is brought into conduction gradually. The base of Q805 is connected to the collector circuit of Q804 through R817, while the base of Q804 is directly coupled to the collector of Q803. At the instant of turning on the power switch S8, Q803 is off due to the long time constant of bias circuit, while Q804 is forward biased by R814 shorting the Q805's base to the ground. Thus, Q805 does not deliver power to the tone amplifier. As Q803 is gradually turned on due to its long time constant circuit Q804 is gradually cut off, turning on the Q805. As the result, Q805 is brought into conduction gradually.
Ripple filter Q805 R816, R817 C815, C816	Reduces the ripple voltages in the dc power supply for the tone amplifier stages to an extremely low value.
Power supply for tuner section D818, D819 Q806 D805, D806	Dc output from the rectifier D818 and D819 is filtered by C819 and applied to series regulator Q806. Since the voltage at the base of Q806 is kept constant by means of zener diodes D805 and D806, the emitter voltage remains constant regardless of load or line-voltage variations. The regulated and well filtered output of 15V is supplied to the tuner section.

1-3. LEVEL DIAGRAM

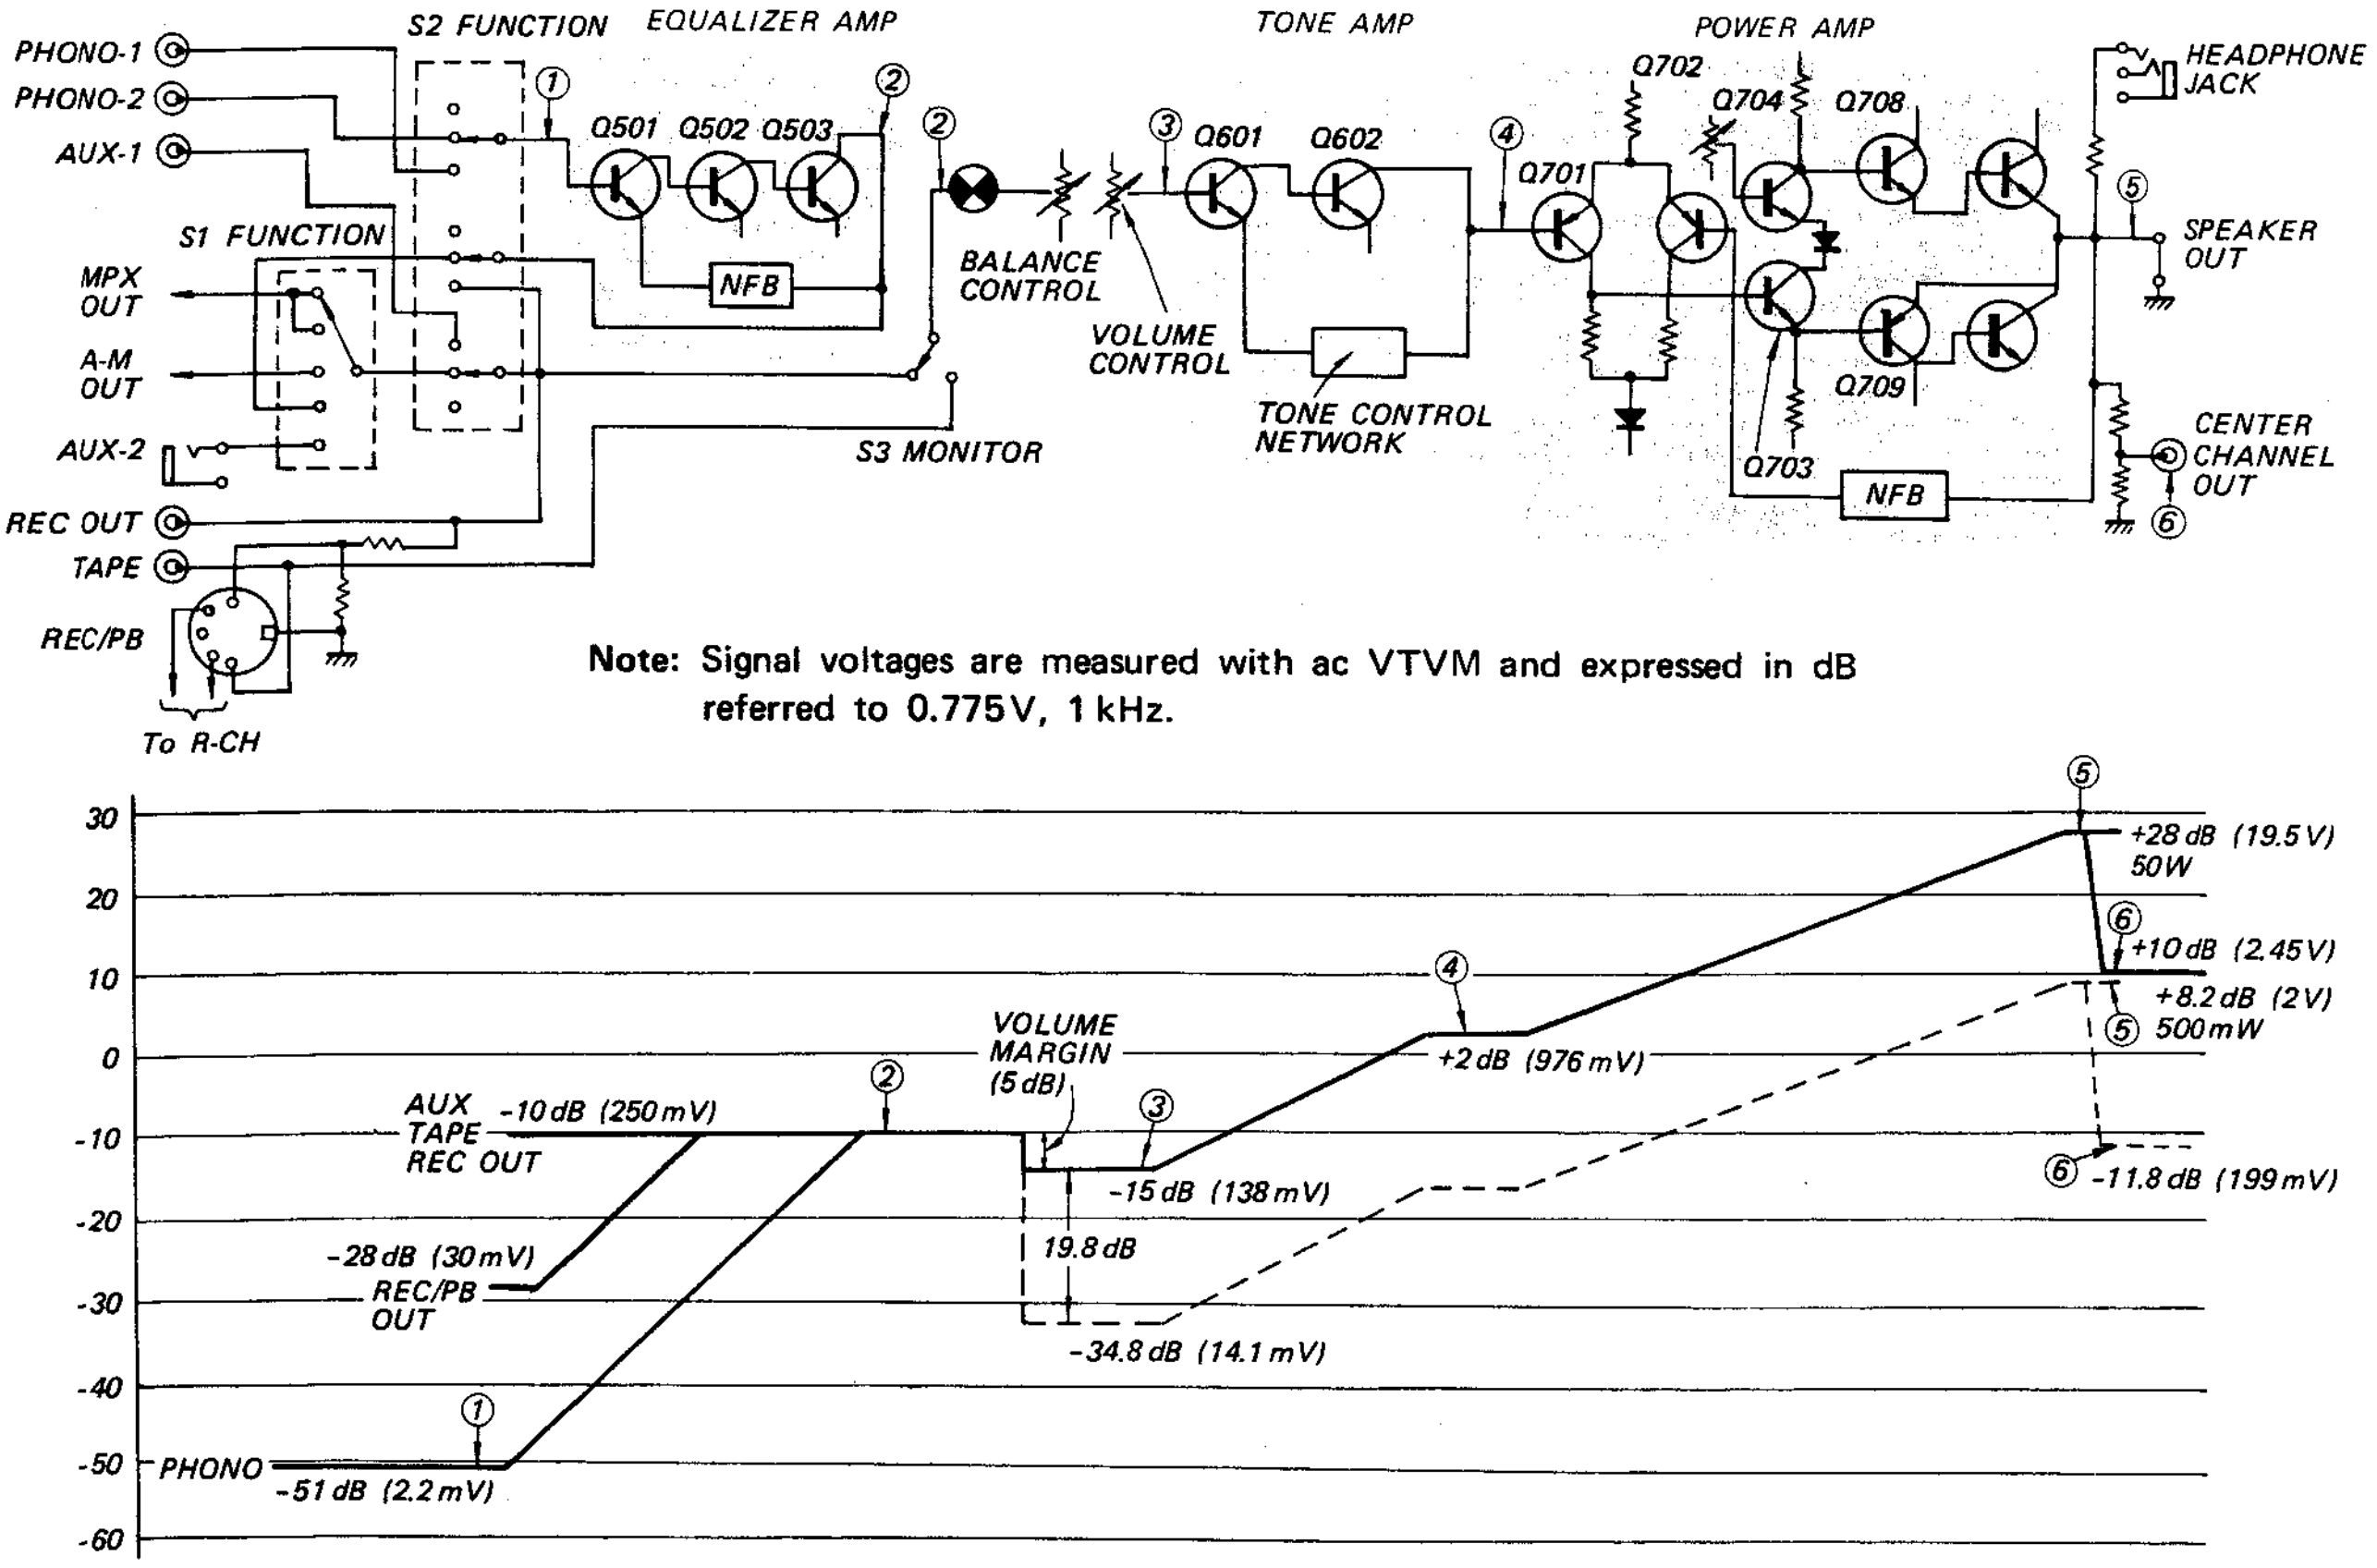
PHONO-1
PHONO-2
AUX-1
S2 FUNCTION
EQUALIZER AMP
Q501 Q502 Q503
NFB
S1 FUNCTION
MPX OUT
A-M OUT
AUX-2
REC OUT
TAPE
REC/PB
To R-CH
BALANCE CONTROL
VOLUME CONTROL
S3 MONITOR
TONE AMP
Q601 Q602
TONE CONTROL NETWORK
POWER AMP
Q702
Q704
Q708
Q701
Q709
Q703
NFB
HEADPHONE JACK
SPEAKER OUT
CENTER CHANNEL OUT
①
②
③
④
⑤
⑥
30
20
10
0
-10
-20
-30
-40
-50
-60
PHONO
-51 dB (2.2 mV)
-28 dB (30 mV)
REC/PB OUT
AUX
TAPE
REC OUT
-10 dB (250 mV)
VOLUME MARGIN (5 dB)
-15 dB (138 mV)
19.8 dB
-34.8 dB (14.1 mV)
+2 dB (976 mV)
+28 dB (19.5 V) 50W
+10 dB (2.45 V)
+8.2 dB (2V) 500mW
-11.8 dB (199 mV)

Note: Signal voltages are measured with ac VTVM and expressed in dB referred to 0.775V, 1 kHz.

Stage/Control	*Function*
Speaker protection circuit	In a direct-coupled power amplifier, some faults in the prior transistor appears as a large unbalanced dc voltage across output terminal. This might damage a delicate speaker system. Therefore, the STR-6065 incorporates speaker protection circuit which operates as follows (refer to Fig. 1-4): The output signal is extracted from the output terminal through a low-pass filter (R822 or R823, C823 and C824) and fed to the bridge rectifier (D807 ~ D810). Because of this filter, the voltage applied to the bridge rectifier is only the very-low frequency or dc component caused by transistor faults. When the rectified dc voltage becomes large enough, it starts the Hartley oscillator (Q807 and T801). The oscillator's output is rectified by D811 and thus provides trigger voltage for SCR D813. When the trigger voltage is applied to the gate of SCR, the SCR turns on and shorts the base voltage of Q708 to ground through R720, D814, the SCR,

1-4. BLOCK DIAGRAM — Tuner Section —

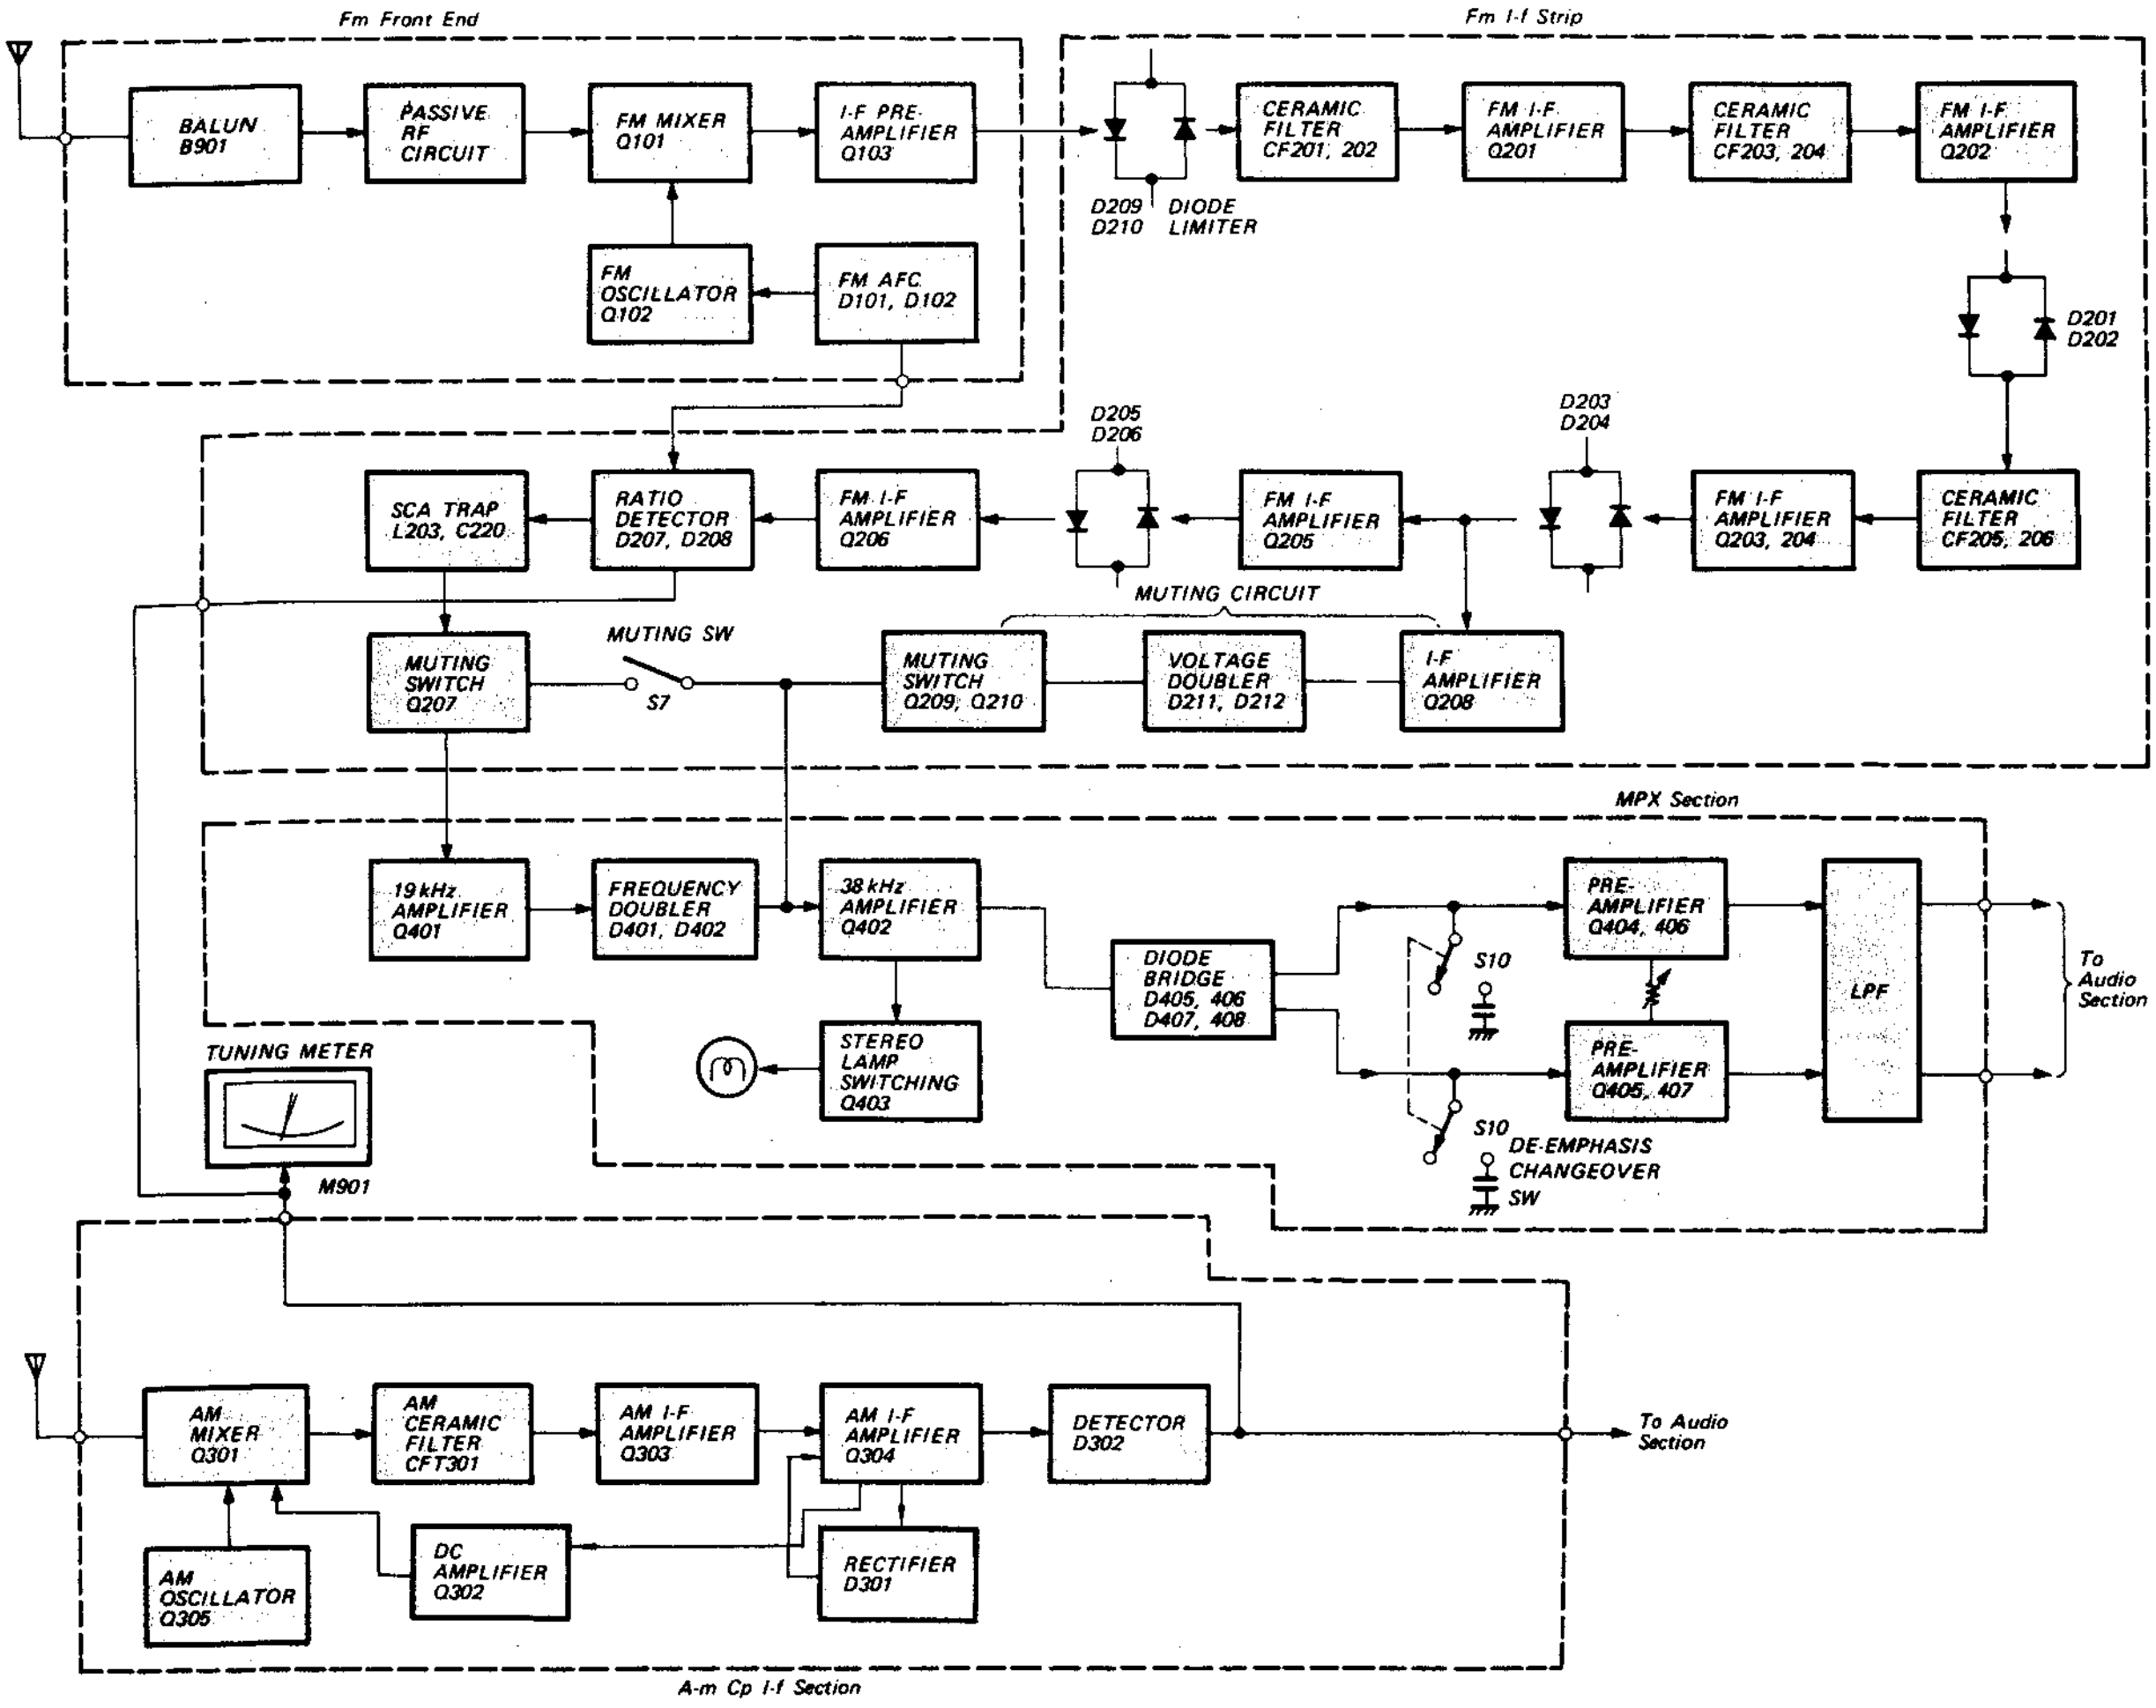
Fm Front End
BALUN B901
PASSIVE RF CIRCUIT
FM MIXER Q101
I-F PRE-AMPLIFIER Q103
FM OSCILLATOR Q102
FM AFC D101, D102
Fm I-f Strip
D209 D210 DIODE LIMITER
CERAMIC FILTER CF201, 202
FM I-F AMPLIFIER Q201
CERAMIC FILTER CF203, 204
FM I-F AMPLIFIER Q202
D201 D202
D205 D206
D203 D204
SCA TRAP L203, C220
RATIO DETECTOR D207, D208
FM I-F AMPLIFIER Q206
FM I-F AMPLIFIER Q205
FM I-F AMPLIFIER Q203, 204
CERAMIC FILTER CF205, 206
MUTING CIRCUIT
MUTING SW
MUTING SWITCH Q207
S7
MUTING SWITCH Q209, Q210
VOLTAGE DOUBLER D211, D212
I-F AMPLIFIER Q208
MPX Section
19 kHz AMPLIFIER Q401
FREQUENCY DOUBLER D401, D402
38 kHz AMPLIFIER Q402
DIODE BRIDGE D405, 406 D407, 408
S10
PRE-AMPLIFIER Q404, 406
PRE-AMPLIFIER Q405, 407
LPF
To Audio Section
TUNING METER
M901
STEREO LAMP SWITCHING Q403
S10 DE-EMPHASIS CHANGEOVER SW
AM MIXER Q301
AM CERAMIC FILTER CFT301
AM I-F AMPLIFIER Q303
AM I-F AMPLIFIER Q304
DETECTOR D302
To Audio Section
AM OSCILLATOR Q305
DC AMPLIFIER Q302
RECTIFIER D301
A-m Cp I-f Section

Stage/Control	*Function*
	and D815. The base voltage of Q709 is also shorted to ground through R719, D812, the SCR, and D816, stopping any current flow in the output stage and thus protecting the speaker system. Note that the direction of diodes D812, SCR D813 and D814 which also ensure the speaker protection operation even if one of the power transistors is damaged by accident, forcing the other power transistor into secondary breakdown.

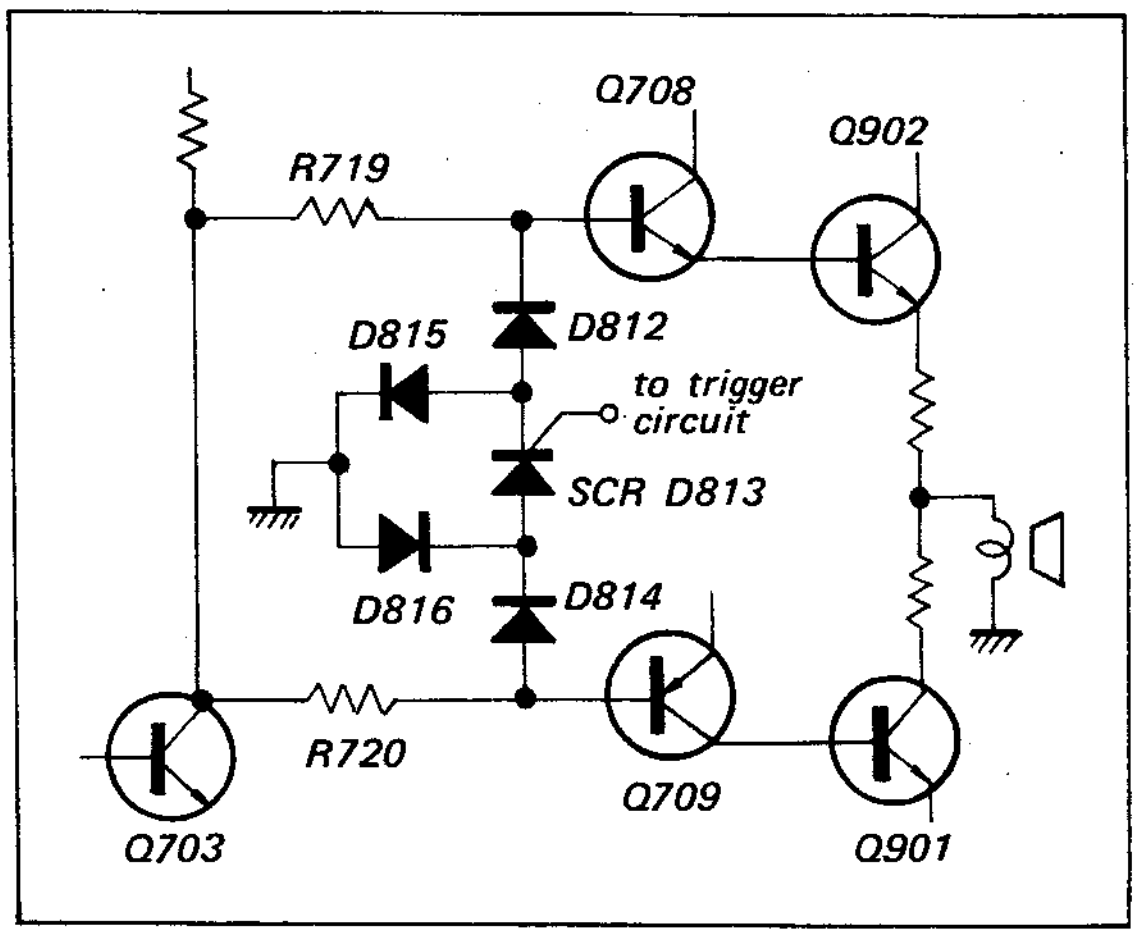
Q708
Q902
R719
D815
D812
to trigger circuit
SCR D813
D816
D814
R720
Q709
Q703
Q901

Fig. 1-4 Speaker protection circuit

1-5. BLOCK DIAGRAM – Audio Section –

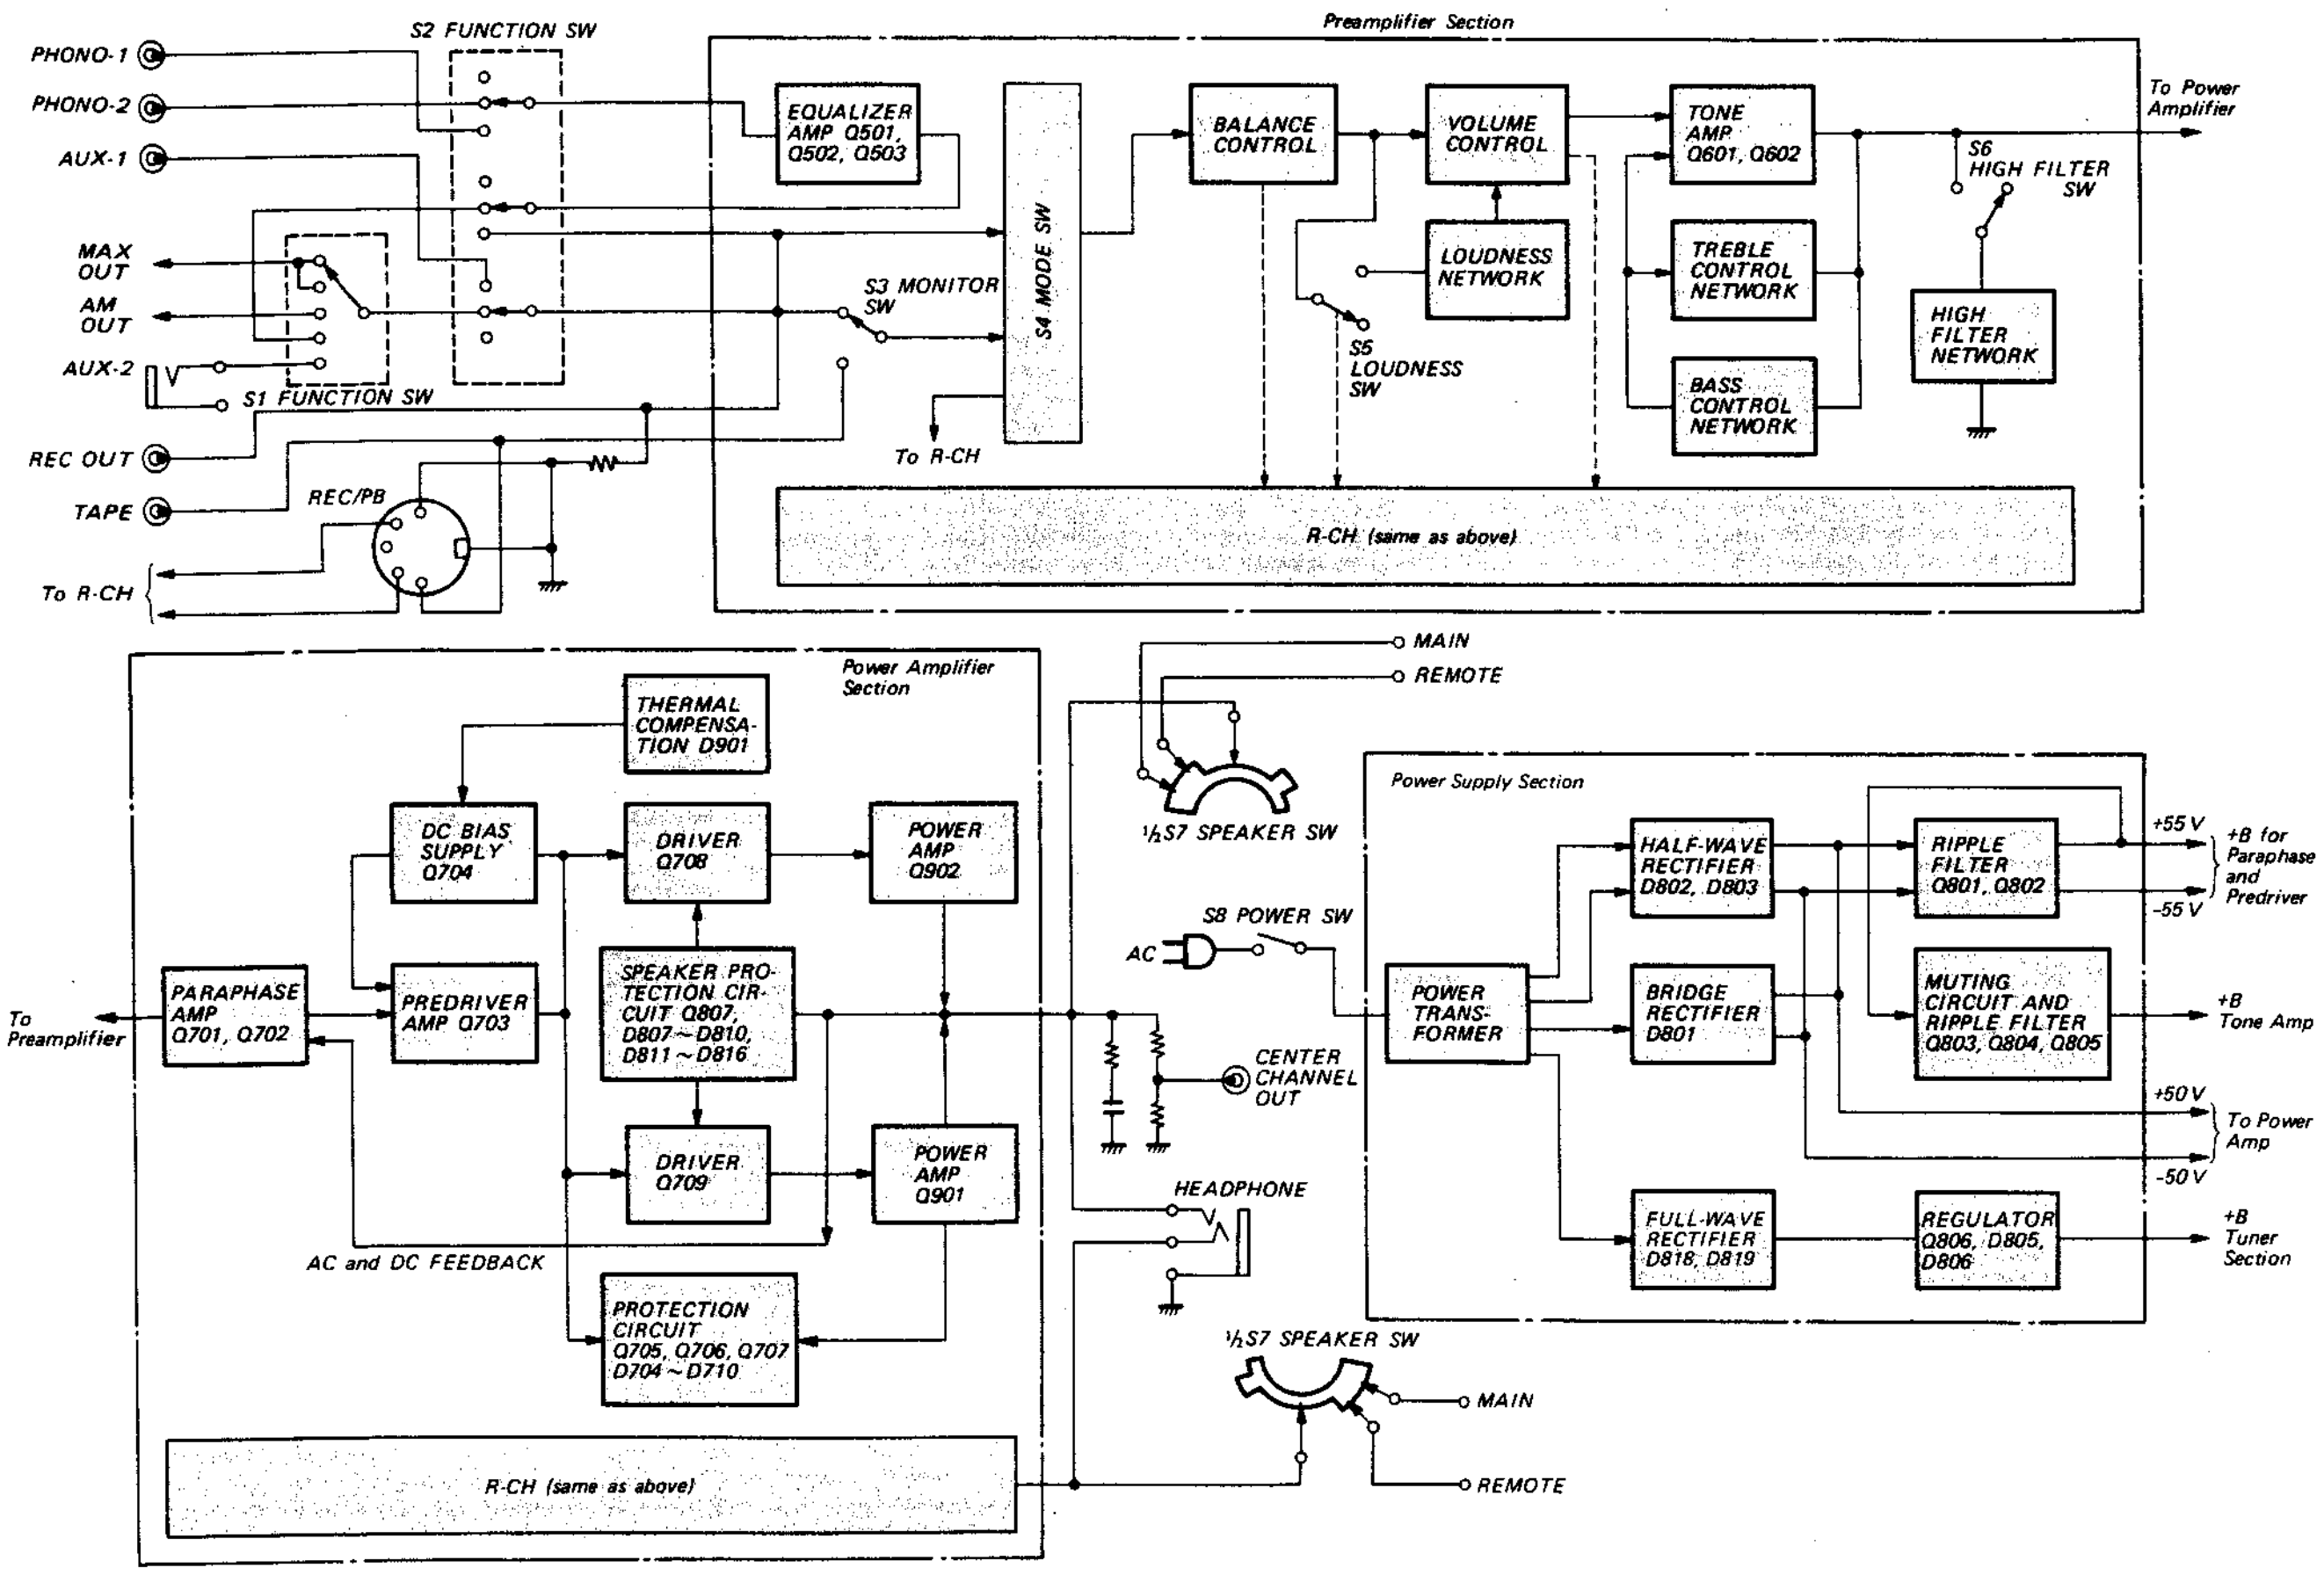
PHONO-1
PHONO-2
AUX-1
MAX OUT
AM OUT
AUX-2
REC OUT
TAPE
To R-CH
S2 FUNCTION SW
S1 FUNCTION SW
REC/PB
Preamplifier Section
EQUALIZER AMP Q501, Q502, Q503
S4 MODE SW
S3 MONITOR SW
To R-CH
BALANCE CONTROL
VOLUME CONTROL
LOUDNESS NETWORK
S5 LOUDNESS SW
TONE AMP Q601, Q602
TREBLE CONTROL NETWORK
BASS CONTROL NETWORK
S6 HIGH FILTER SW
HIGH FILTER NETWORK
To Power Amplifier
R-CH (same as above)
Power Amplifier Section
THERMAL COMPENSA-TION D901
DC BIAS SUPPLY Q704
DRIVER Q708
POWER AMP Q902
To Preamplifier
PARAPHASE AMP Q701, Q702
PREDRIVER AMP Q703
SPEAKER PRO-TECTION CIR-CUIT Q807, D807～D810, D811～D816
DRIVER Q709
POWER AMP Q901
AC and DC FEEDBACK
PROTECTION CIRCUIT Q705, Q706, Q707 D704～D710
R-CH (same as above)
MAIN
REMOTE
½S7 SPEAKER SW
S8 POWER SW
AC
CENTER CHANNEL OUT
HEADPHONE
½S7 SPEAKER SW
MAIN
REMOTE
Power Supply Section
POWER TRANS-FORMER
HALF-WAVE RECTIFIER D802, D803
BRIDGE RECTIFIER D801
FULL-WAVE RECTIFIER D818, D819
RIPPLE FILTER Q801, Q802
MUTING CIRCUIT AND RIPPLE FILTER Q803, Q804, Q805
REGULATOR Q806, D805, D806
+55 V
-55 V
+B for Paraphase and Predriver
+B Tone Amp
+50 V
-50 V
To Power Amp
+B Tuner Section

SECTION 2
DISASSEMBLY AND REPLACEMENT PROCEDURES

WARNING

Unplug the ac power cord before starting any disassembly or replacement procedures.

2-1. TOOLS REQUIRED

The following tools are required to perform disassembly and replacement procedures on the STR-6065.

1. Screwdriver, Phillips-head
2. Screwdriver, ⅛" blade (3 mm)
3. Pliers, long-nose
4. Diagonal cutters
5. Wrench, adjustable
6. Tweezers
7. Electric drill
8. Drill bits
9. Prick punch
10. Hammer, ball-peen
11. Soldering iron, 40 ~ 150 watts
12. Solder, rosin core
13. Cement solvent
14. Cement, contact
15. Thermal compound or silicone grease

2-2. HARDWARE IDENTIFICATION GUIDE

The following chart will help you to decipher the hardware codes given in this service manual.

Note: All screws in the STR-6065 are manufactured to the specifications of the International Organization for Standardization (ISO). This means that the new and old screws are not interchangeable because ISO screws have a different number of threads per mm compared to the old ones. The ISO screws have an identification mark on their heads as shown in Fig. 2-1.

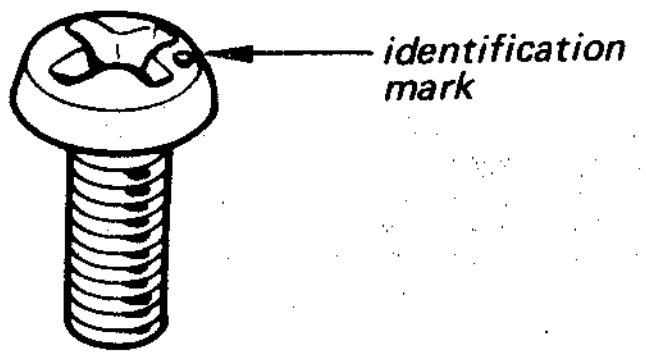

Fig. 2-1. ISO screw

Hardware Nomenclature

P	– Pan Head Screw	⊕	
PS	– Pan Head Screw with Spring Washer	⊕	
K	– Flat Countersunk Head Screw	⊕	
B	– Binding Head Screw	⊕	
RK	– Oval Countersunk Head Screw	⊕	
T	– Truss Head Screw	⊕	
R	– Round Head Screw	⊕	
F	– Flat Fillister Head Screw	⊖	
SC	– Set Screw	⊖	
E	– Retaining Ring (E Washer)		



W – Washer
SW – Spring Washer
LW – Lock Washer
N – Nut

– **Example** –

Type of Slot
⊕ P 3x10
Length in mm (L)
Diameter in mm (D)
Type of Head



2-3. TOP COVER AND BOTTOM PLATE REMOVAL

1. Remove the two machine screws at each side of the receiver, and lift off the top cover.
2. Remove the ten self-tapping screws (⊕B 3x6) at the bottom of the receiver as shown in Fig. 2-2. This frees the bottom plate.

2-4. FRONT PANEL REMOVAL

1. Remove the top cover as described in Procedure 2-3.
2. Pull all the knobs off.

3. Remove the two self-tapping screws (⊕B 3x6) and two hex-nuts securing the front panel to the front sub-chassis as shown in Fig. 2-3. Place a piece of cardboard or cloth between the wrench and front panel to avoid marring the panel as shown in Fig. 2-4. Now the front panel is free for servicing.

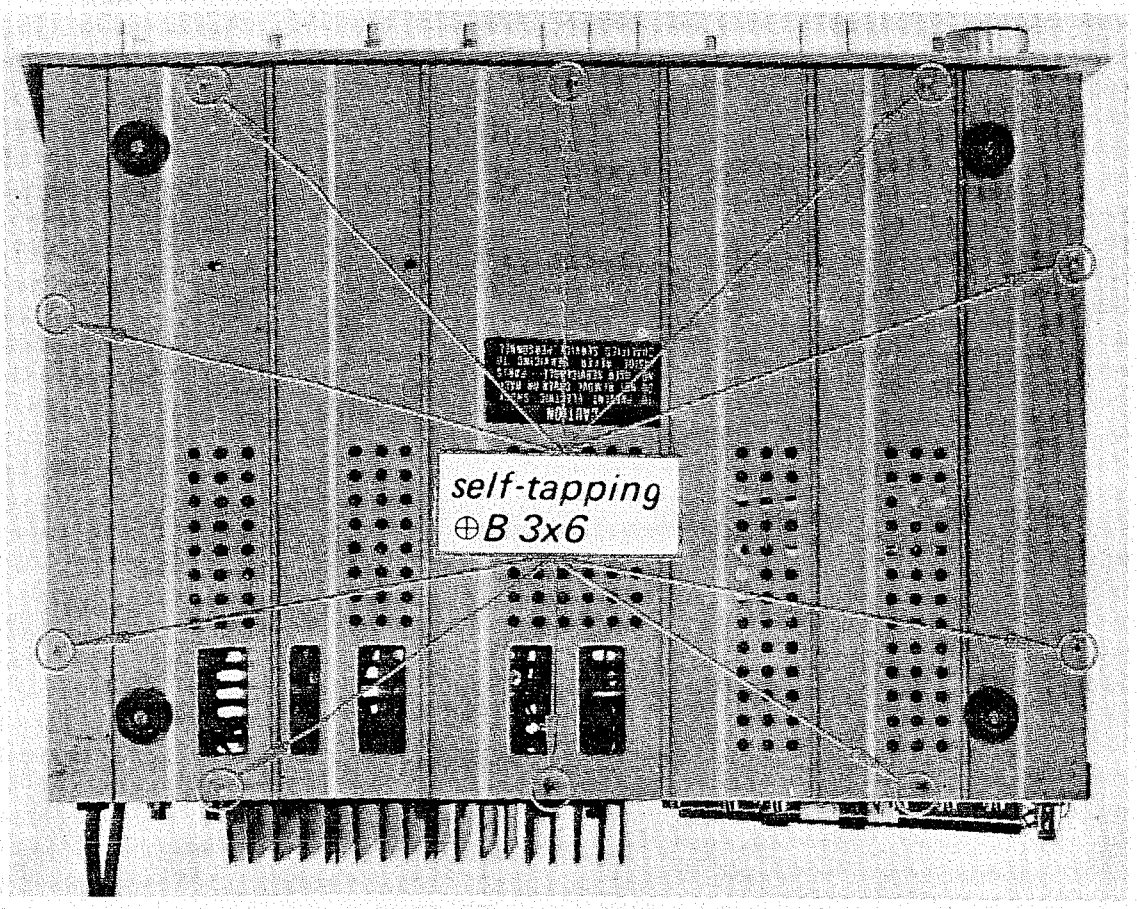

Fig. 2-2. Bottom plate removal

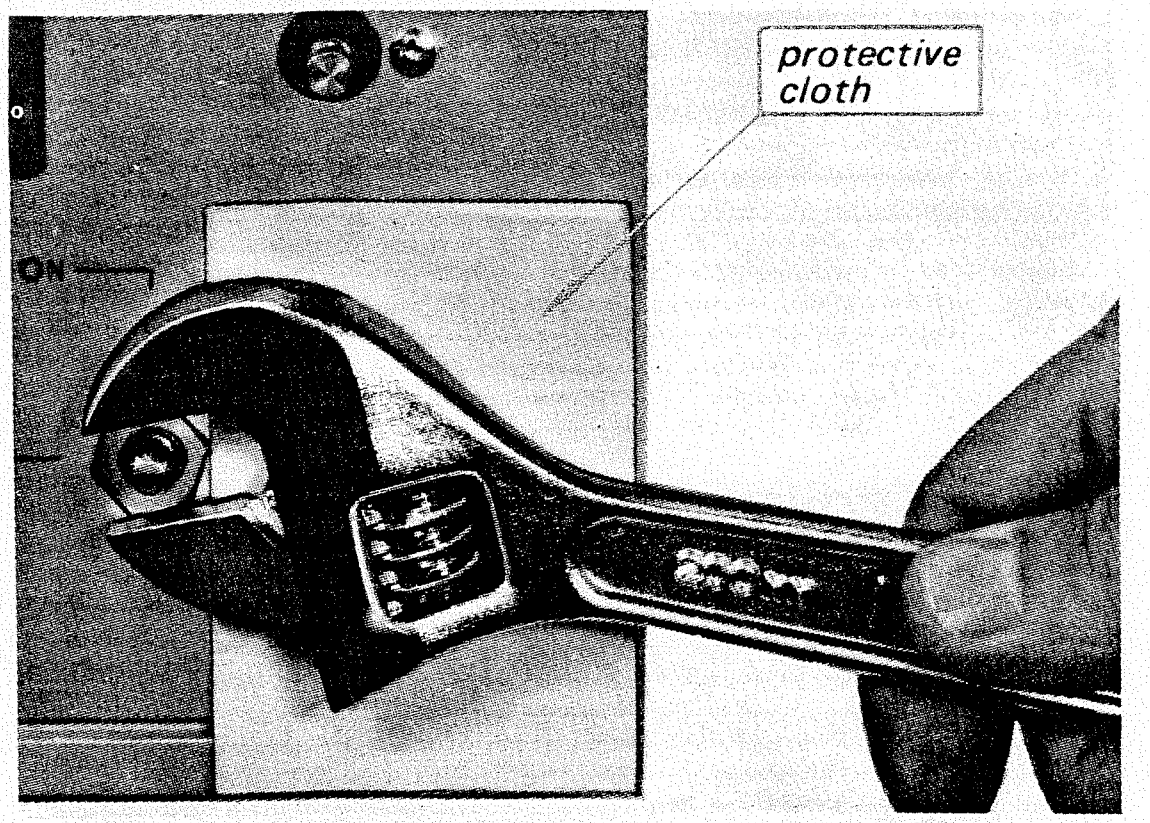

Fig. 2-4. Hex nut removal

2-5. DIAL-CORD RESTRINGING

Preparation

1. Remove the top cover as described in Procedure 2-3.
2. Cut a 1,500 mm (59") length of dial cord.
3. Tie the end of the cord to a spring as shown in Fig. 2-5.
4. Rotate the tuning-capacitor drive drum fully clockwise (minimum capacitance position).

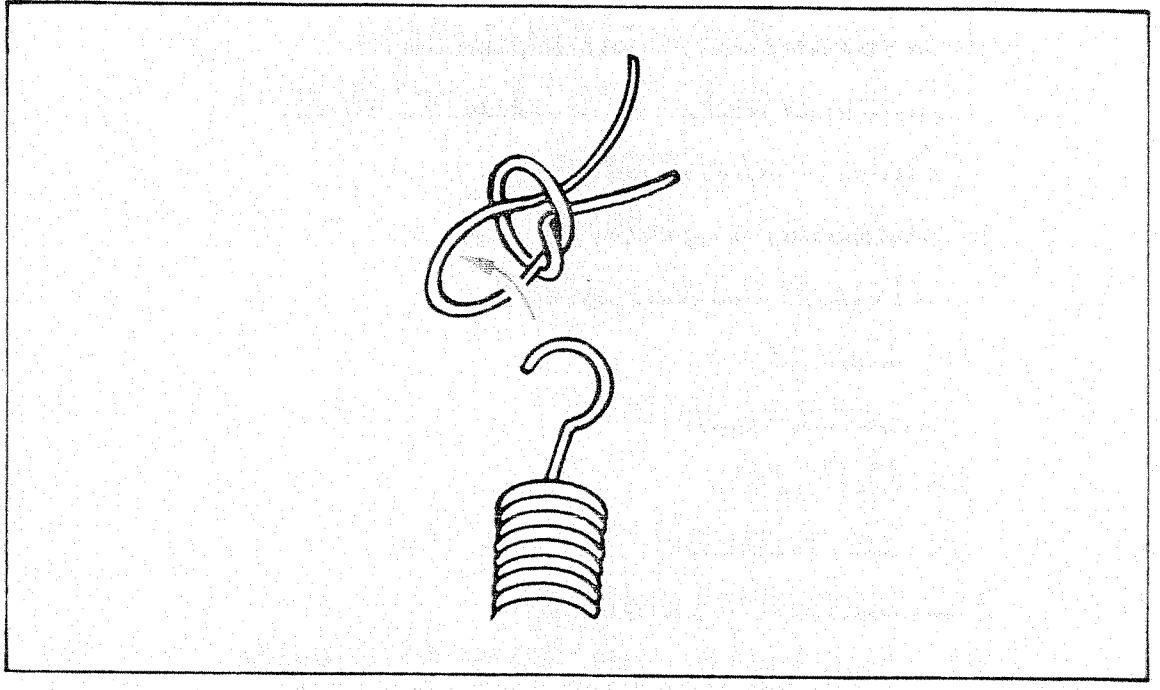

Fig. 2-5. Tying square knot to the coil spring

Procedure

While referring to Fig. 2-6, proceed as follows:

1. Hook the spring to one hole of the drive drum as shown in Fig. 2-7.
2. Run the cord through the slot in the rim of the drum and wrap a half clockwise turn in the inner groove.
3. Run the cord over pulley "A", and then wrap two counterclockwise turns around the tuning shaft.

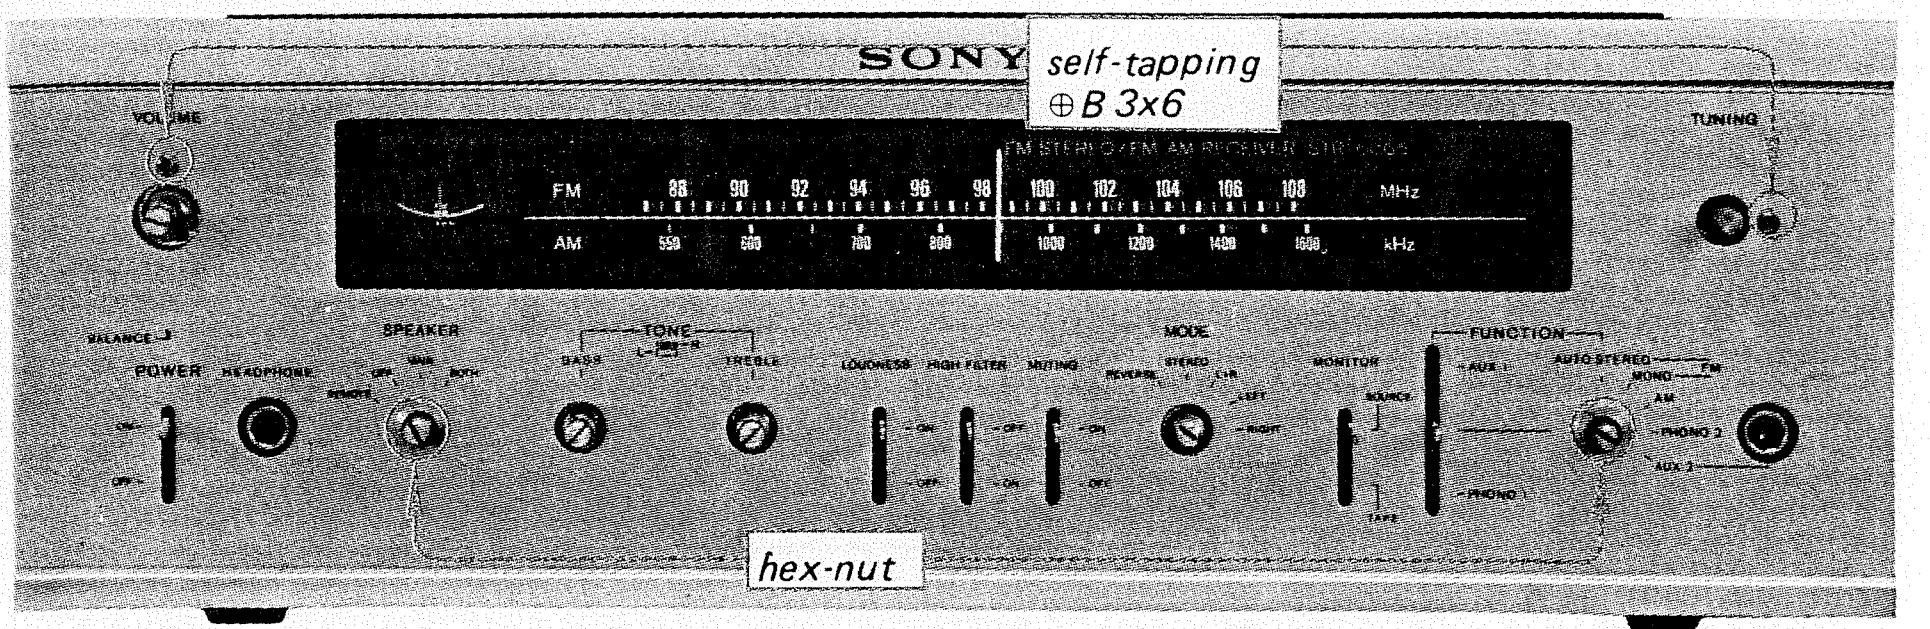

Fig. 2-3. Front panel removal

4. Run the cord over pulleys "B", "C" and "D", then wrap two clockwise turns around the drum from outer groove to inner groove as shown in Fig. 2-8.
5. Pass the doubled end of the cord through the eyelet, then hook it to the spring as shown in Fig. 2-9.

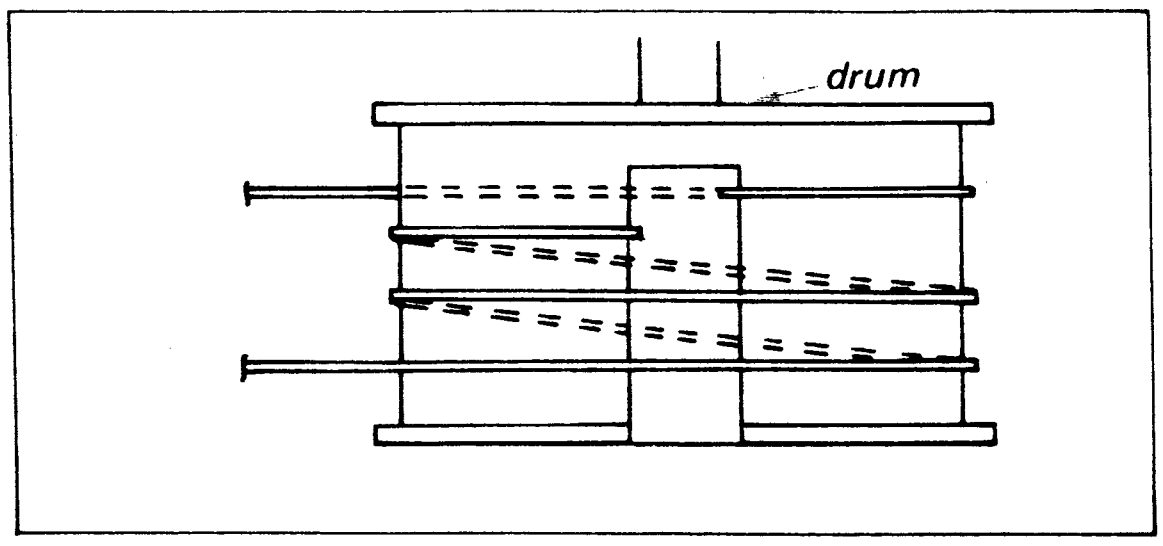

Fig. 2-8. Wrapping the dial cord

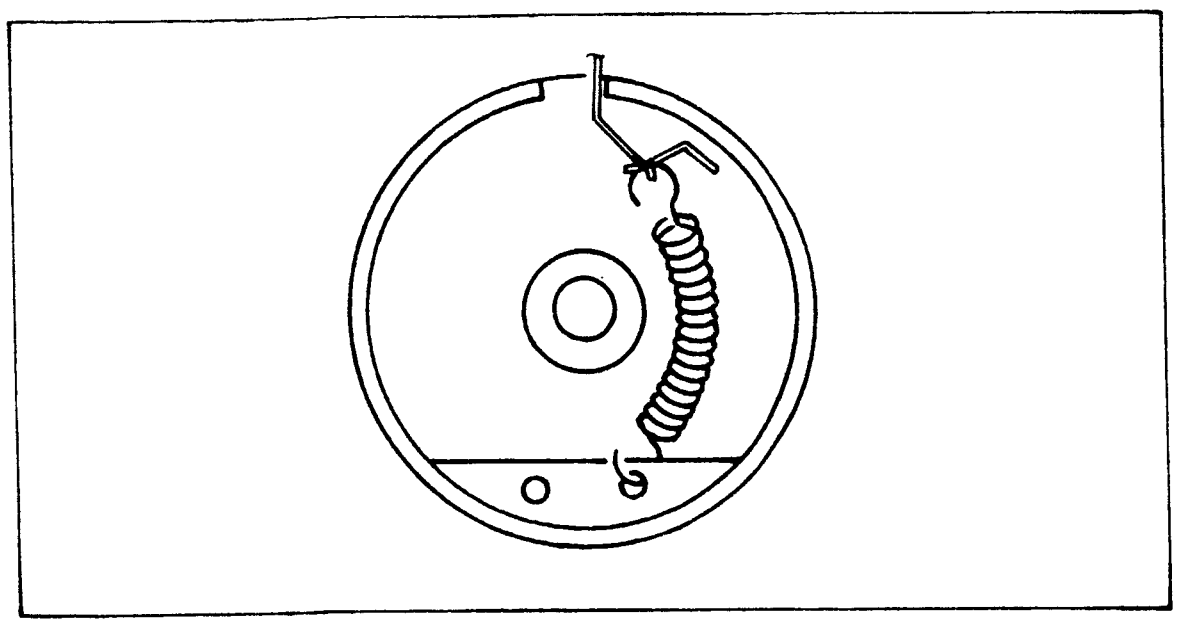

Fig. 2-7. Coil spring installation

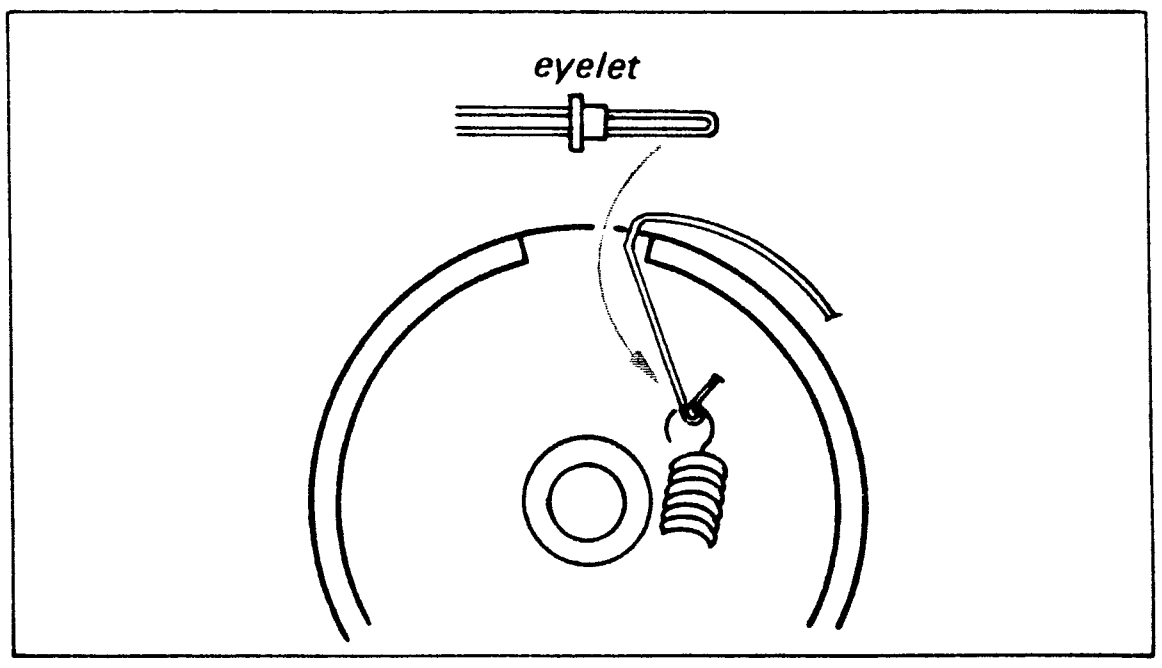

Fig. 2-9. Finishing dial cord stringing

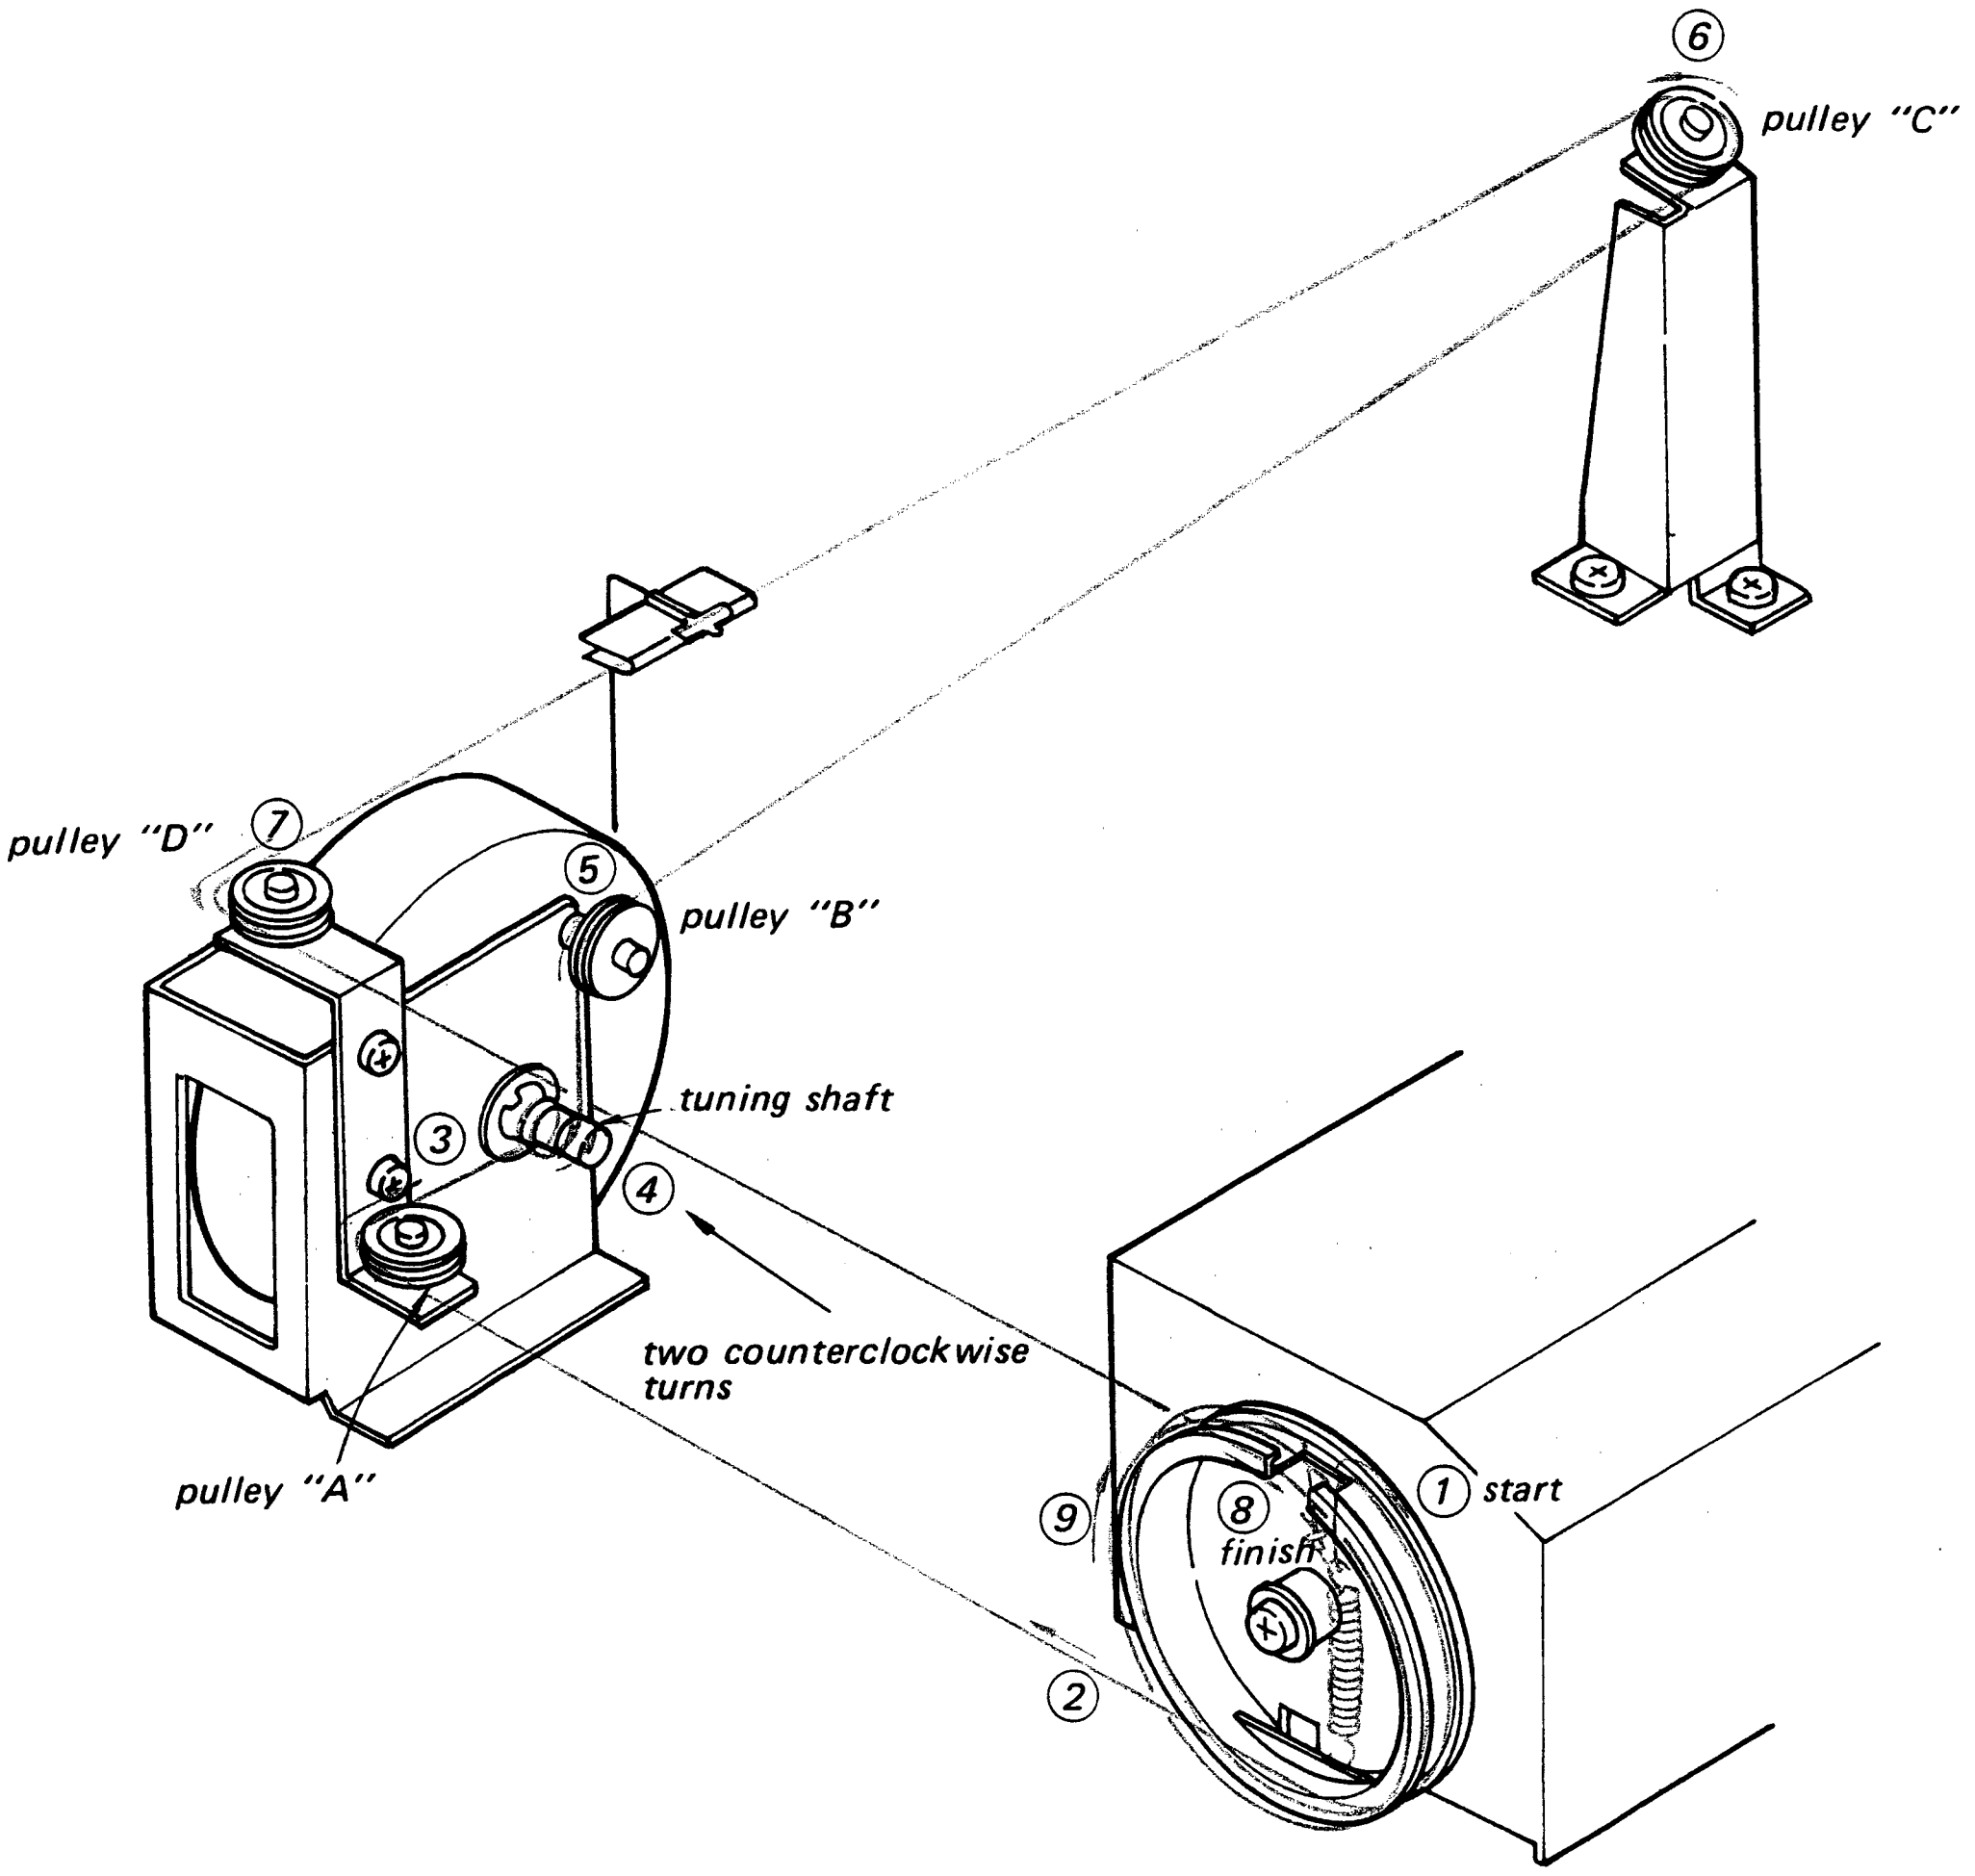
⑥
pulley "C"
pulley "D" ⑦
⑤
pulley "B"
tuning shaft
③
④
two counterclockwise turns
pulley "A"
⑨
⑧
finish
① start
②

Fig. 2-6. Dial cord stringing

6. Tighten the cord, then squeeze the eyelet so that the spring is under tension. Make a knot in the cord end to keep it from slipping out of the eyelet.
7. After completing the dial-cord stringing, make sure that the tuning system works properly. Apply a drop of contact cement to the finish point.

2-6. MECHANICAL DIAL CALIBRATION

Note: This is required after replacing the dial cord, dial scale or front-end assembly.

1. Put the dial pointer on the cord as shown in Fig. 2-10 and move it to a position where the pointer coincides with the left gap on the dial scale as shown in Fig. 2-11, when the tuning capacitor is set to the maximum capacitance.
2. Apply a drop of contact cement to the tab of the dial pointer.

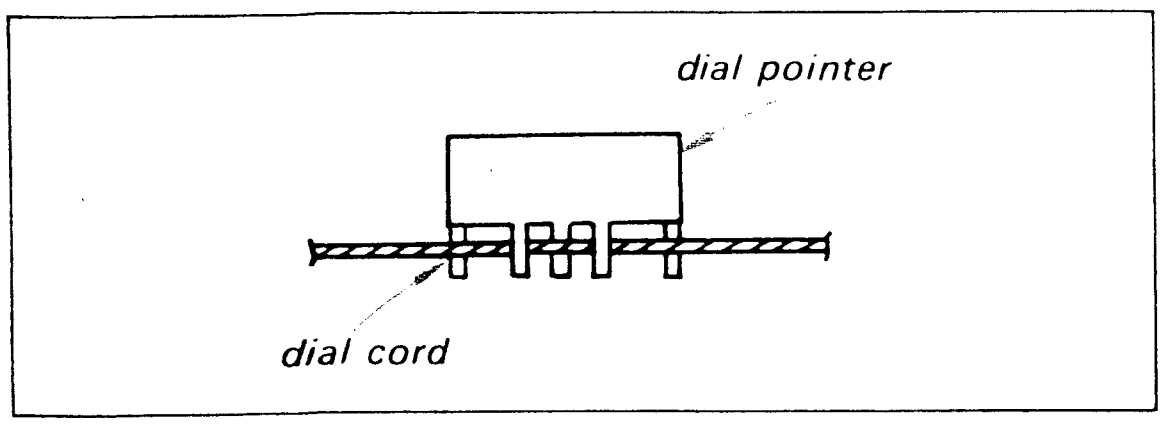

Fig. 2-10. Dial pointer installation

2-7. DIAL SCALE REPLACEMENT

1. Remove the top cover as described in Procedure 2-3.
2. Remove the front panel as described in Procedure 2-4.
3. Remove the two self-tapping screws (⊕B 3x6) securing the dial-scale holder to the front sub-chassis as shown in Fig. 2-12.
4. Remove the defective dial scale, and then install the replacement scale.

2-8. PILOT-LAMP REPLACEMENT

Prepare for replacement any of the pilot lamps by removing the top cover as described in Procedure 2-3.

Meter Lamp

1. Straighten the tab of the meter-lamp holder to permit the removal of the meter-lamp socket.
2. Pull out the meter-lamp socket, and then unscrew the lamp from the socket and install the new lamp.

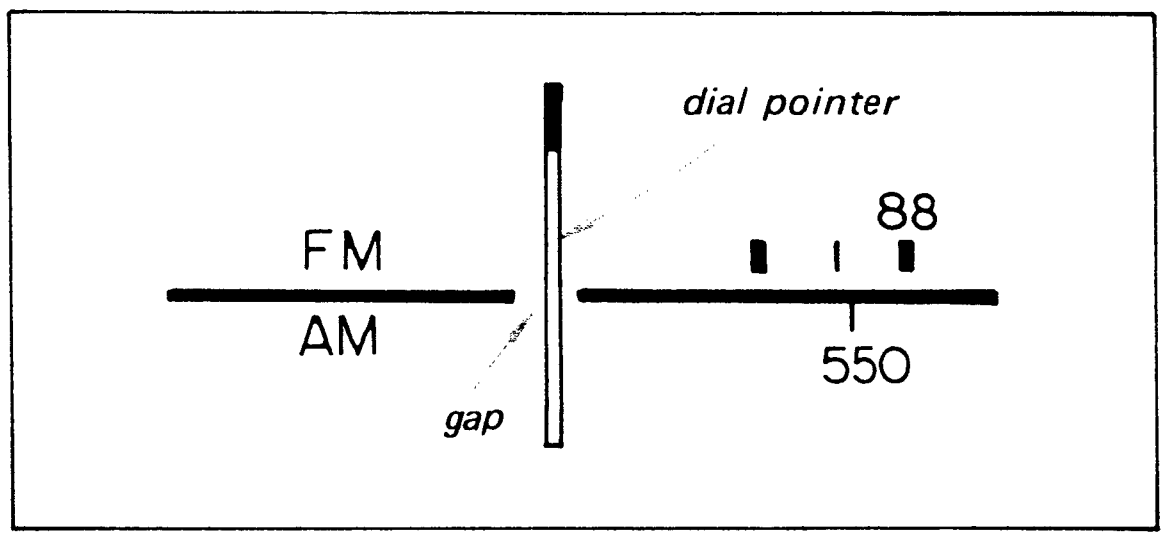

Fig. 2-11. Mechanical dial calibration

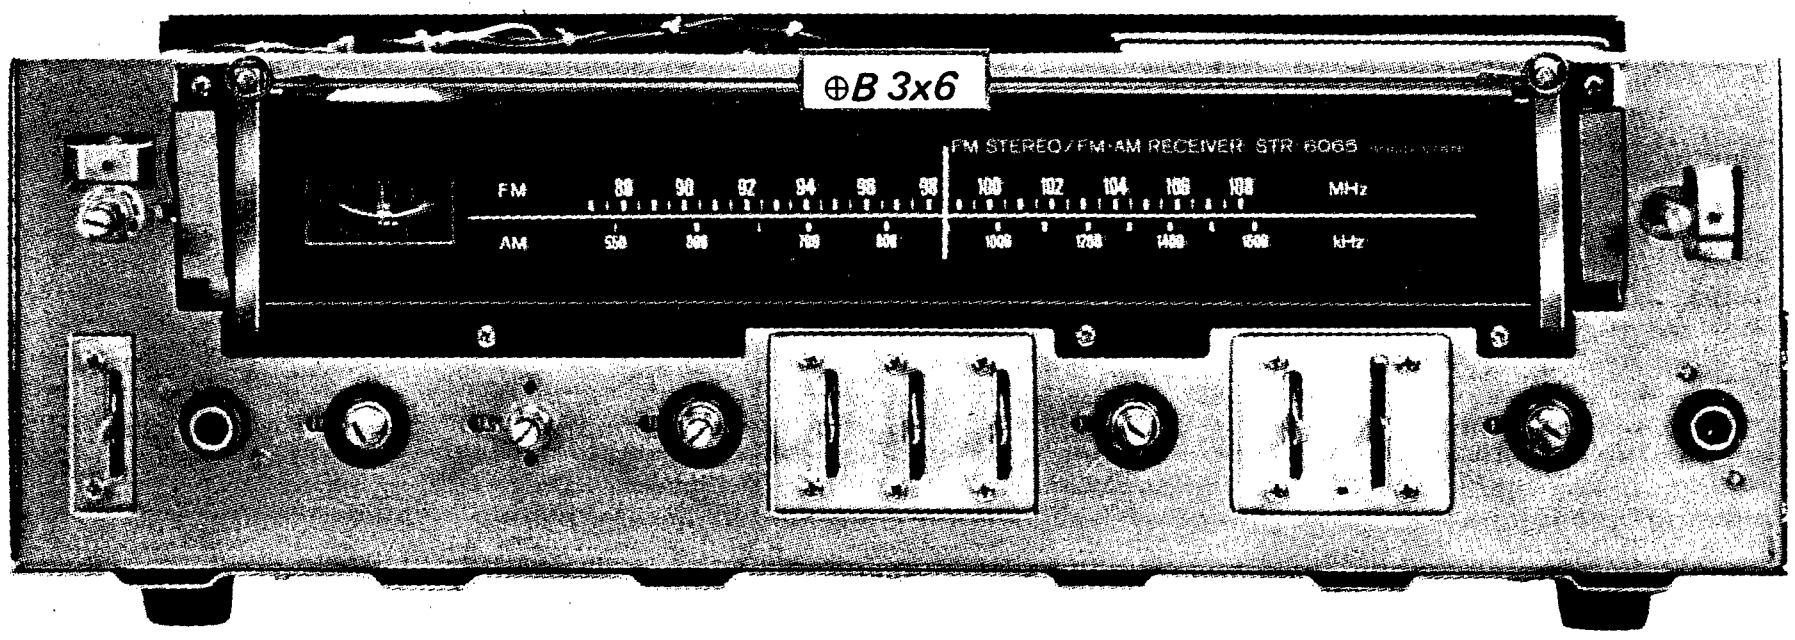

Fig. 2-12. Dial scale removal

Stereo Lamp

1. Pull the lamp and rubber grommet from its holder with tweezers as shown in Fig. 2-13.
2. Cut the lamp leads and solder the lead wires to the new lamp as shown in Fig. 2-14.
3. Wrap the soldered connections with electrical tape.
4. Install the new lamp in its holder.

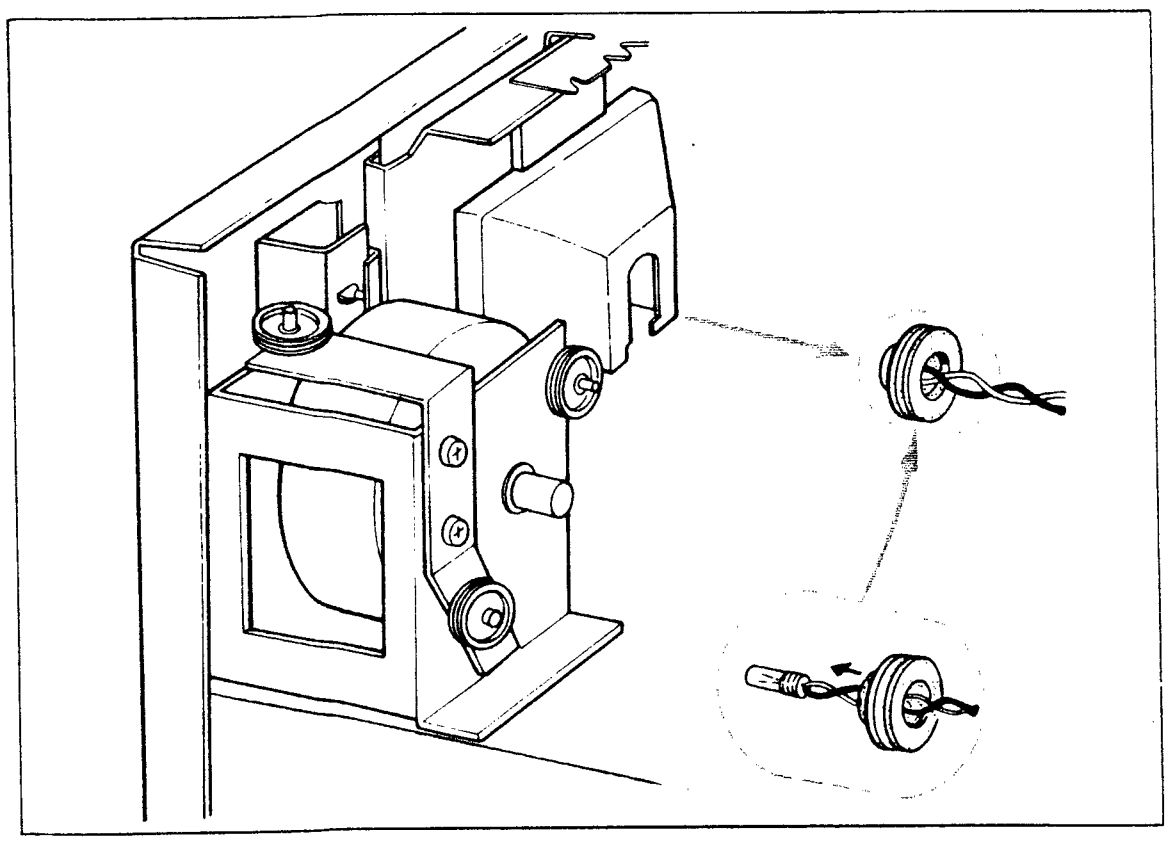

Fig. 2-13. Stereo lamp removal

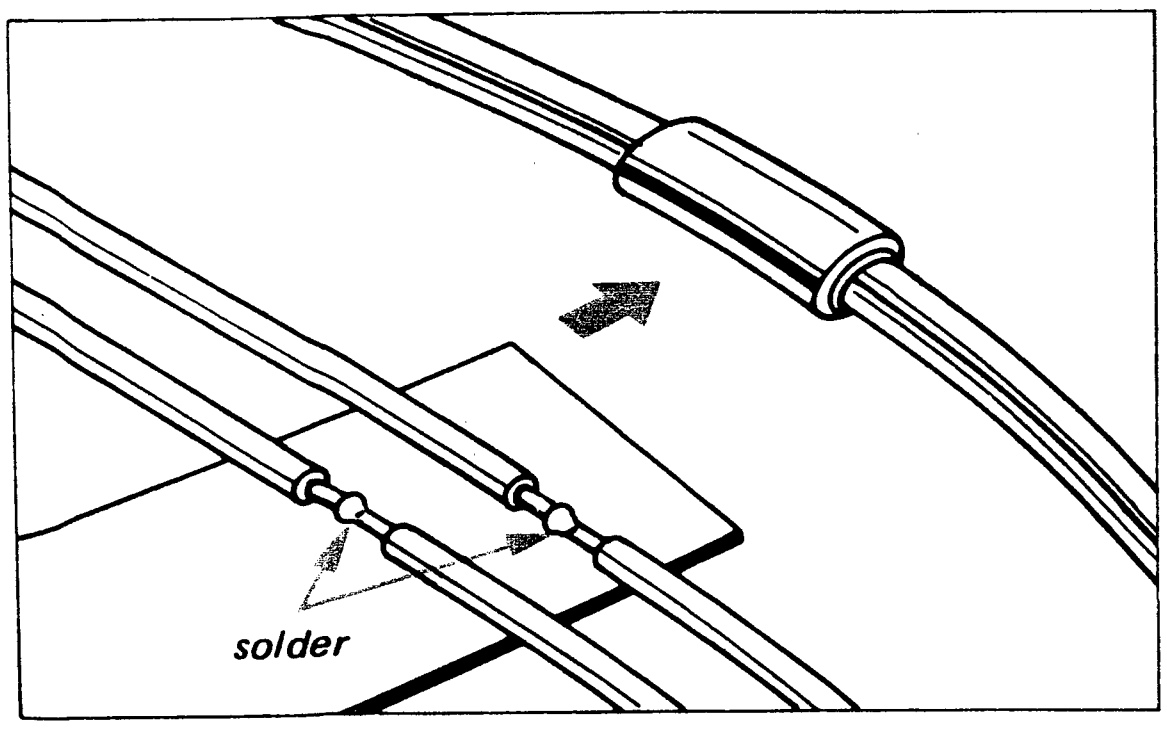

Fig. 2-14. Stereo lamp replacement

Dial Lamp

1. Remove the front panel as described in Procedure 2-4.
2. Pry out the fiber lamp shade, and then remove the lamp.

2-9. TUNING METER REPLACEMENT

1. Remove the top cover as described in Procedure 2-3.
2. Unsolder the leads from the defective meter.
3. Remove the two self-tapping screws (⊕B 3x6) securing the meter holder to the chassis as shown in Fig. 2-15.
4. Remove the meter, and install the new one.

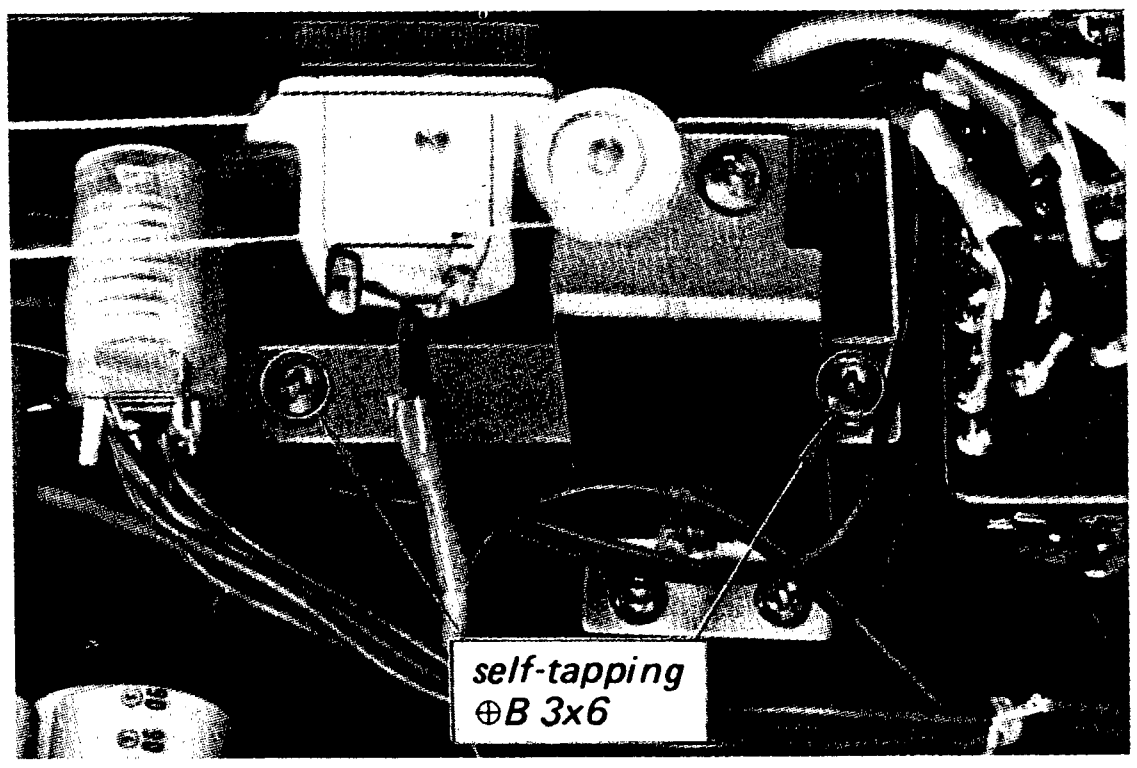

Fig. 2-15. Meter holder replacement

2-10. CONTROL AND SWITCH REPLACEMENT

Prepare for replacing any of the controls or switches by removing the wooden case as described in Procedures 2-3 and 2-4. Refer to Fig. 2-16.

TONE Controls

1. Apply a drop of cement solvent to the ring spacer on the TREBLE control. Wait a few seconds for the cement to dissolve, and pry out the spacer with a screw driver.
2. Remove the hex nuts that secure the BASS and TREBLE controls to the front-subchassis.
3. Carefully remove them along with the tone-control circuit board.
4. Cut each lug of the defective control on the board to remove the part.
5. Unsolder and remove the clipped lugs, and clean out the holes of the circuit board.
6. Install the replacement control.

POWER, HIGH FILTER, MUTING, MONITOR, FUNCTION (2), LOUDNESS Switches

1. Remove the two screws (⊕PS 3x6) securing switches to the front subchassis as shown in Fig. 2-16.
2. Unsolder the lead wires from the defective switch, and then install the replacement switch.

SPEAKER, MODE, FUNCTION (1) Switches

1. Apply a drop of cement solvent to the ring spacer on the switches. Wait a few seconds for the cement to dissolve, and pry out the spacer with a screw driver.
2. Remove the hex nuts that secure the switches to the front-subchassis as shown in Fig. 2-16.
3. Unsolder the lead wires from the defective switch, and then install the replacement switch.

2-11. REAR PANEL REMOVAL

1. Remove the top cover and bottom plate as described in Procedure 2-3.
2. Unsolder the lead wire connecting between ground terminal and chassis.
3. Unsolder the coaxial cable from fm antenna terminal.
4. Remove the six self-tapping screws (⊕B 3x6), two of them secure the bar antenna holder to the chassis along with rear panel and others secure the rear panel to the chassis as shown in Fig. 2-17. This frees the rear panel.

2-12. REPLACEMENT OF COMPONENTS SECURED TO THE REAR PANEL BY RIVETS

1. Remove the rear panel as described in Procedure 2-11.
2. Bore out the rivets using a drill bit slightly larger in diameter than the rivet. See Fig. 2-18.
3. Punch out the remainder of the rivet with a nail set or prick punch.
4. Remove the defective component, and install the new one.
5. Secure the new component with a suitable screw and nut, or a repair rivet screw (Part No. 3-701-402).

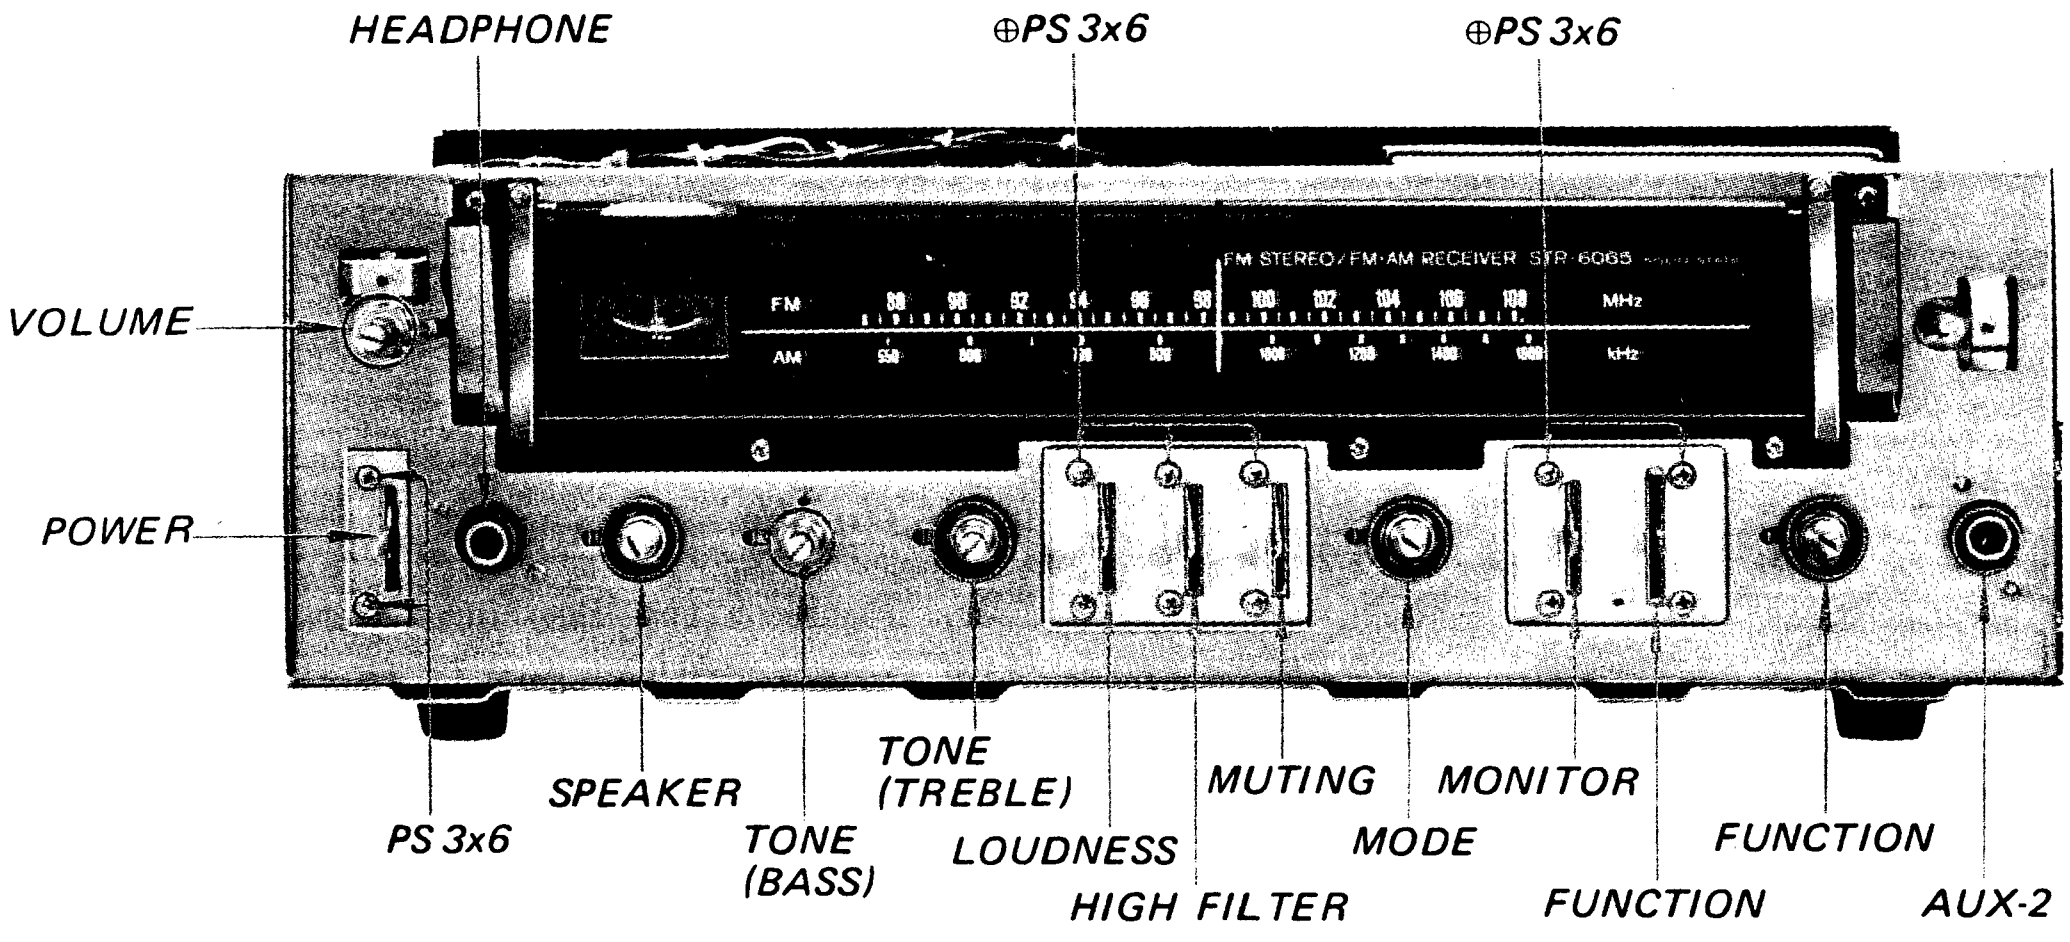
HEADPHONE
⊕PS 3x6
⊕PS 3x6
VOLUME
POWER
FM STEREO/FM-AM RECEIVER STR-6065
FM
AM
MHz
kHz
TONE (TREBLE)
SPEAKER
MUTING
MONITOR
PS 3x6
TONE (BASS)
LOUDNESS
MODE
FUNCTION
HIGH FILTER
FUNCTION
AUX-2

Fig. 2-16. Control and switch replacement

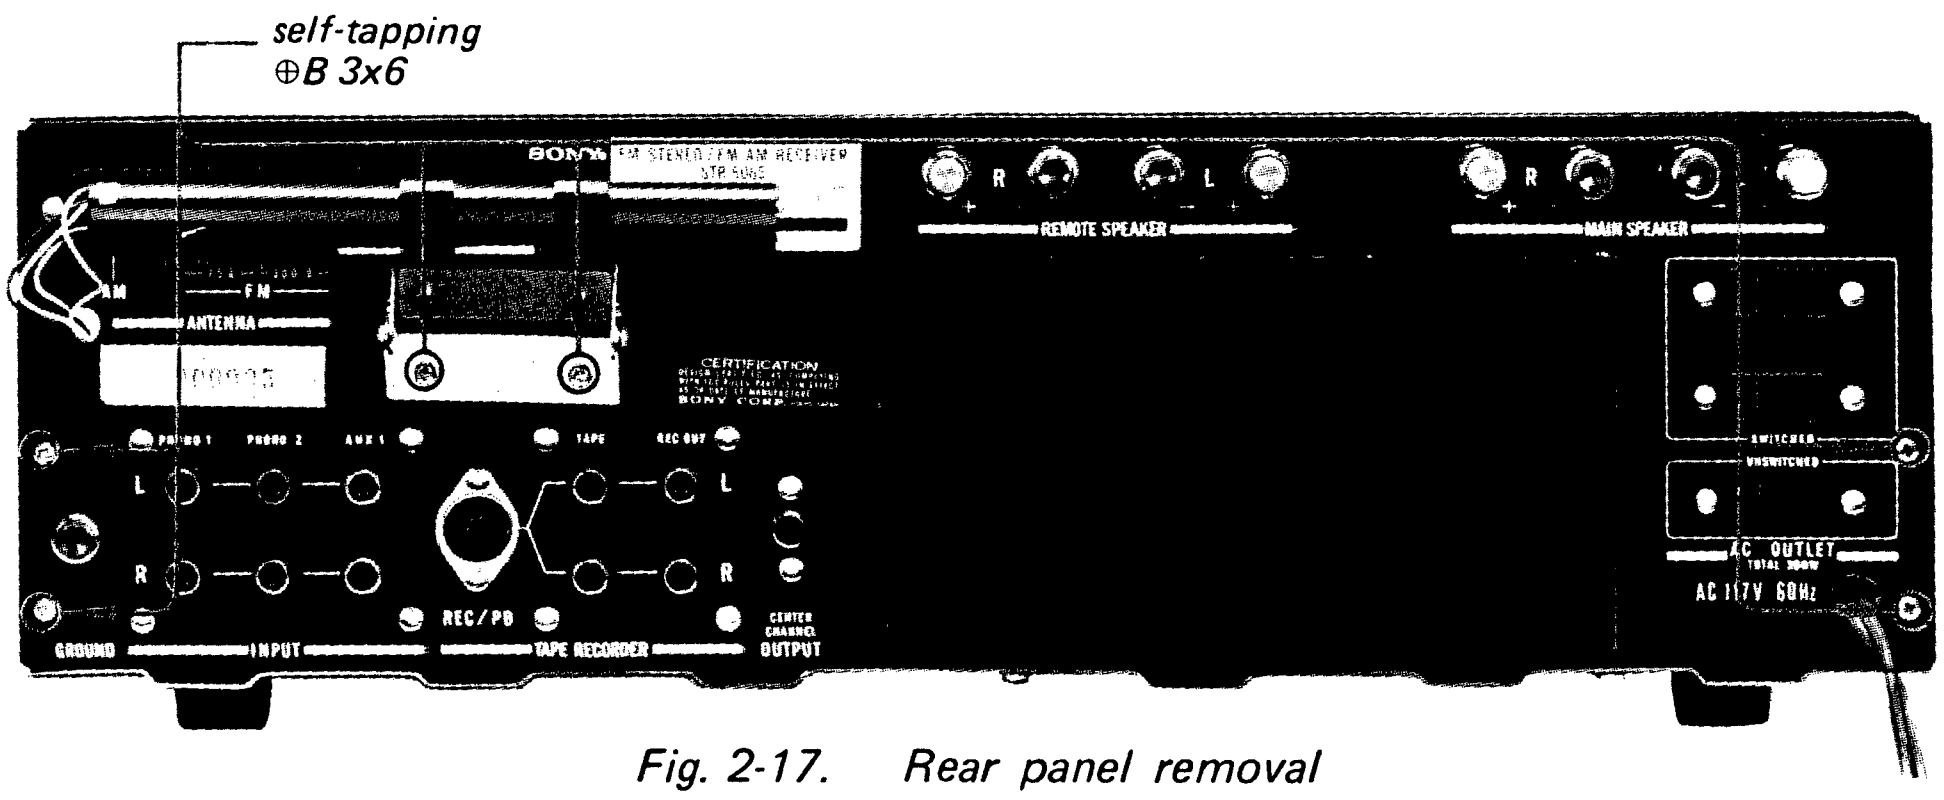
self-tapping
⊕B 3x6
SONY
FM STEREO/FM-AM RECEIVER STR-6065
REMOTE SPEAKER
MAIN SPEAKER
FM
ANTENNA
CERTIFICATION
PHONO 1
PHONO 2
AUX 1
TAPE
REC OUT
L
R
REC/PB
GROUND
INPUT
TAPE RECORDER
CENTER CHANNEL OUTPUT
SWITCHED
UNSWITCHED
AC OUTLET
AC 117V 60Hz

Fig. 2-17. Rear panel removal

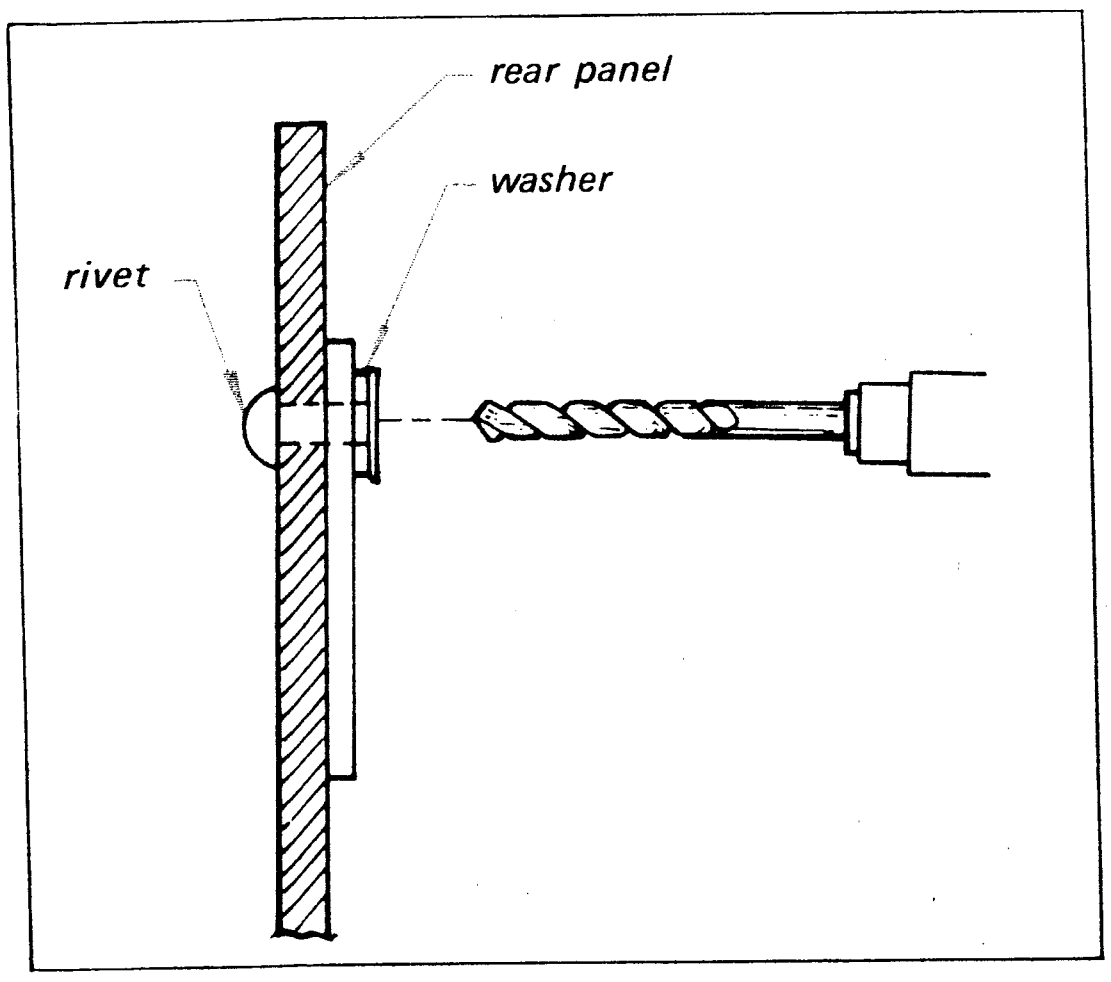

Fig. 2-18. Rivet replacement

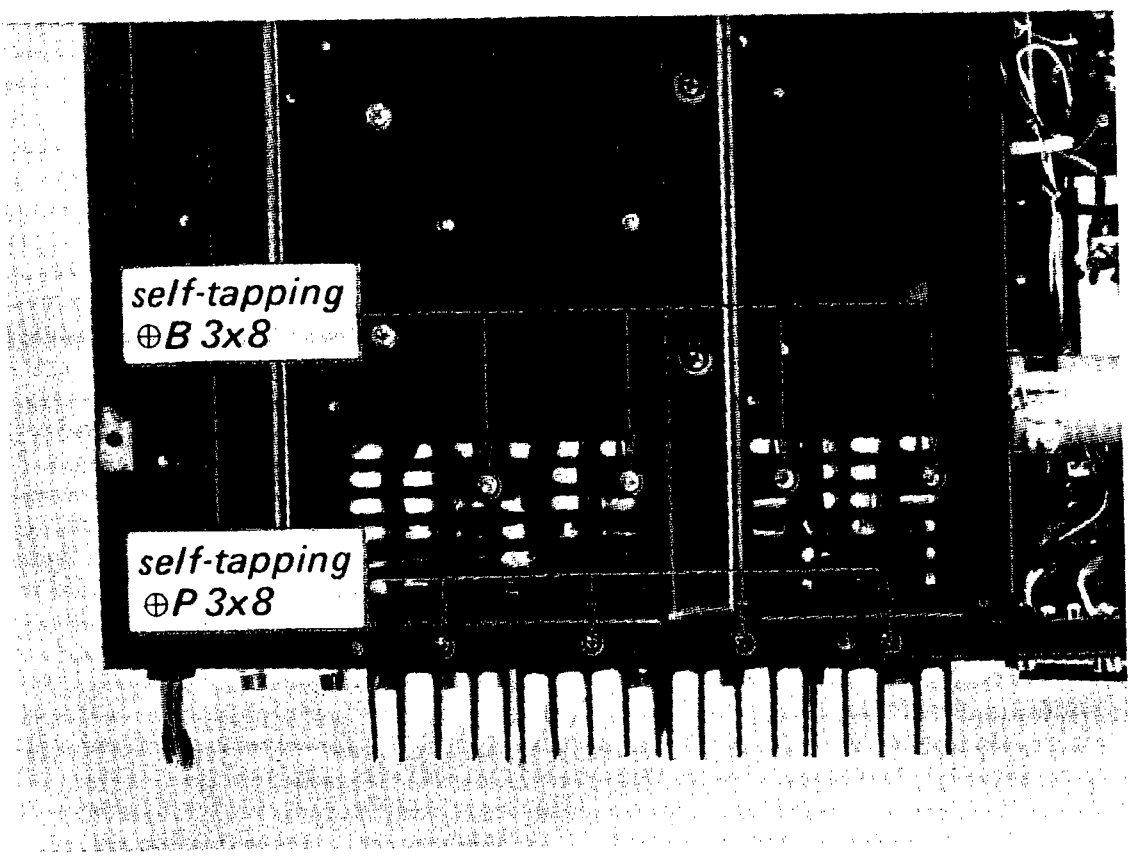

Fig. 2-19. Heat sink removal

2-13. POWER TRANSISTOR REPLACEMENT

1. Remove the top cover and bottom plate as described in Procedure 2-3.
2. Remove the eight self-tapping screws (⊕B 3x8), (⊕P 3x8) securing the heat sink to the chassis as shown in Fig. 2-19, and then remove the four self-tapping screws (⊕B 3x8) securing the heat sink support to the top of the heat sinks.
3. Carefully draw back the heat sink, and then remove the two screws (⊕B 3x14) and nuts securing the power transistor to the heat sink.
4. Cut the emitter and base leads of the defective power transistor with a diagonal cutter. This prevents damage to the mica washer when removing the defective power transistor.
5. When replacing the power transistor, apply a coating of a thermal compound or a heat-transferring grease to both sides of the insulating mica washer. Any excess compound or grease squeezed out when the mounting bolts are tightened should be wiped off with a clean cloth. This prevents accumulation of conductive dust particles that might eventually cause a short.

2-14. CHASSIS LAYOUT

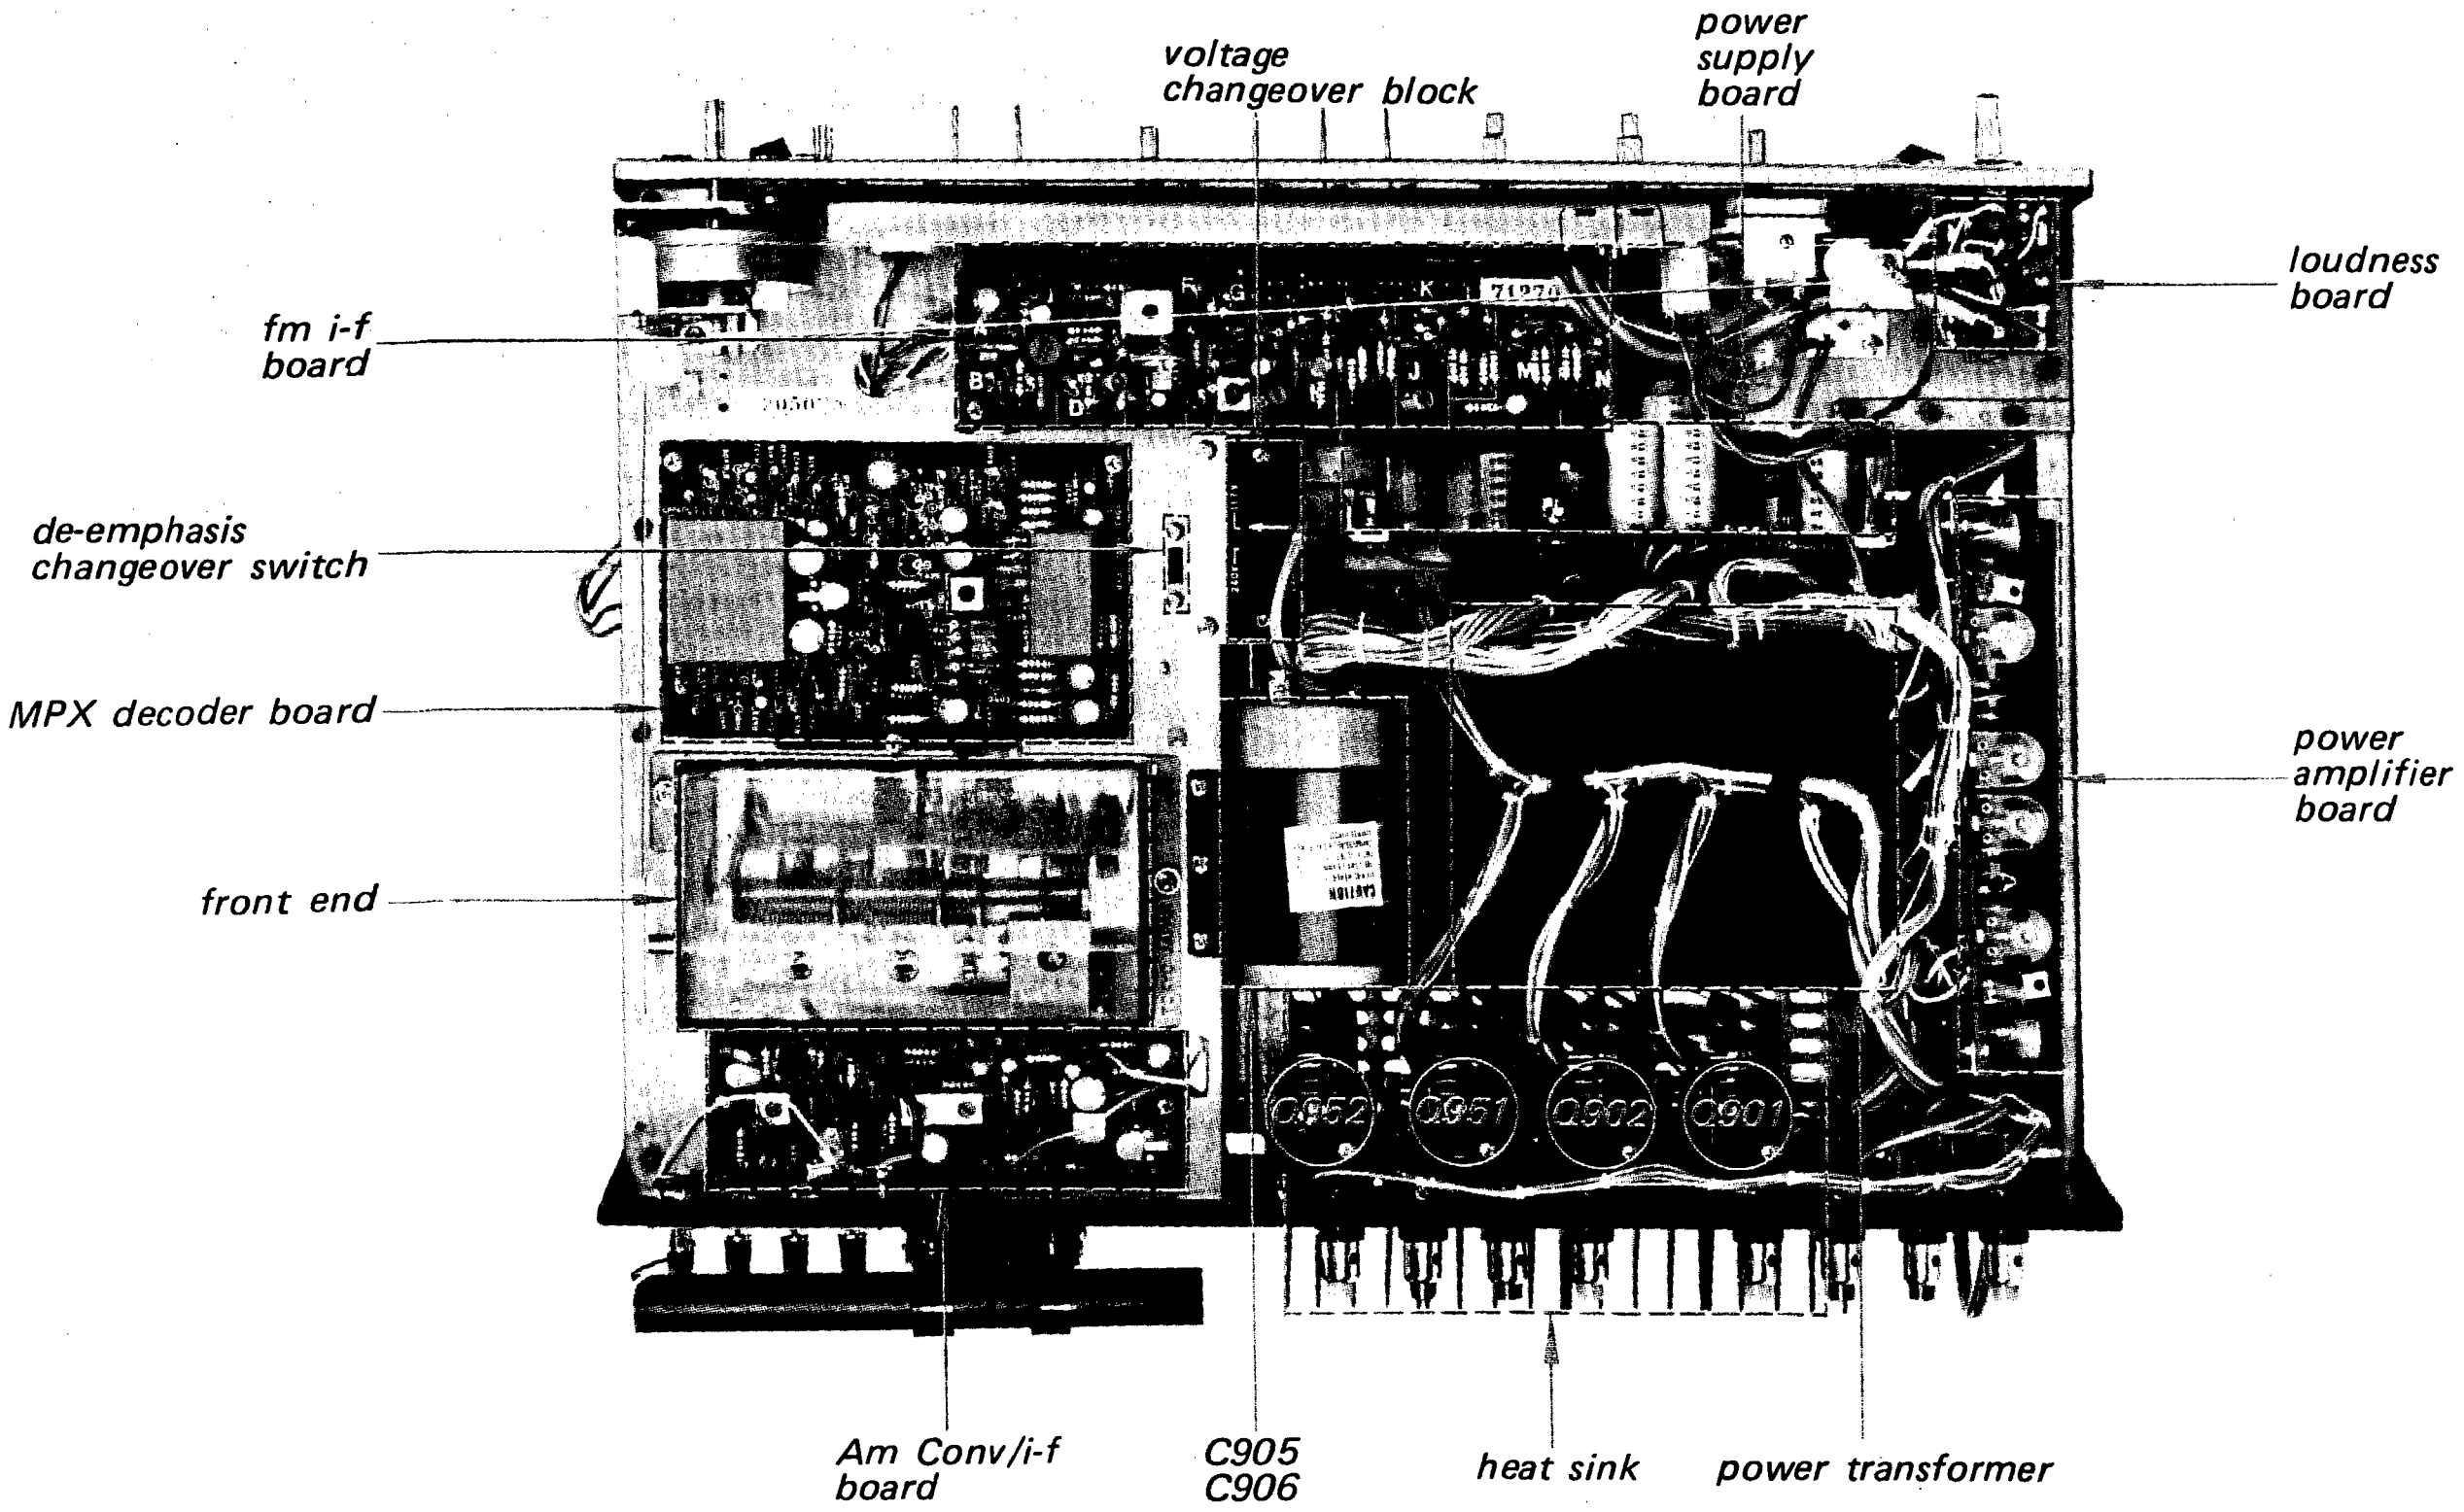
voltage changeover block
power supply board
loudness board
fm i-f board
de-emphasis changeover switch
MPX decoder board
power amplifier board
front end
Q952
Q951
Q902
Q901
Am Conv/i-f board
C905
C906
heat sink
power transformer

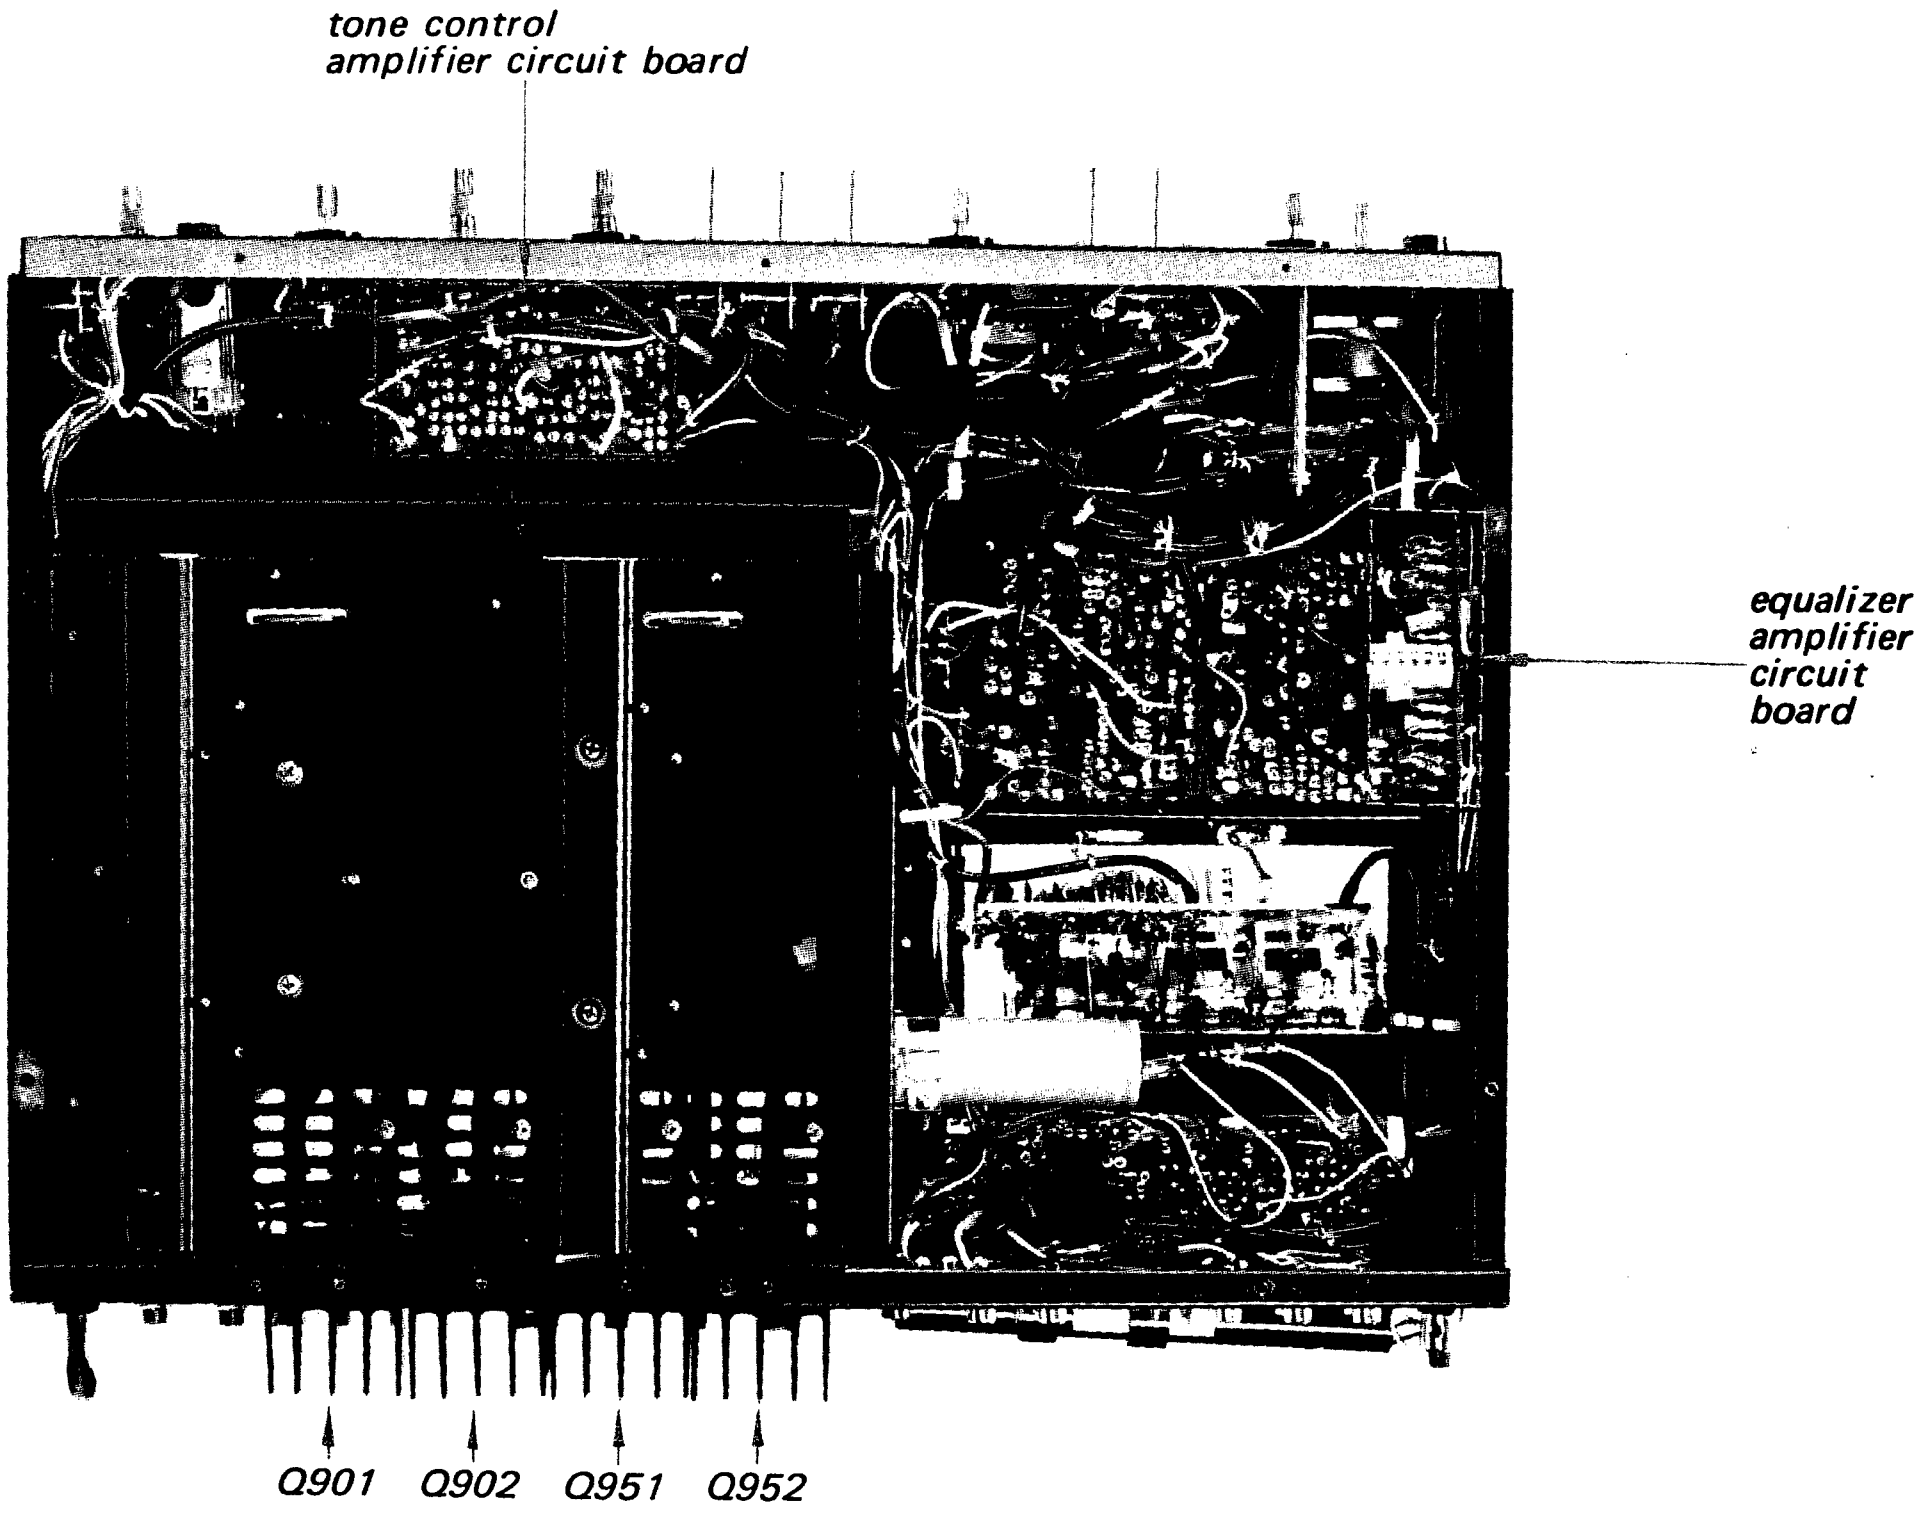
tone control amplifier circuit board
equalizer amplifier circuit board
Q901
Q902
Q951
Q952

SECTION 3
ALIGNMENT AND ADJUSTMENT PROCEDURES

3-1. FM I-F STRIP ALIGNMENT

CAUTION

The ceramic filters in the fm i-f circuit are selected according to their specified center frequencies and color coded as shown in Fig. 3-1 and listed in Table 3-1. Check the color code of the filters to to identify the same center frequency when replacing any of these filters.

TABLE 3-1.

FM I-F CERAMIC FILTERS

Part No.	Color	Specified Center Freq.
1-403-562-11	red	10.70 MHz
1-403-562-21	black	10.66 MHz
1-403-562-31	white	10.74 MHz
1-403-562-41	green	10.62 MHz
1-403-562-51	yellow	10.78 MHz

Test Equipment Required

1. Standard fm signal generator
2. Ac VTVM
3. Oscilloscope
4. Alignment tools

Note: This alignment is needed only after IFT101 in the front end or T201 (discriminator transformer) has been replaced.

Preparation

1. Remove the top cover as described in Procedure 2-3.
2. Remove the front-end cover by loosening the two screws securing it to the chassis.
3. Connect the input cable of the ac VTVM to the REC OUT terminal (J105).

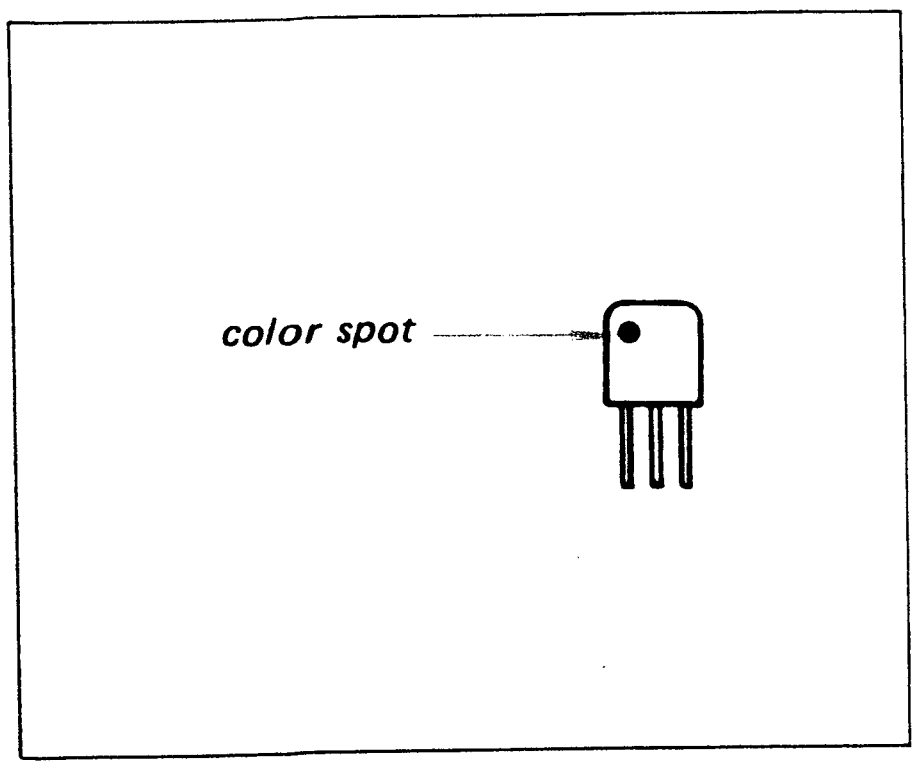

Fig. 3-1. Fm i-f ceramic filter

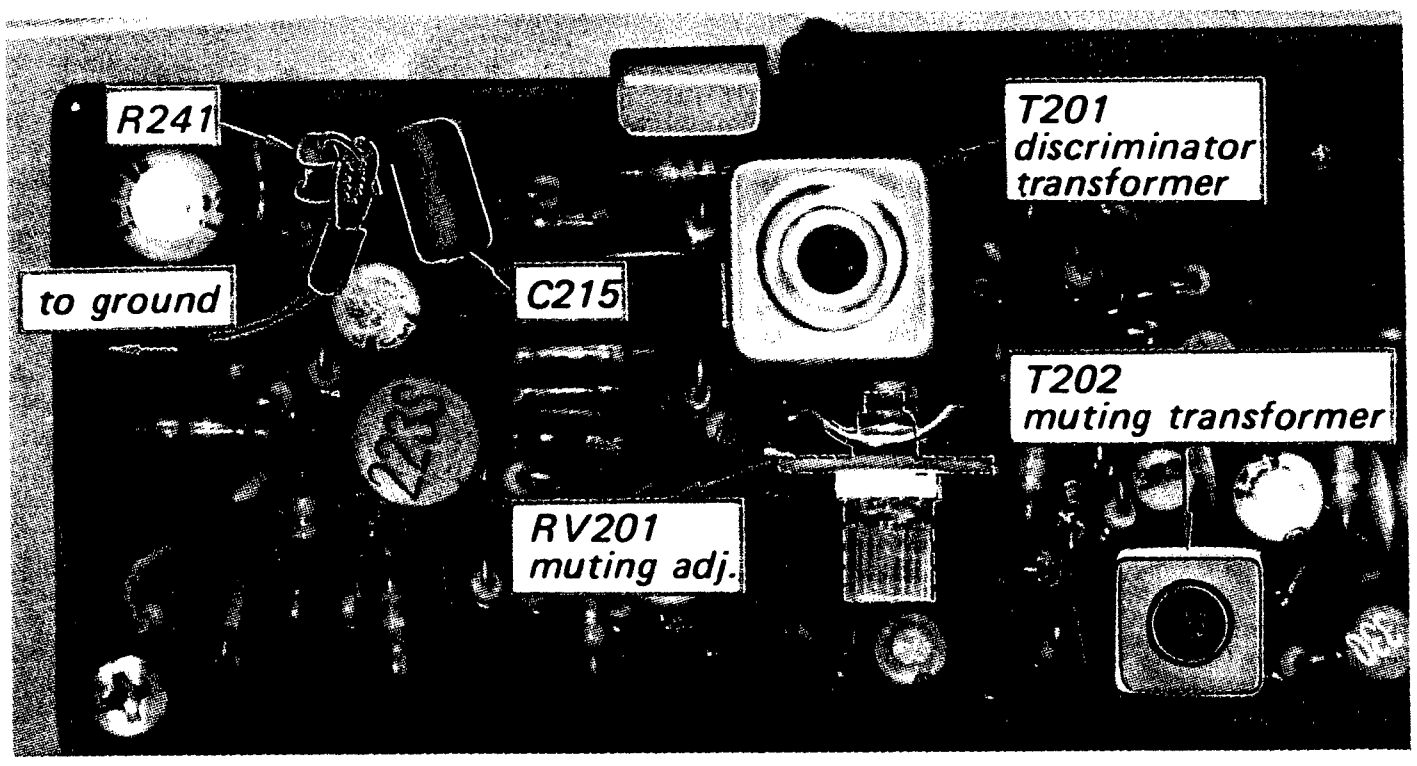
R241
to ground
C215
T201 discriminator transformer
T202 muting transformer
RV201 muting adj.

Fig. 3-2. Interruption of afc circuit and parts location

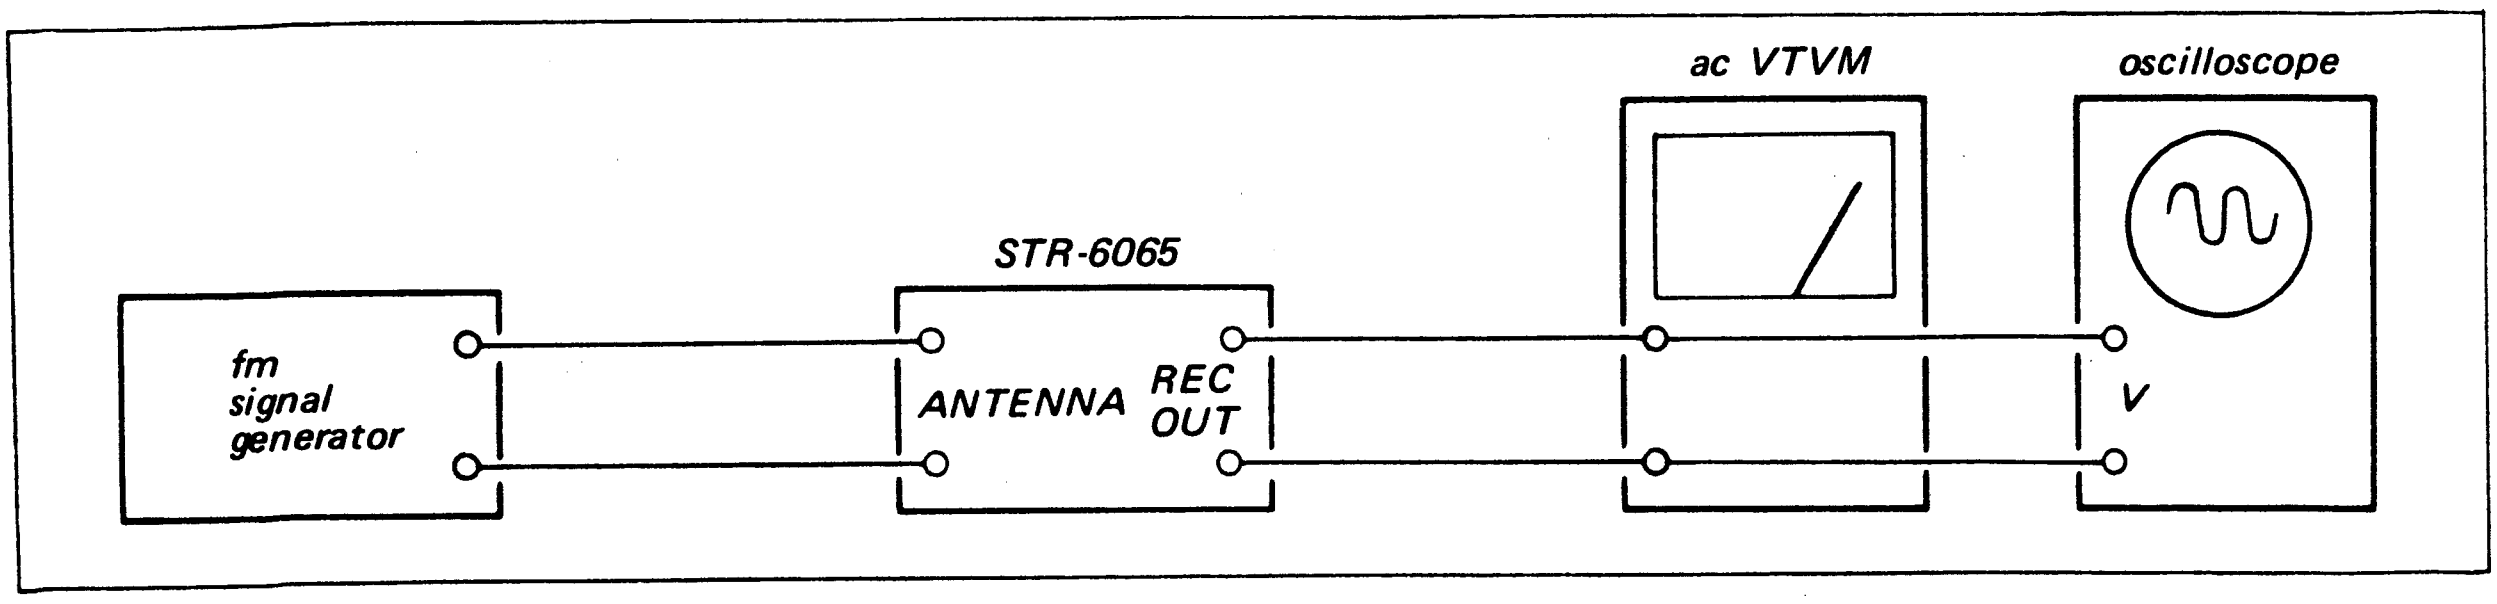
fm signal generator
STR-6065
ANTENNA
REC OUT
ac VTVM
oscilloscope
V

Fig. 3-3. Fm i-f, muting and front end alignment test setup

4. Connect the signal-generator's output to the fm antenna terminal.
5. Short the connection point of R242 and C215 (AFC circuit) to ground as shown in Fig. 3-2.

Procedure

1. With the equipment connected as shown in Fig. 3-3, set the signal-generator's controls as follows:

Carrier frequency	98 MHz
Modulation	Fm, 400 Hz, 100%
Output level	30μV (30 dB)

2. Set the receiver's controls as follows:

FUNCTION switch	FM MONO
MODE switch	STEREO
VOLUME control	Minimum

3. Turn the core of transformer IFT101 or T201 (bottom core) (See Fig. 3-2 or Fig. 3-4) with the alignment tool to obtain maximum output.

3-2. FM DISCRIMINATOR ALIGNMENT

Note: Before starting this alignment, the fm i-f alignment should be performed. There are two or three methods of discriminator alignment, but only the simplified method using the tuner's TUNING meter is described here.

Test Equipment Required

1. Oscilloscope
2. Alignment tools

Preparation

1. Remove the top cover as described in Procedure 2-3.
2. Connect the input cable of the oscilloscope to REC OUT (J105) terminal.
3. Short the connection point of R242 and C215 (AFC circuit) to ground as shown in Fig. 3-2.

Procedure

1. With the equipment connected as shown in Fig. 3-5, set the receiver's control as follows:

FUNCTION switch	FM MONO
MODE switch	STEREO

   No signal should be received.

2. Adjust the controls of the oscilloscope to provide a visible indication of noise. Always watch the oscilloscope to confirm that the tuner is not receiving any off-the-air signals.
3. Turn the top core (secondary side) of discriminator transformer T201 (see Fig. 3-2) with a hex-head alignment tool to obtain a null-point reading on the tuning meter. If the discriminator transformer (T201) is not aligned correctly, some deviation on the tuning meter will be observed.

Note: Turn the core carefully and slowly. At both extreme positions of the top core, a null point will be observed. The real null point should be obtained in the middle of the core's thread length.

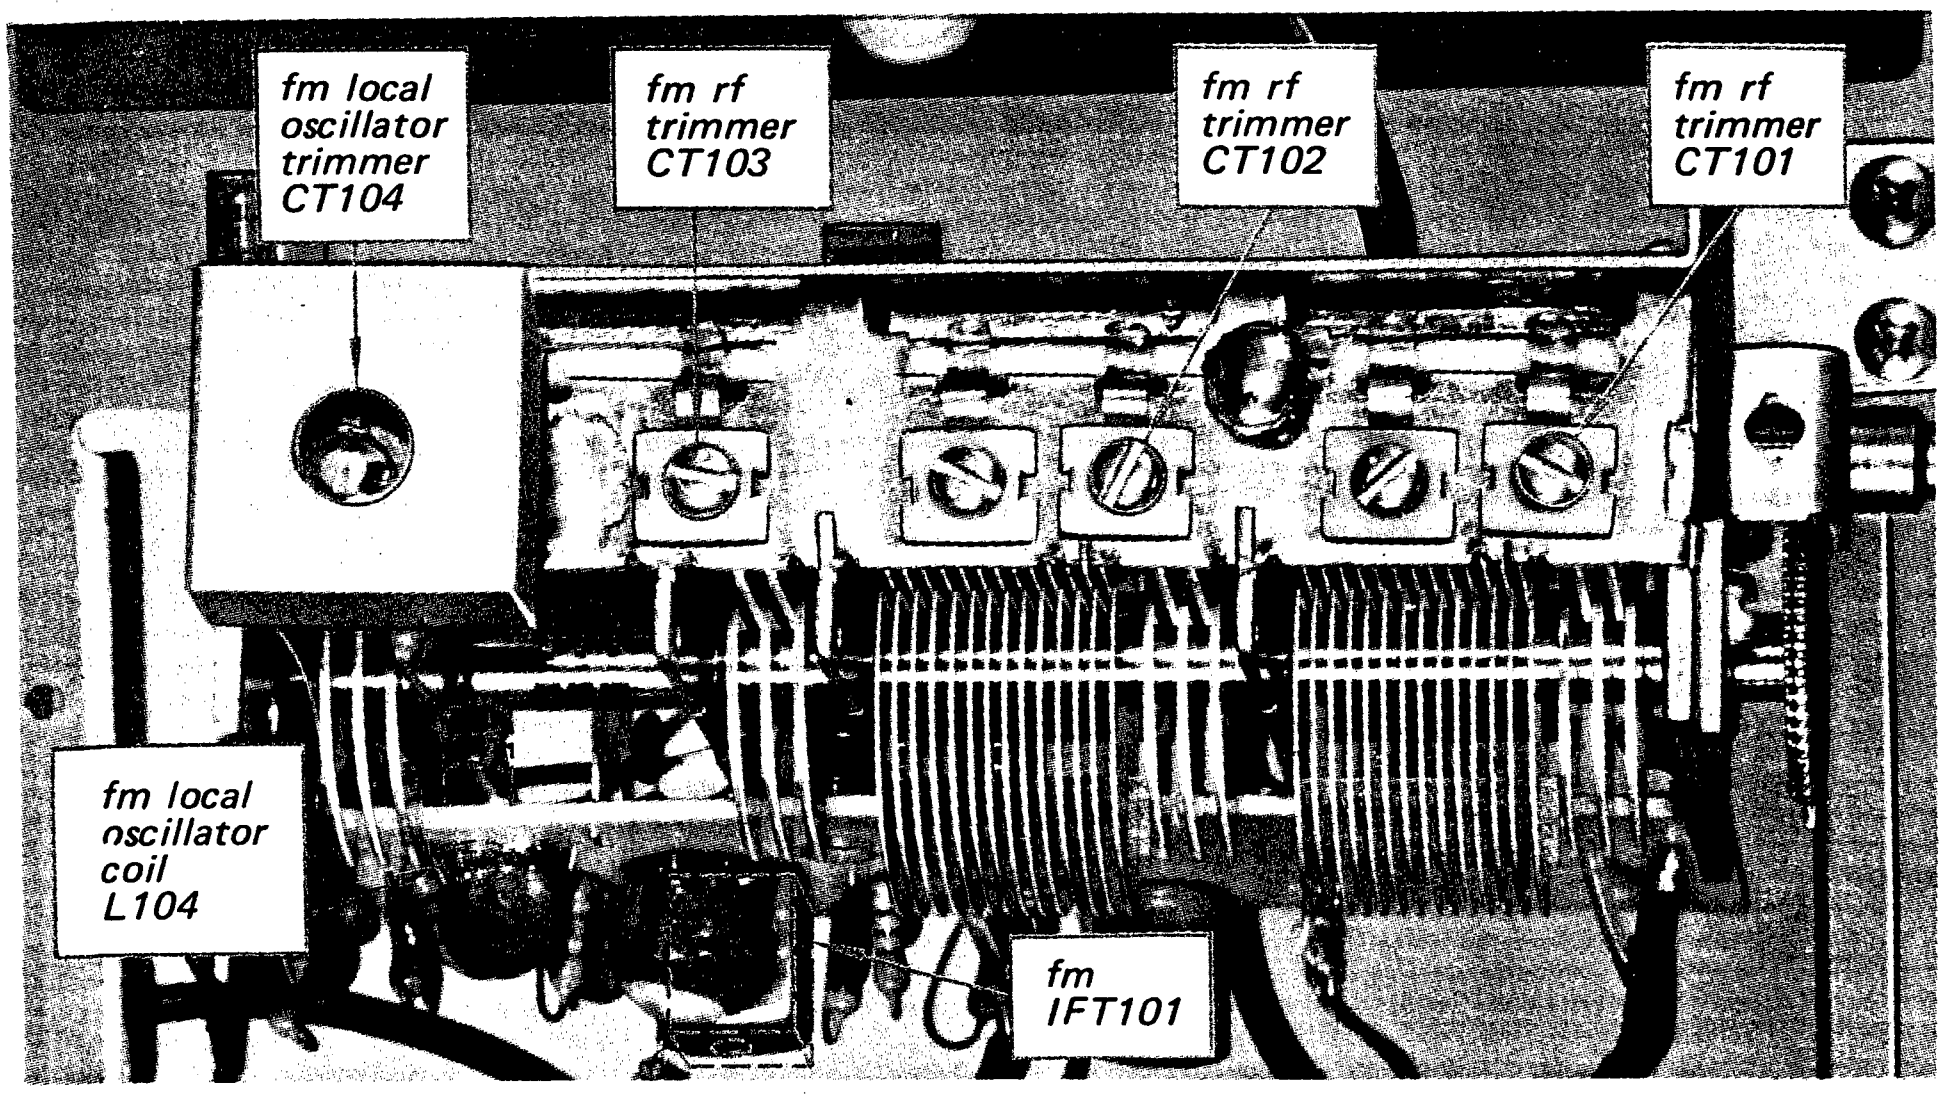

Fig. 3-4. Parts location

4. Repeat the above mentioned steps and fm i-f strip alignment two or three times.

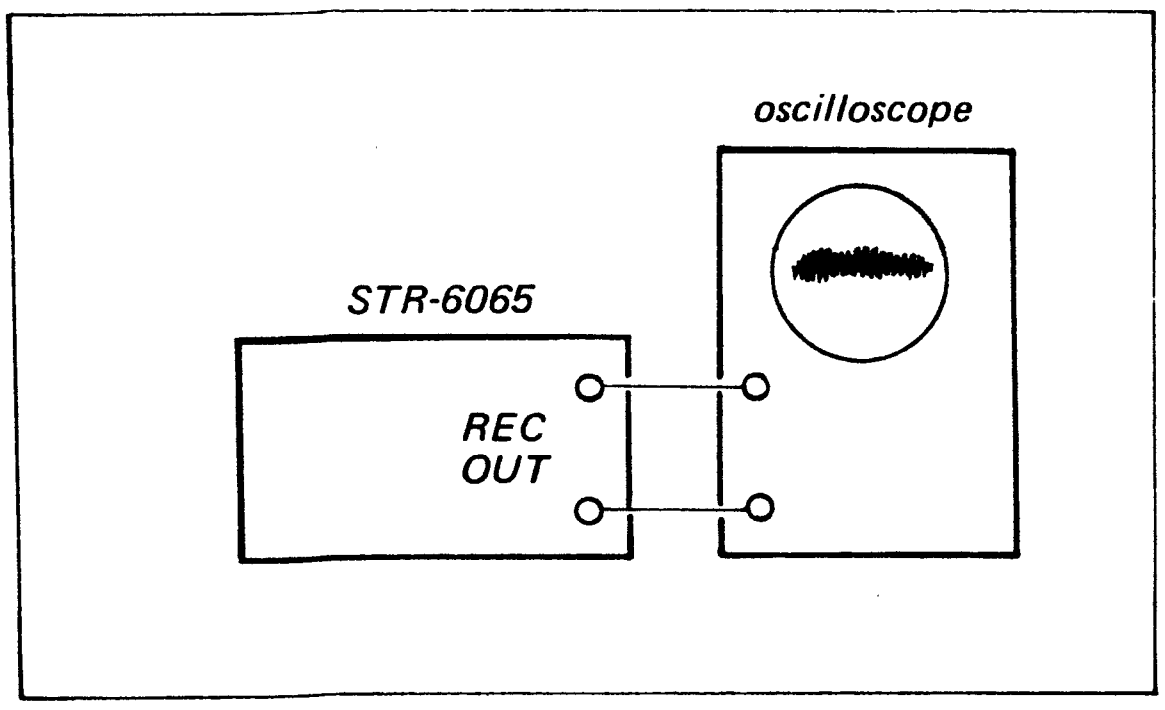

Fig. 3-5. Discriminator alignment test setup

3-3. MUTING ADJUSTMENT

Note: Two methods of muting alignment are available, signal generator alignment and alignment by using an off-the-air signal. You can use either of them.

Signal Generator Alignment

Test Equipment Required

1. Fm standard signal generator
2. Ac VTVM or oscilloscope
3. Alignment tool

Preparation

1. Remove the top cover as described in Procedure 2-3.
2. Turn the knob of RV201 (see Fig. 3-2) fully clockwise on the fm i-f and discriminator board.
3. Short the connection point of R242 and C215 (AFC circuit) to ground as shown in Fig. 3-2.

Procedure

1. With the equipment connected as shown in Fig. 3-3, set the receiver's controls as follows:

FUNCTION switch .... FM MONO
MODE switch .... STEREO
MUTING switch .... ON

2. Follow the procedure given in Table 3-2. Note that the muting circuit should begin to operate at the symmetrical deflection point of TUNING meter when detuning the tuner to higher or lower than the reference carrier frequency.

Off-the-Air Signal Alignment

Accurate muting circuit adjustment can also be performed by utilizing off-the-air local fm signals instead of the fm S.S.G.

Note that a weak signal is best for this purpose.

3-4. FM FREQUENCY COVERAGE ALIGNMENT

CAUTION

Never attempt alignment of the front-end section except for the frequency-coverage and dial-calibraion adjustments. The front-end section of the tuner has been carefully adjusted at the factory, so very little adjustment is necessary in the field. Alignment need not be performed when the front-end FET is replaced since changes in FET parameters have little effect upon tuning. If an rf-stage adjustment is required, ask your nearest SONY Service Station to send your unit to the Factory Service Center for a complete front-end alignment.

Exercise caution when returning the faulty unit so that it is not damaged in transit. The warranty will not cover damage incurrent in transit to the Factory Service Center.

Note: Before starting this alignment, the discriminator-transformer alignment should be performed.

TABLE 3-2. MUTING ADJUSTMENT

Coupling Between Front End and SSG	SSG Frequency and Output Level	Tuner Dial Indication	Adjust	Remarks
Direct coupling	98 MHz 400 Hz. 30% Mod.	98 MHz	T202 See Fig. 3-2	Turn the core of T202 to obtain proper muting operation.

TABLE 3-3. FM FREQUENCY COVERAGE ADJUSTMENT

Step	Coupling Between Front End and SSG	SSG Frequency and Output Level	Tuner Dial Indication	Scope Connection	Adjust	Indication
1.	Direct coupling	87.5 MHz 400 Hz 100% Mod. $30\mu V$ (30 dB)	87.5 MHz	REC OUT (J105)	OSC coil L104 See Fig. 3-4	Maximum VTVM reading
2.	Same as above	108 MHz 400 Hz 100% Mod. $30\mu V$ (30 dB)	108 MHz	Same as above	OSC trimmer CT104 See Fig. 3-4	Same as above

Signal Generator Alignment

Test Equipment Required

1. Standard fm signal generator
2. Ac VTVM
3. Alignment tools

Preparation

1. Remove the top cover as described in Procedure 2-3.
2. Connect the equipment as shown in Fig. 3-3.
3. Set the receivers controls as follows:
   FUNCTION switch .... FM MONO
   MODE switch .... STEREO
4. Short the connection point of R242 and C215 (AFC circuit) to ground as shown in Fig. 3-2.

Generator Alignment

Follow the procedures given in Table 3-3 when performing this alignment with an fm signal generator. Be sure that the dial is mechanically calibrated as described in Procedure 2-6.

Off-the-Air Alignment

Accurate dial calibration and a frequency-coverage test can also be performed by utilizing off-the-air local fm signals. However, before performing the following procedure, be sure that the dial pointer is correctly positioned, as described in Procedure 2-6.

Procedure

1. Short the connection point of R242 and C215 (AFC circuit) to ground as shown in Fig. 3-2.
2. Tune the receiver to the lowest-frequency station.
3. Check the dial scale for a calibration accuracy of ±200 kHz from the carrier frequency of the station. If the dial-accuracy deviation exceeds this limit, turn the local-oscillator coil L104 slightly as shown in Fig. 3-4 until optimum dial calibration is obtained.
4. Tune the receiver to the highest-frequency station in your locality. If the dial-calibration error is excessive, adjust local-oscillator trimmer CT104 (see Fig. 3-4) to obtain maximum calibration accuracy.
5. Repeat Steps 3 and 4.

3-5. FM STEREO SEPARATION ADJUSTMENT

Test Equipment Required

1. MPX generator
2. Fm signal generator
3. Audio oscillator
4. Ac VTVM
5. Oscilloscope
6. Alignment tools

Preparation

Before starting the stereo-separation adjustment, check and adjust the phase between the 19-kHz pilot signal and the sub-channel signal in the MPX stereo generator as follows:

(1) With the equipment connected as shown in Fig. 3-6, set the MPX and audio signal-generator's control as follows:
MAIN CHANNEL .... OFF
SUB CHANNEL .... ON
PILOT (19 kHz) .... OFF

AUDIO OSCILLATOR OUTPUT	400 Hz, 250 mV

(2) Adjust the oscilloscope controls to obtain a visible indication. Be sure the scope's horizontal display switch is set for external input.

(3) Turn the pilot-signal (19 kHz) phase control to obtain an in-phase and stable lissajous pattern as shown in Fig. 3-7.

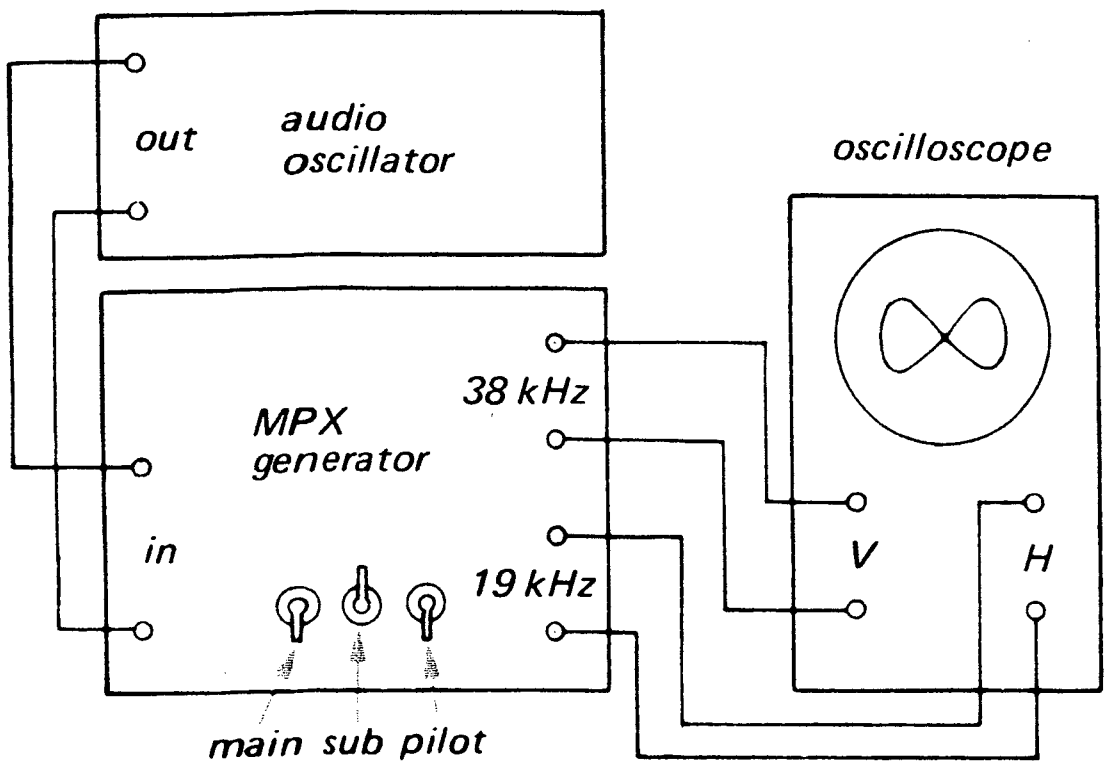
out
audio oscillator
oscilloscope
38 kHz
MPX generator
in
19 kHz
V
H
main sub pilot

Fig. 3-6. MPX generator preadjustment

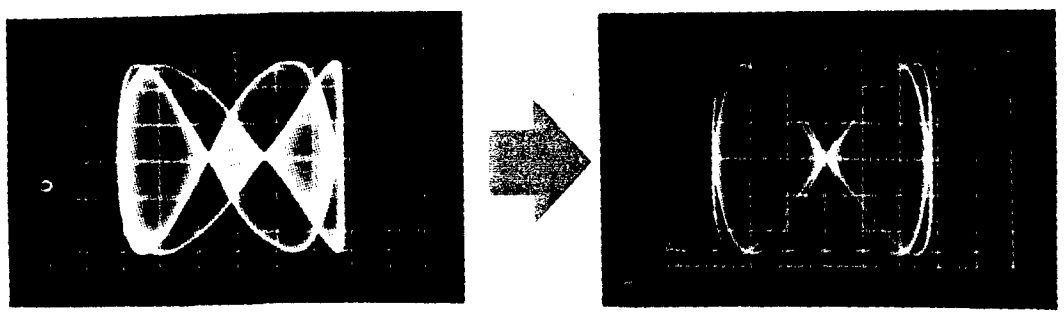

Fig. 3-7. Lissajous pattern

Procedure

1. Connect the equipment as shown in Fig. 3-8. Set the fm signal-generator's control as follows:

Carrier frequency	98 MHz
Output level	1,000 μV (60 dB)
Modulation:	
Main channel (400 Hz)	33.75 kHz (45%)
Sub channel (38 kHz)	33.75 kHz (45%)
Pilot (19 kHz)	7.5 kHz (10%)

The above mentioned modulation levels can be set as follows:

(a) With the equipment connected as shown in Fig. 3-8 set the MPX stereo generator controls as follows.

MAIN CHANNEL	OFF
SUB CHANNEL	OFF
19 kHz (PILOT)	ON

(b) Adjust the 19-kHz signal level to obtain a 7.5-kHz deviation on the FM SSG modulation indicator.

(c) Reset the MPX stereo-generator's control as follows:

MAIN CHANNEL	ON
SUB CHANNEL	OFF
19 kHz (PILOT)	OFF
INPUT SELECTOR	L-CH

(d) Adjust the audio-oscillator output (400 Hz) to obtain a 33.75-kHz deviation on the FM SSG modulation indicator.

(e) Set all controls to ON.

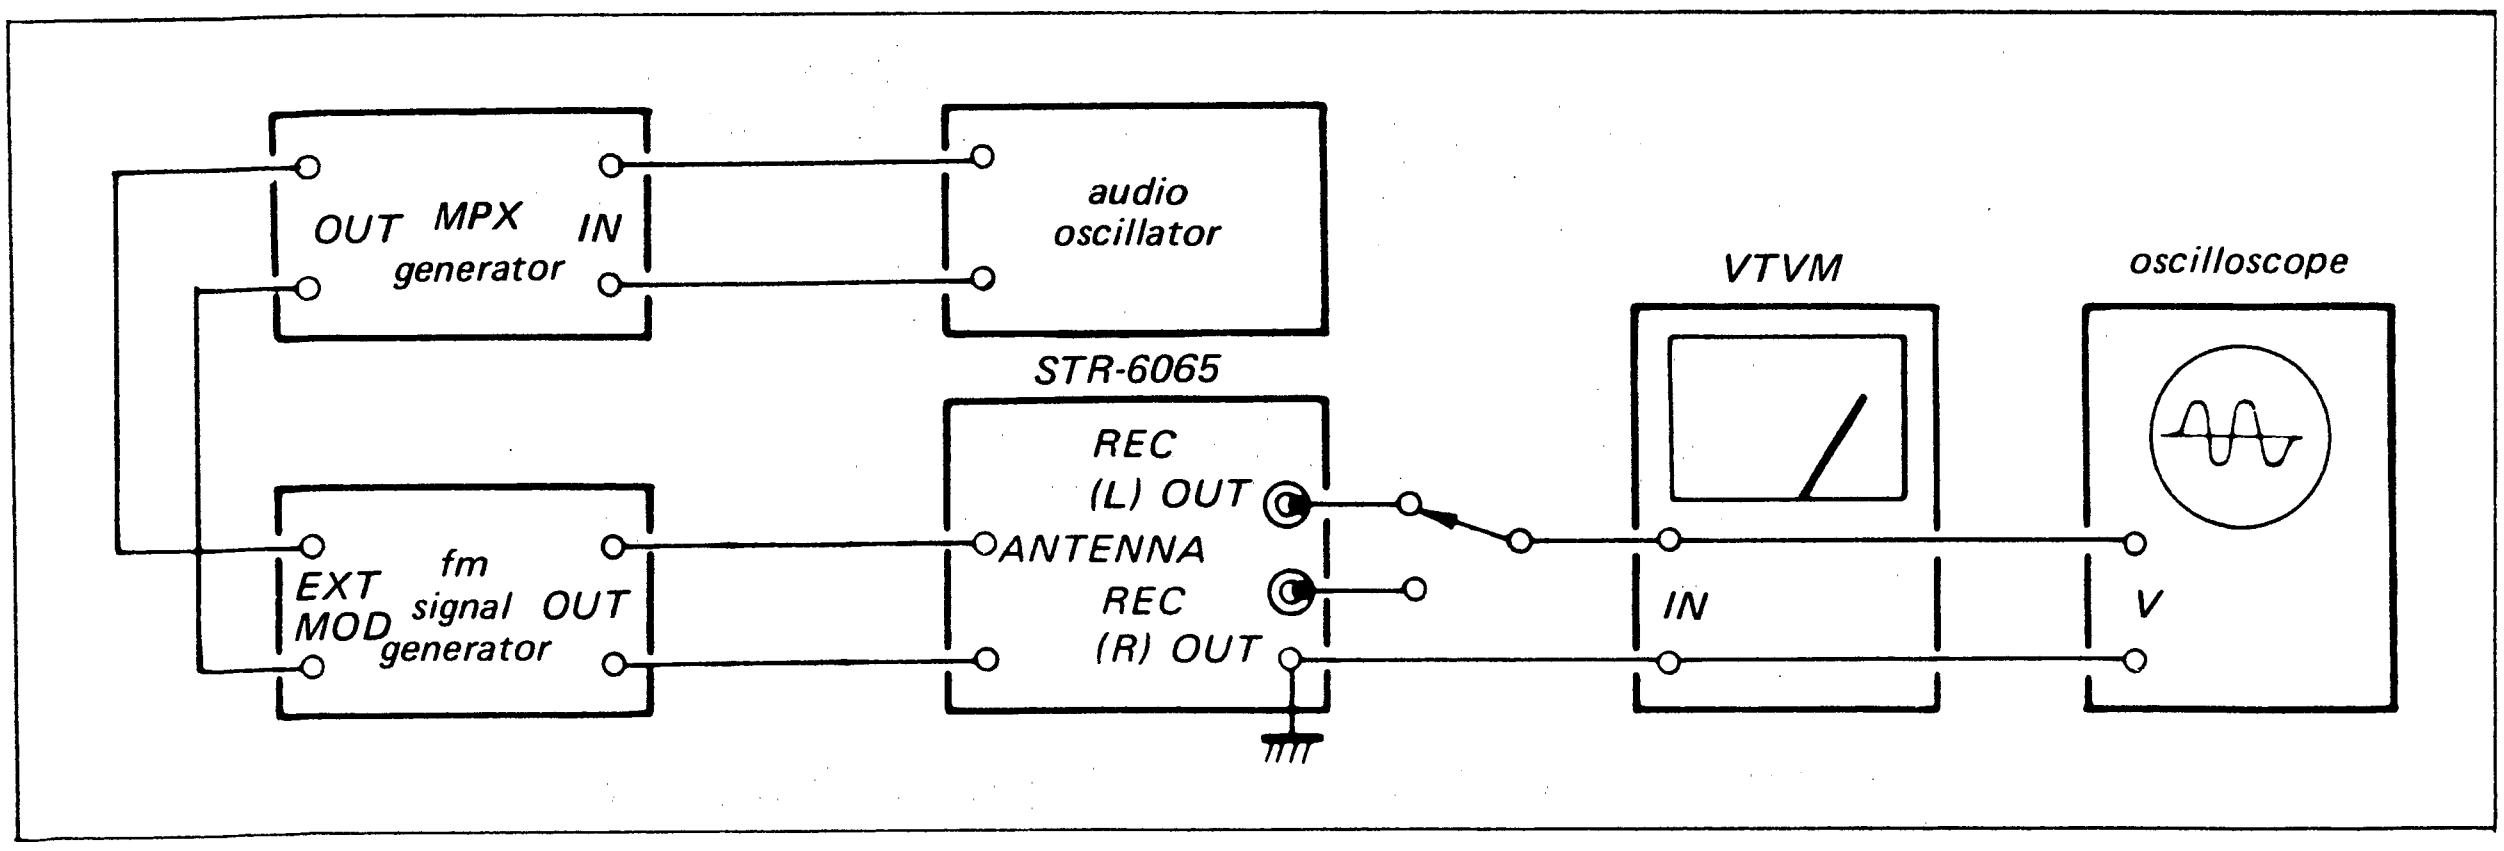
OUT MPX generator IN
audio oscillator
STR-6065
REC (L) OUT
ANTENNA
REC (R) OUT
EXT MOD
fm signal generator
OUT
VTVM
IN
oscilloscope
V

Fig. 3-8. Fm stereo separation adjustment test setup

2. Precisely tune the set to the S.S.G's carrier frequency then turn the top core of switching transformer T401 (see Fig. 3-9) to obtain maximum output at the left channel. Note that this adjustment is closely related to stereo distortion.
3. Record the output level of the left channel when the MPX generator input selector is set to the left channel.
4. Switch the input selector to the right channel and read the residual signal level in the left channel.
5. The output-level to residual-level ratio represents the separation. Adjust separation adj. control RV401 (see Fig. 3-9) for minimum residual level. Check the right channel for separation. Usually, about an 8 to 9 dB difference in channel separation exists. Readjust RV401 for minimum difference between left-and right-channel separation. While doing this, remember that the output level also changes according to the setting of RV401.

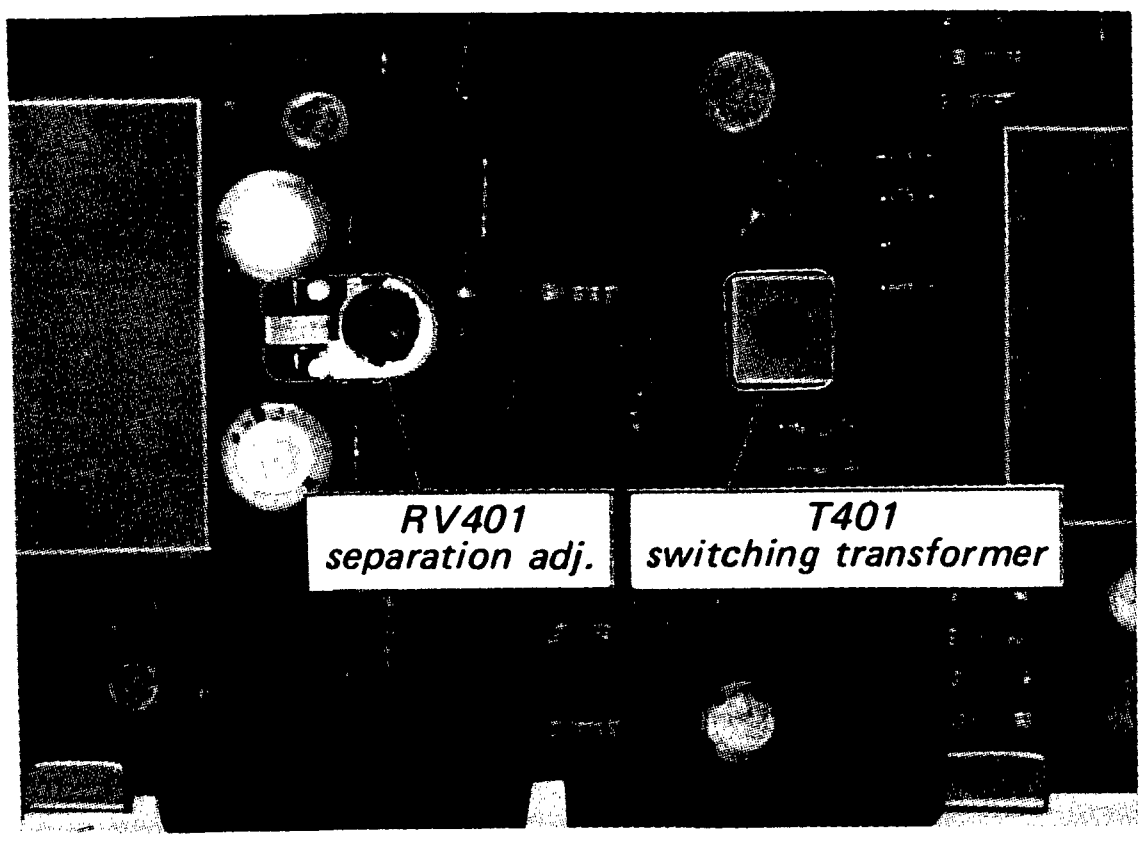

Fig. 3-9. Parts location

3-6. A-M I-F STRIP ALIGNMENT

Note: The i-f transformers (CFT301 and IFT301) in the a-m i-f circuit are adjusted at the factory, so very little adjustment is necessary in the field. There is no need for alignment when replacing any of these i-f transformers.

3-7. A-M FREQUENCY COVERAGE AND TRACKING ADJUSTMENT

Preparation

Remove the top cover as described in Procedure 2-3. Then, set the FUNCTION switch to AM.

Signal Generator Method

Test Equipment Required

1. Standard a-m signal generator
2. Loop antenna
3. Ac VTVM or oscilloscope

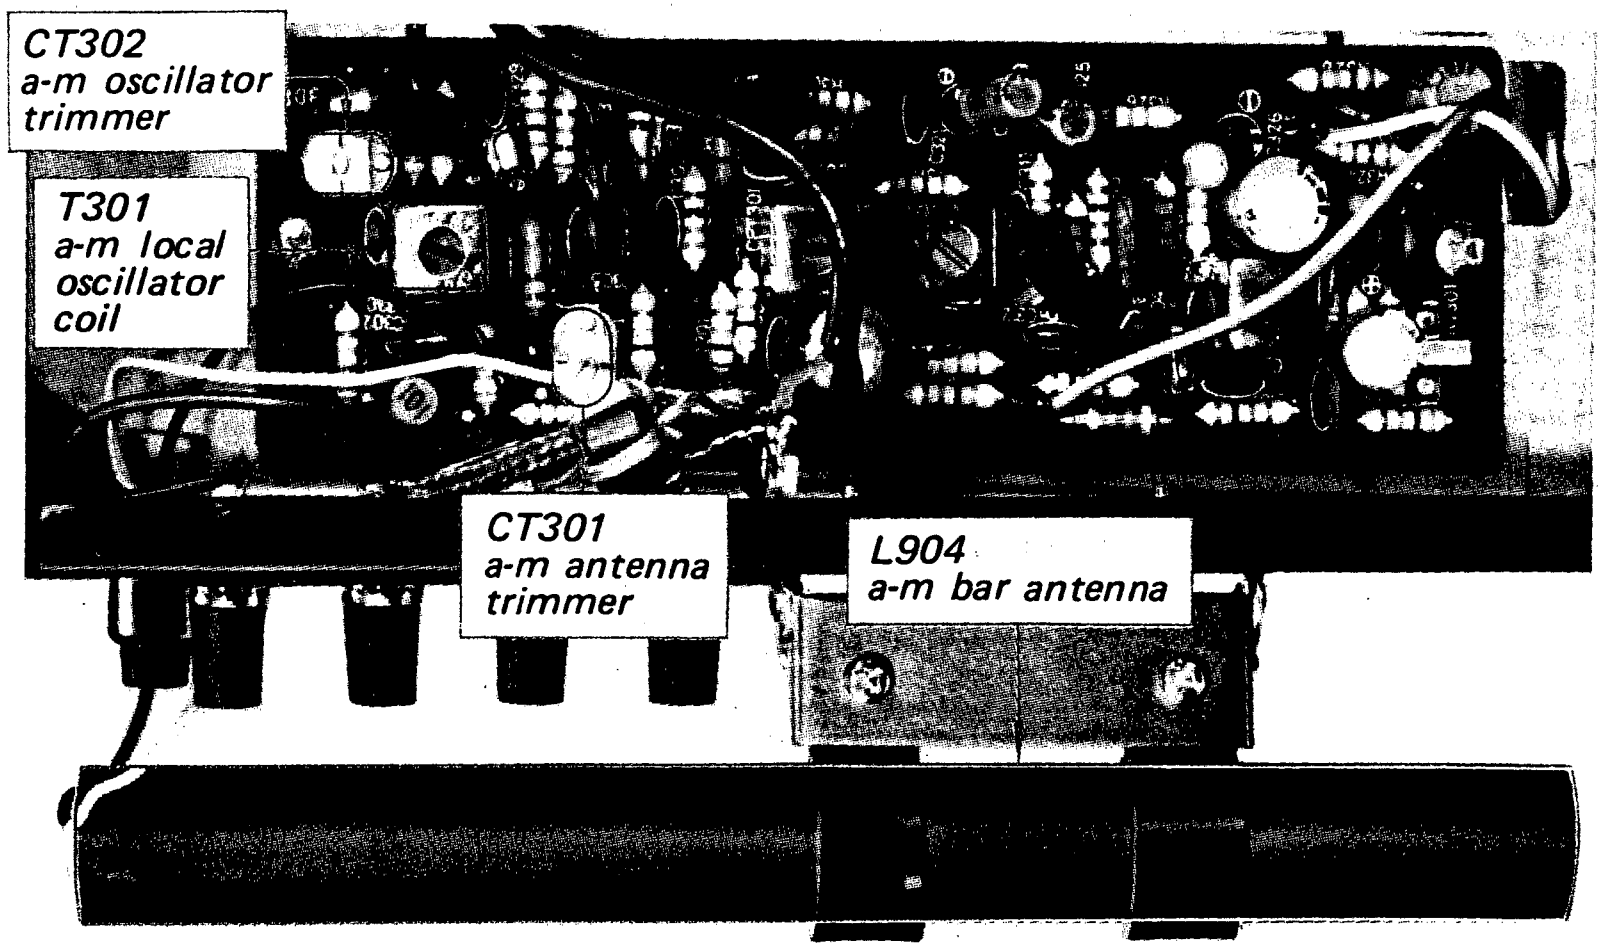

Fig. 3-10. Parts location

Procedure

With the equipment connected as shown in Fig. 3-11, follow the procedures given in Tables 3-4 and 3-5 when performing this alignment with an a-m signal generator.

Off-the-Air Signal Method

Accurate dial calibration, and a frequency-coverage and tracking test can also be performed by utilizing off-the-air local a-m signals. However, before performing the following procedure, be sure that the dial pointer is correctly positioned, as in the Procedure 2-6.

Frequency Coverage Adjustment

Procedure

1. Tune the receiver to the lowest-frequency station in your locality.
   Check the dial scale for a calibration accuracy of ±20 kHz from the carrier frequency. If the dial calibration error exceeds this limit, turn the local oscillator-coil T301 (see Fig. 3-10) slightly until optimum dial calibration is obtained.
2. Tune the receiver to the highest-frequency station in your locality. If the dial calibration error exceeds ±30 kHz from the carrier frequency, adjust local-oscillator trimmer-capacitor CT302 (see Fig. 3-10) to obtain maximum calibration accuracy. Repeat the above steps two or three times.

Tracking Adjustment

1. Tune the set to the station whose carrier frequency is closest to 620 kHz and adjust the position of antenna core L904 as shown in Fig. 3-12 to obtain maximum output.
2. Tune the set to the station whose carrier frequency is closest to 1,400 kHz and adjust antenna trimmer CT301 to obtain maximum output. See Fig. 3-10.
3. Repeat the above steps two or three times.

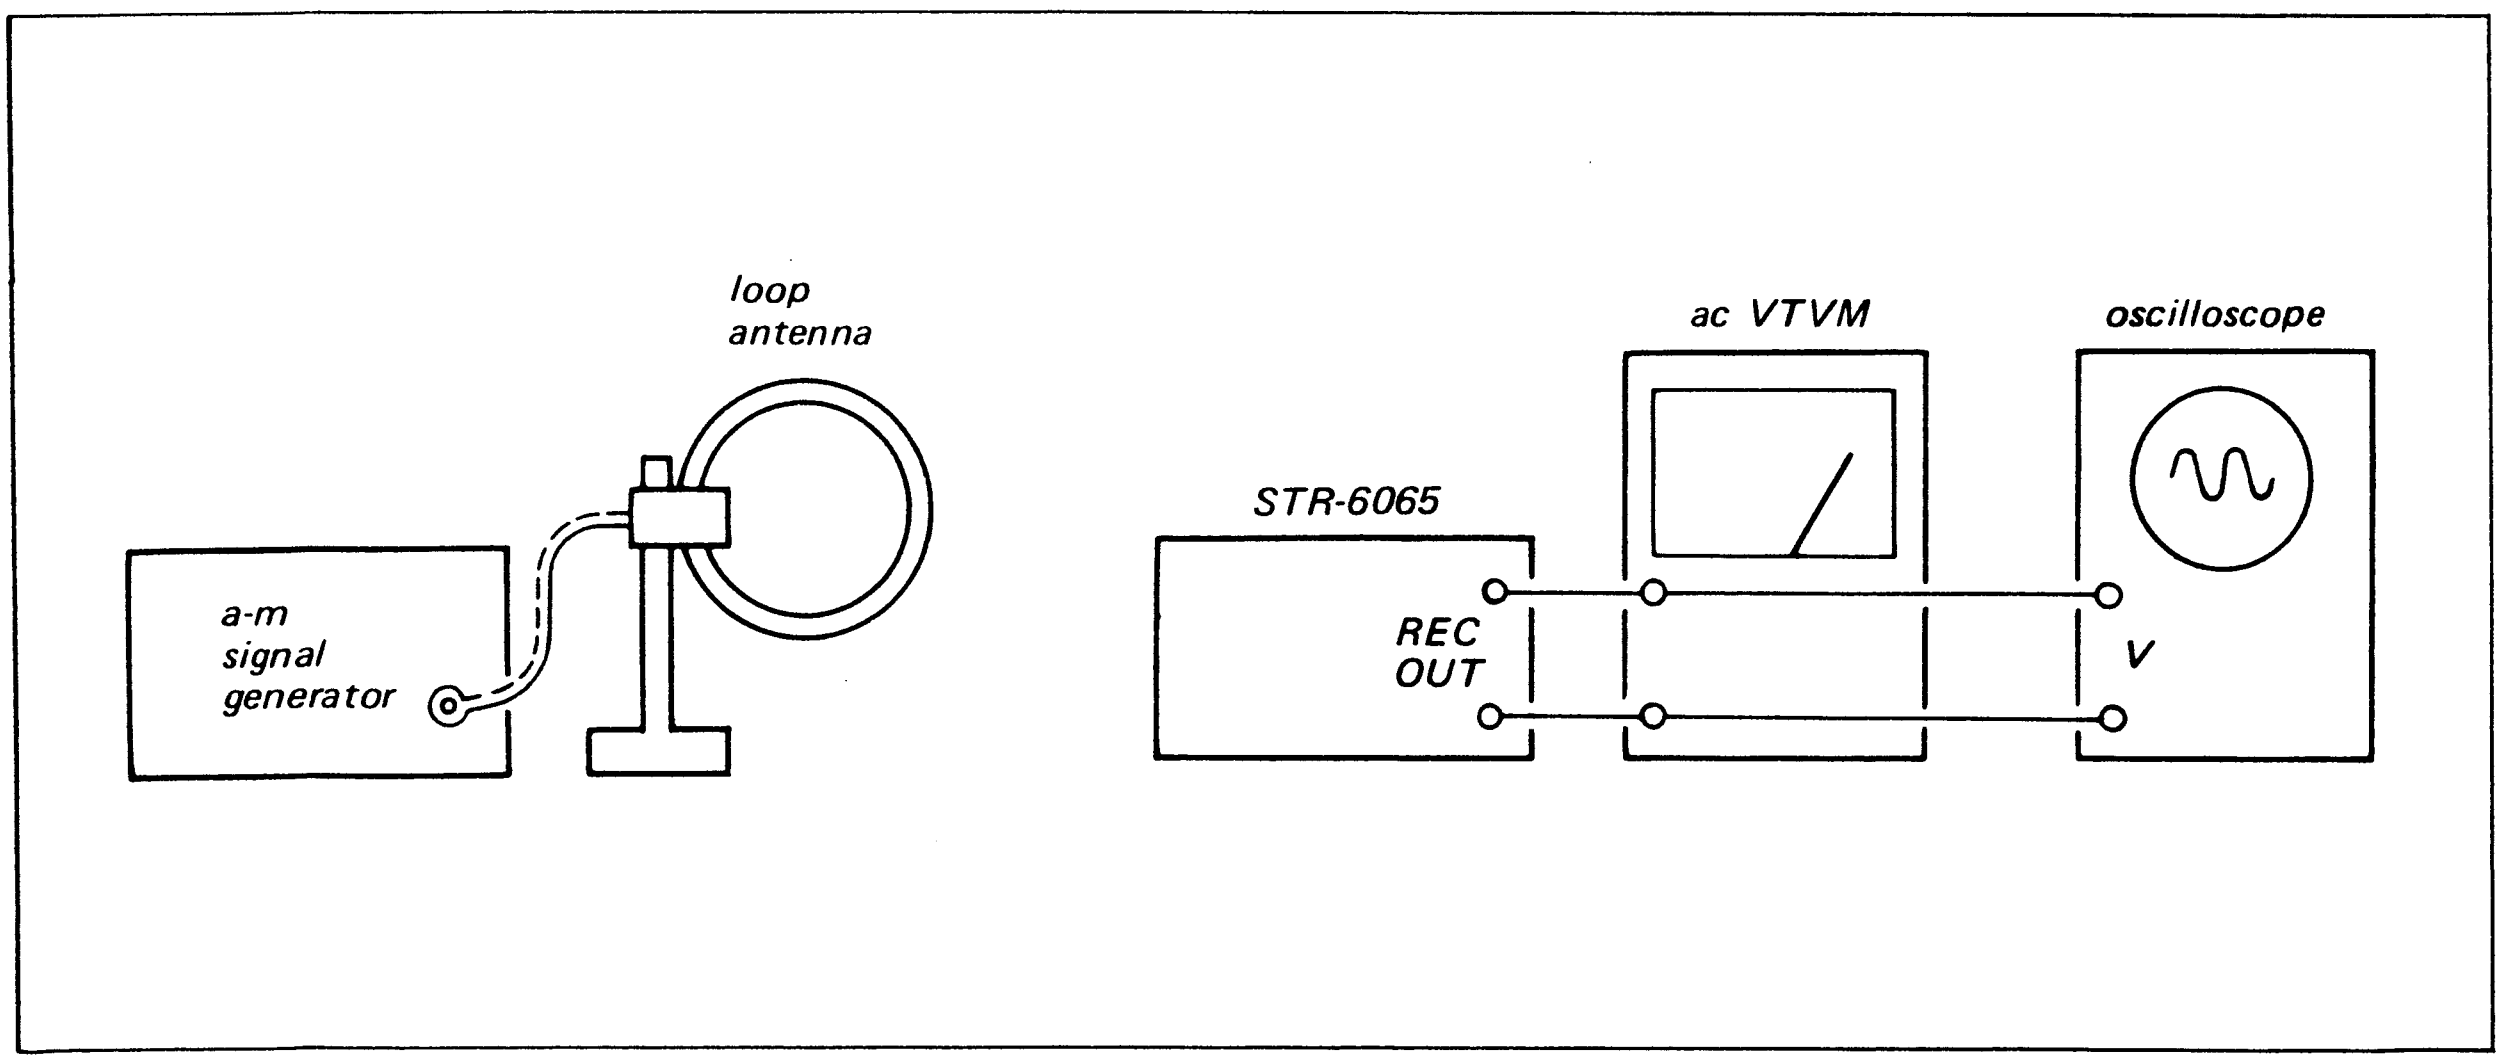

Fig. 3-11. A-m frequency coverage and tracking alignment test setup

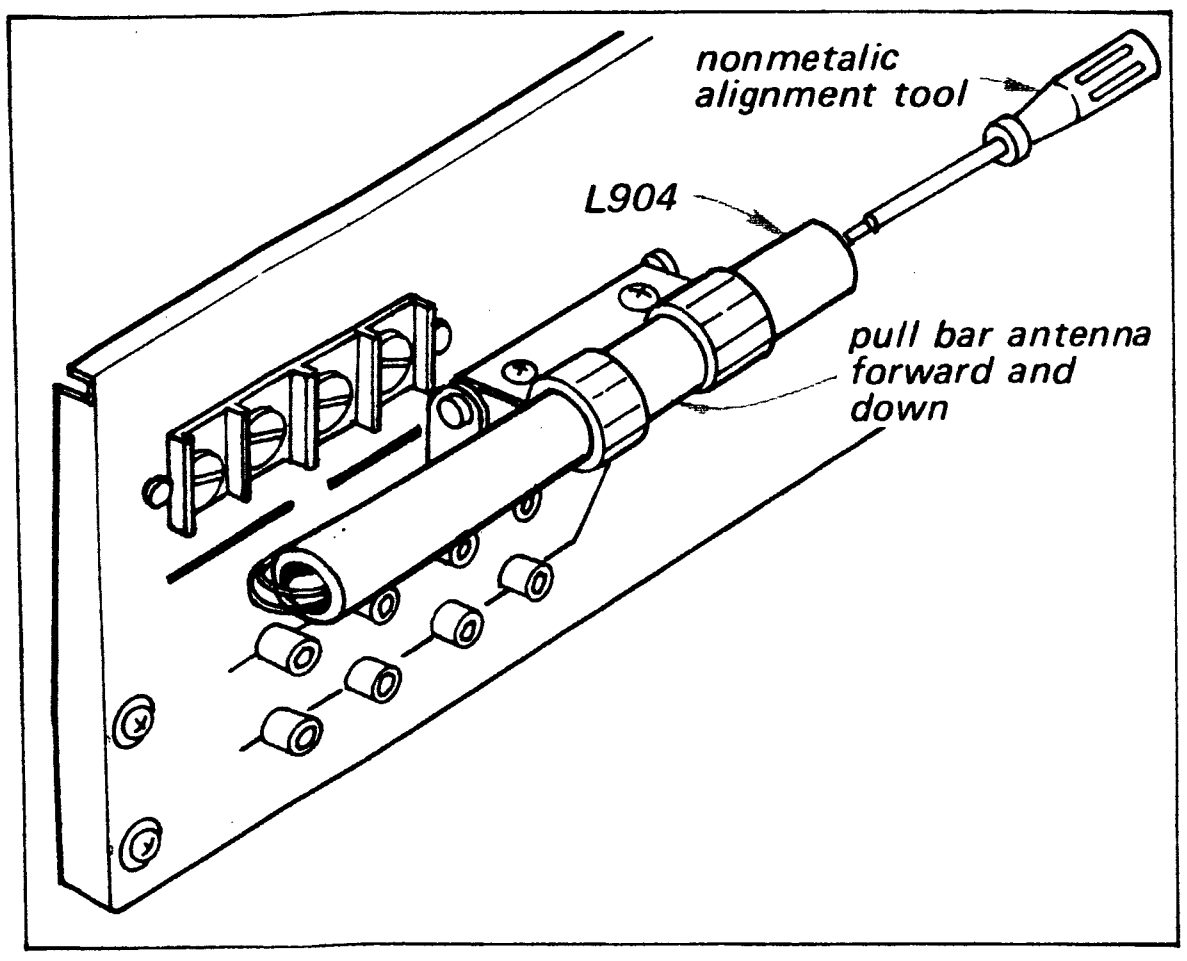

Fig. 3-12. A-m bar antenna core adjustment

3-8. POWER-AMPLIFIER ADJUSTMENT

Note: There are two adjustment items in the power amplifier. One is dc-bias adjustment and the other is dc-balance adjustment. These adjustments should be repeated alternately two or three times after replacing any of the power transistors until the best operation is obtained.

Dc-Bias Adjustment

Serious deficiencies in performance, such as thermal runaway of power transistors, will result if this adjustment is improperly set.

TABLE 3-4. A-M FREQUENCY COVERAGE ALIGNMENT

SSG Coupling	SSG Frequency and Output Level	Tuner Dial Indication	Scope Connection	Adjust	Indication
Loop antenna	530 kHz 400 Hz 30% Mod. 3,000μV (70 dB)	530 kHz	REC OUT (J105)	OSC coil T301 See Fig. 3-10	Maximum VTVM reading
Loop antenna	1,600 kHz Same as above	1,600 kHz	Same as above	OSC trimmer CT302 See Fig. 3-10	Same as above

TABLE 3-5. A-M TRACKING ALIGNMENT

SSG Coupling	SSG Frequency and Output Level	Tuner Dial Indication	Scope Connection	Adjust	Indication
Loop antenna	620 kHz 400 Hz 30% Mod. Output level as low as possible	620 kHz	REC OUT (J105)	Position of antenna core L904 See Fig. 3-12	Maximum VTVM reading
Loop antenna	1,400 kHz Same as above	1,400 kHz	Same as above	Antenna trimmer CT301 See Fig. 3-10	Same as above

CAUTION

To avoid accidental power transistor damage, increase the ac line voltage gradually, using a variable transformer, while measuring the voltage across emitter resistor R738 or R788 as shown in Fig. 3-13.
Check to see that the reading does not exceed 25 mV. If it does, turn off the power as soon as possible, then check and repair the trouble in the power-amplifier board.

Test Equipment Required

1. Dc millivoltmeter
2. Variable transformer
3. Screwdriver with 3 mm (1/8") blade

Preparation

1. Remove the top cover as described in Procedure 2-3.
2. Connect the dc millivoltmeter across emitter resistor R738 or R788 as shown in Fig. 3-13.

Procedure

1. Set the semifixed resistors (Fig. 3-14) on the power-amplifier board as follows:

RV702 (L-CH, dc bias)	fully counterclockwise
RV752 (R-CH, dc bias)	fully clockwise
RV701, RV751 (dc balance)	mid-position

2. Set the SPEAKER switch to MAIN.
3. Set the variable transformer for minimum output.
4. Turn the POWER switch ON, and then increase the line voltage up to the rated value.
5. Apply a drop of cement solvent to the RV701, RV702, RV751 and RV752 then wait a few seconds for the cement to dissolve.
6. Adjust RV702 and RV752 to obtain a 25 mV reading on the meter, and then perform the dc-balance adjustment.

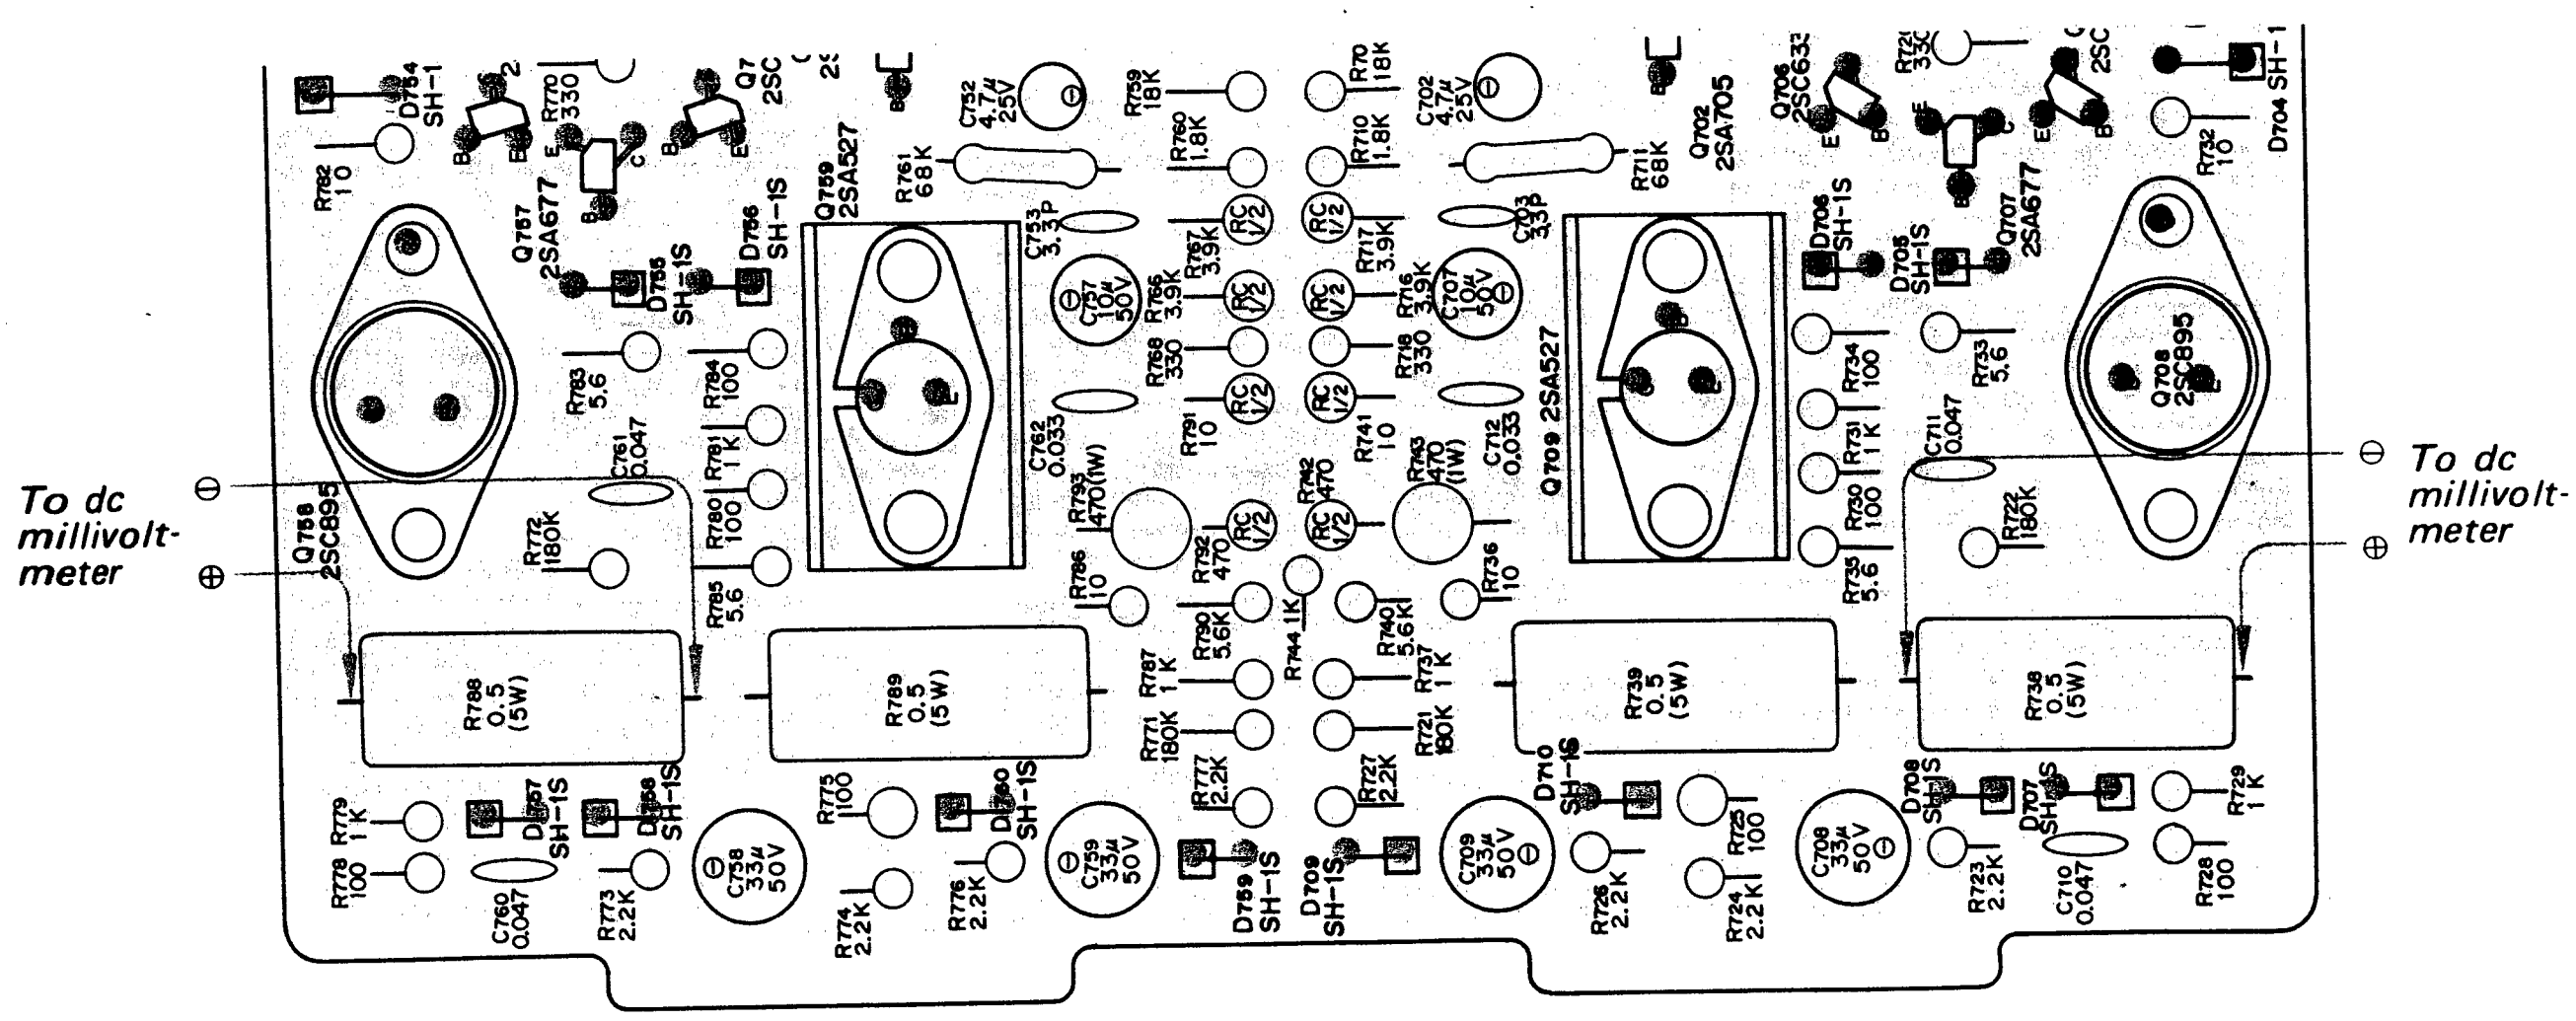

Fig. 3-13. Dc millivoltmeter connection

Dc-Balance Adjustment

Excessive harmonic distortion at high levels will result if this adjustment is improperly set.

Test Equipment Required

1. Dc null meter or dc millivoltmeter
2. Screwdriver with 3 mm (1/8") blade

Preparation

1. Set the SPEAKER switch to MAIN.
2. Connect the dc null meter or dc millivoltmeter to the MAIN speaker output terminal.

Procedure

1. Turn the POWER switch ON, and then adjust RV701 (RV751) to obtain a 0 V reading on the meter.
2. After 10 minutes warm-up, alternately repeat this and the dc bias adjustment two or three times.
3. After completing the adjustment, apply a drop of lock paint to RV701 and RV702 (RV751 and RV752).

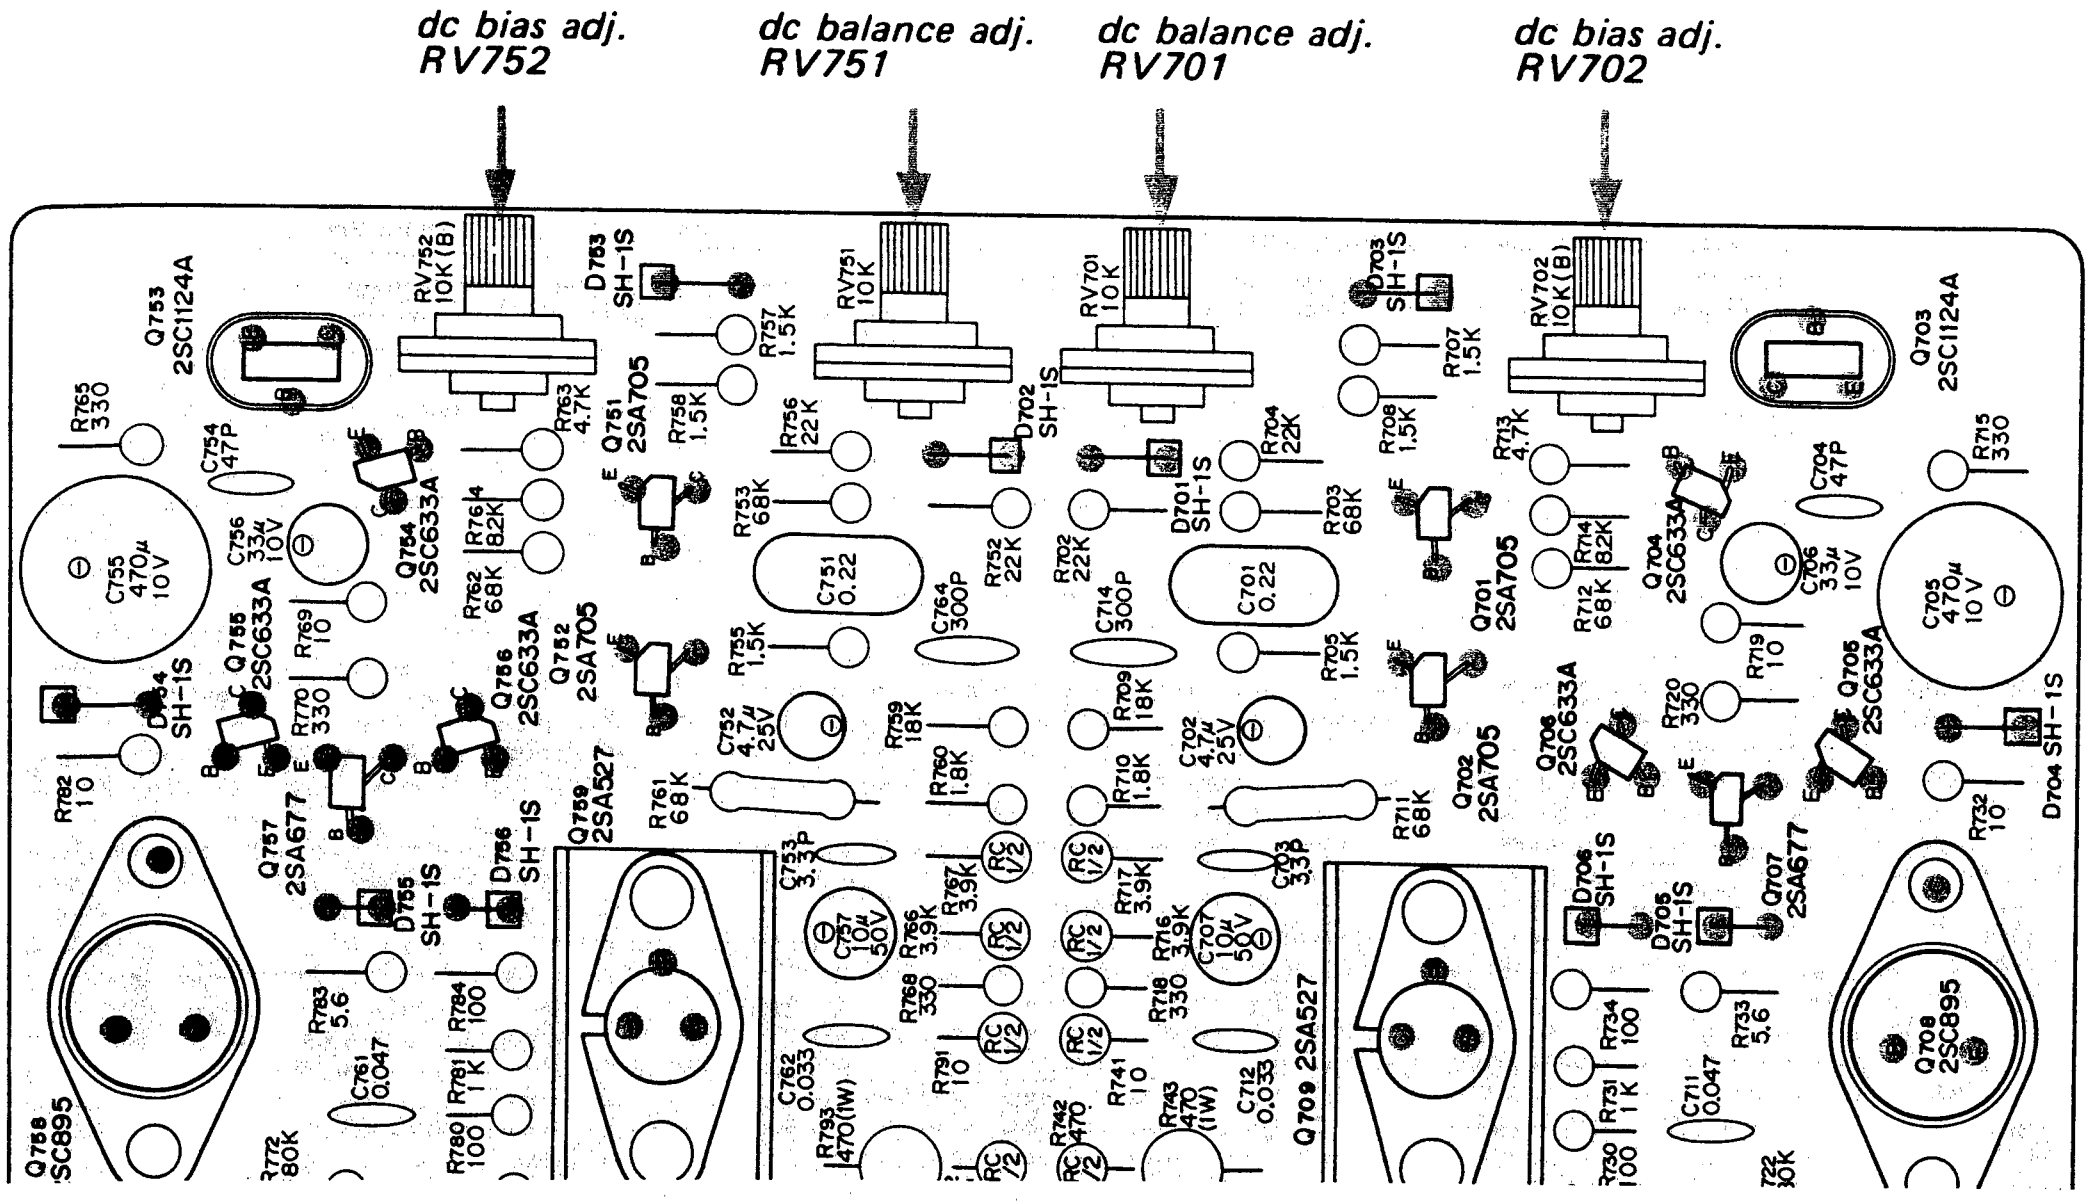
dc bias adj.
RV752
dc balance adj.
RV751
dc balance adj.
RV701
dc bias adj.
RV702
Q753 2SC1124A
Q703 2SC1124A
RV752 10K(B)
RV751 10K
RV701 10K
RV702 10K(B)
C755 470μ 10V
C705 470μ 10V
Q751 2SA705
Q752 2SA705
Q701 2SA705
Q702 2SA705
Q754 2SC633A
Q755 2SC633A
Q756 2SC633A
Q704 2SC633A
Q705 2SC633A
Q706 2SC633A
Q757 2SA677
Q707 2SA677
Q759 2SA527
Q709 2SA527
Q758 2SC895
Q708 2SC895
D753 SH-1S
D702 SH-1S
D701 SH-1S
D703 SH-1S
D754 SH-1S
D755 SH-1S
D756 SH-1S
D704 SH-1S
D705 SH-1S
D706 SH-1S
C751 0.22
C701 0.22
C754 47P
C704 47P
C764 300P
C714 300P

Fig. 3-14. Parts location

MEMO

SECTION 4
REPACKING

The STR-6065's original shipping carton and packing material are the ideal container for shipping the unit. However to secure the maximum protection, the STR-6065 must be repacked in these materials precisely as before. The proper repacking procedures are shown in Fig. 4-1.

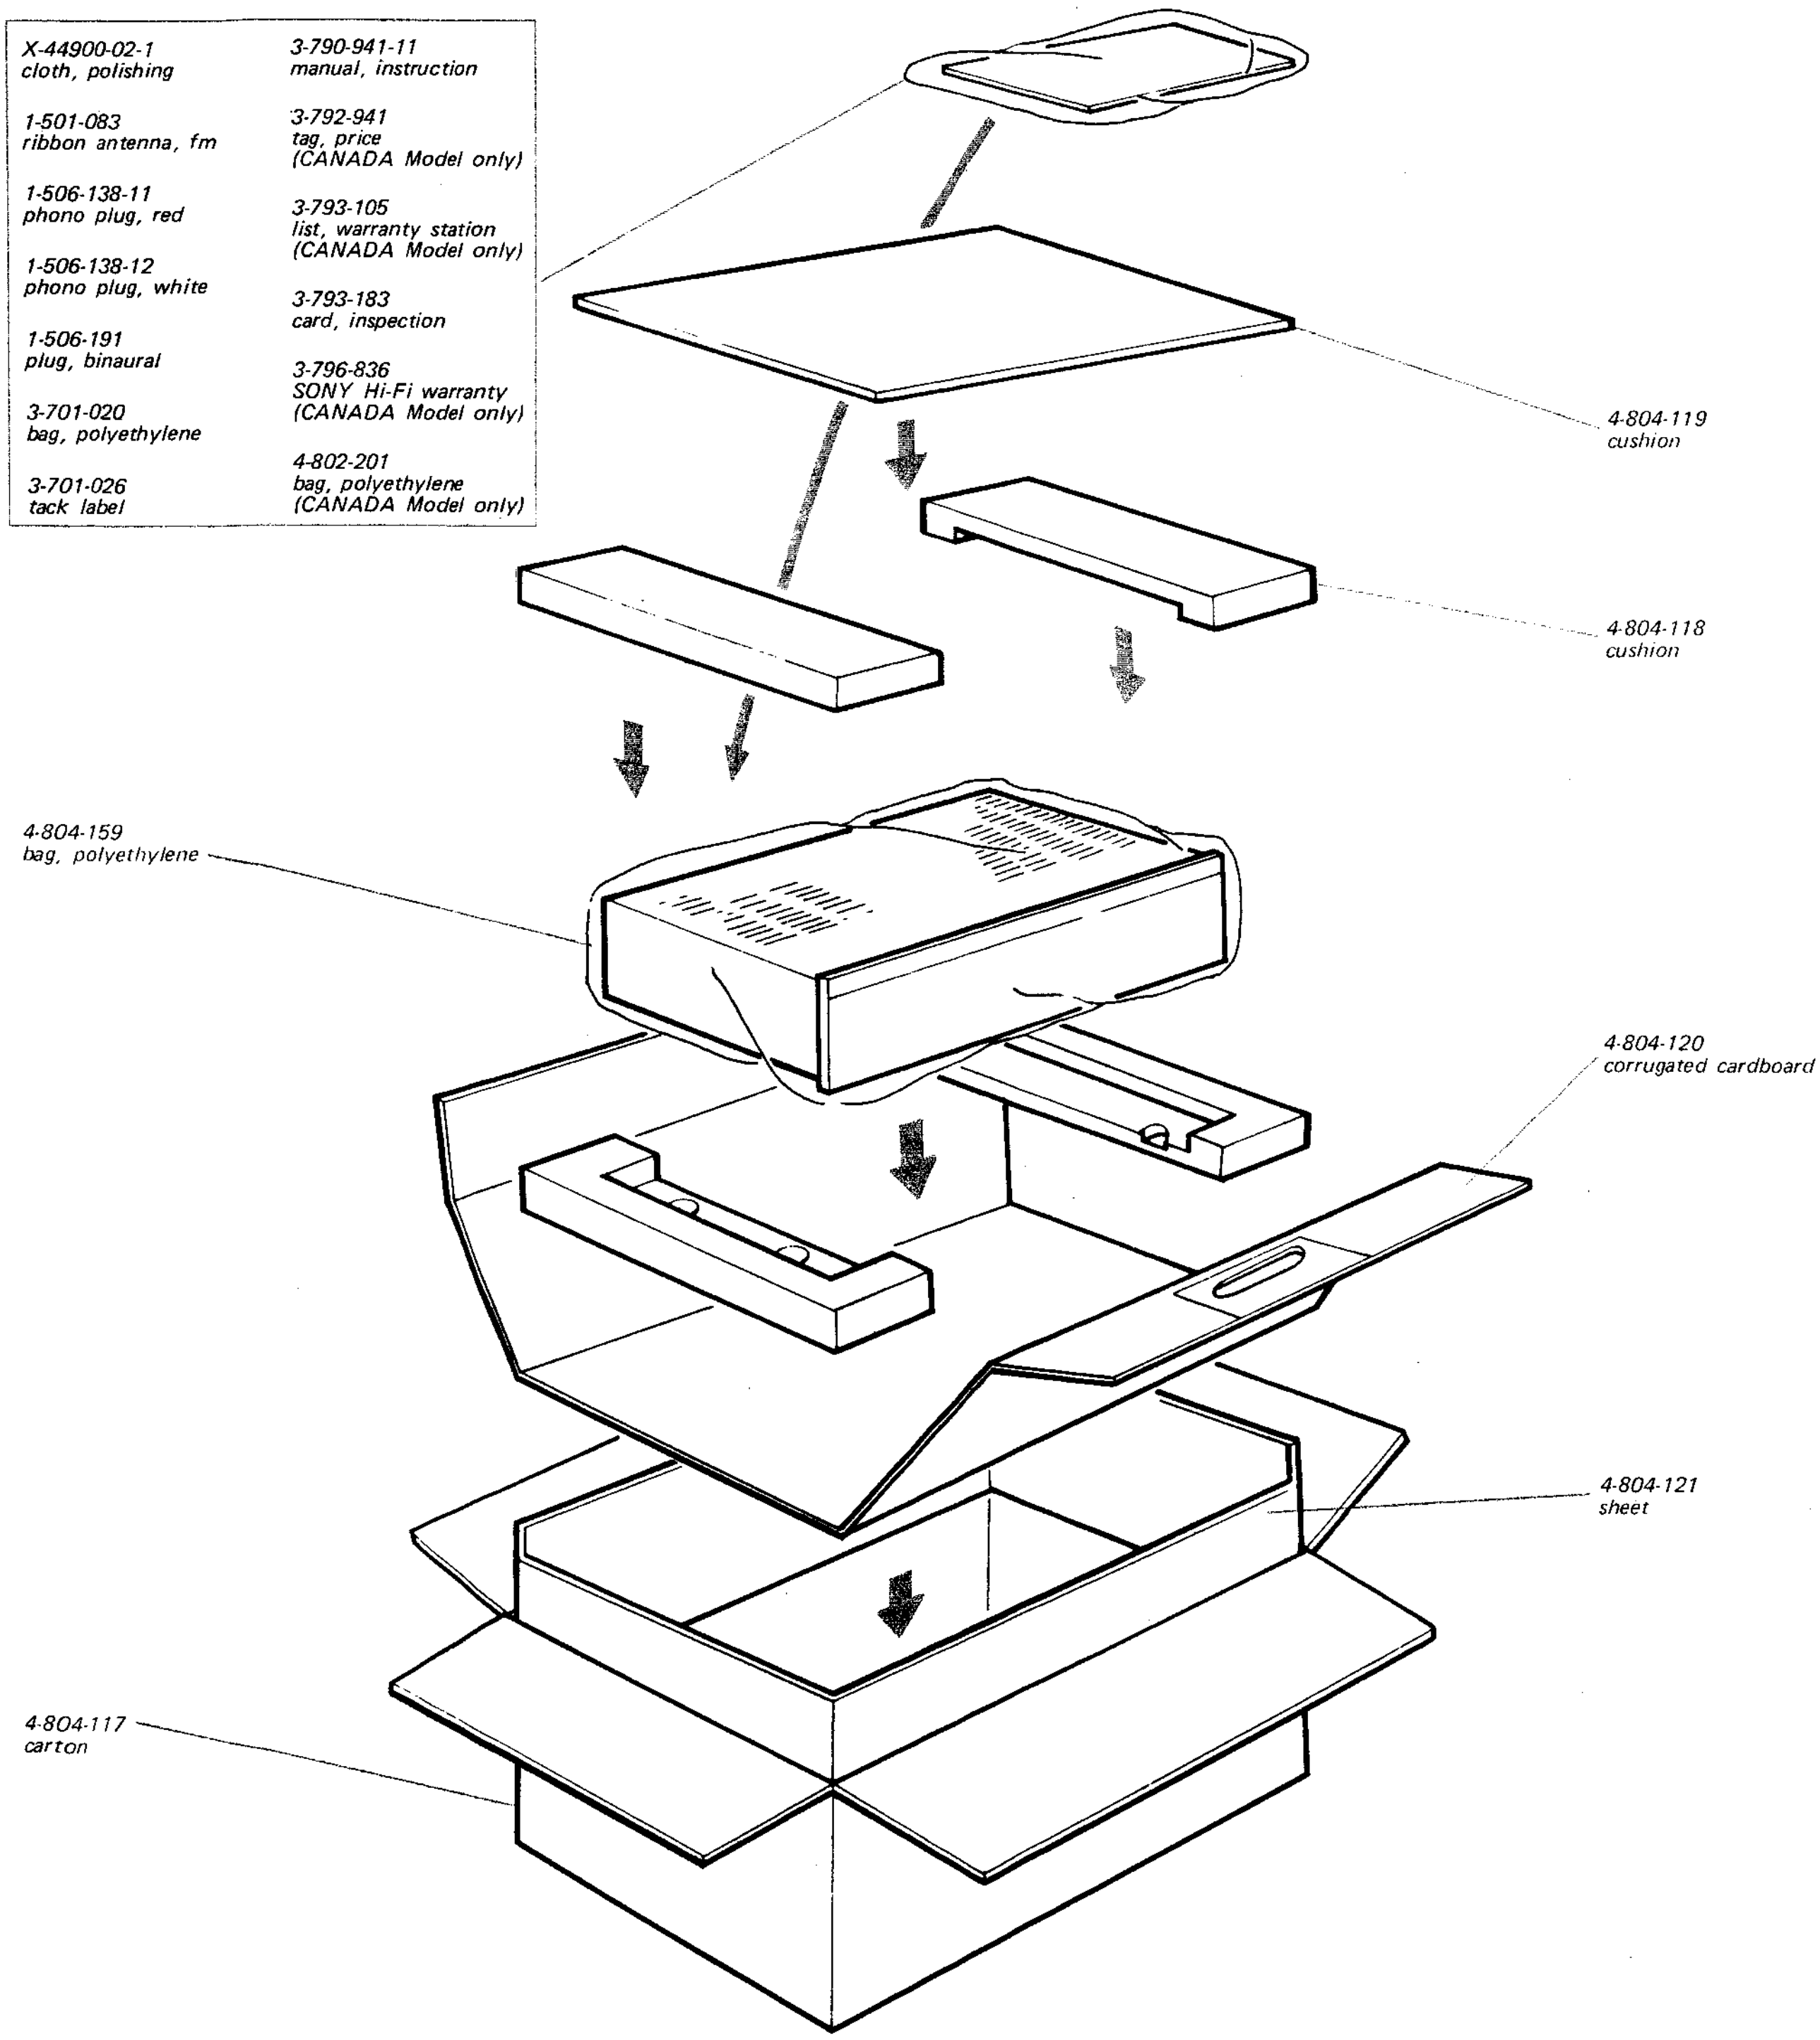

X-44900-02-1	cloth, polishing
1-501-083	ribbon antenna, fm
1-506-138-11	phono plug, red
1-506-138-12	phono plug, white
1-506-191	plug, binaural
3-701-020	bag, polyethylene
3-701-026	tack label
3-790-941-11	manual, instruction
3-792-941	tag, price (CANADA Model only)
3-793-105	list, warranty station (CANADA Model only)
3-793-183	card, inspection
3-796-836	SONY Hi-Fi warranty (CANADA Model only)
4-802-201	bag, polyethylene (CANADA Model only)

4-804-119
cushion
4-804-118
cushion
4-804-159
bag, polyethylene
4-804-120
corrugated cardboard
4-804-121
sheet
4-804-117
carton

Fig. 4-1. Repacking

SECTION 5
DIAGRAMS

MOUNTING DIAGRAM —Loudness Control Board —

— Conductor Side —

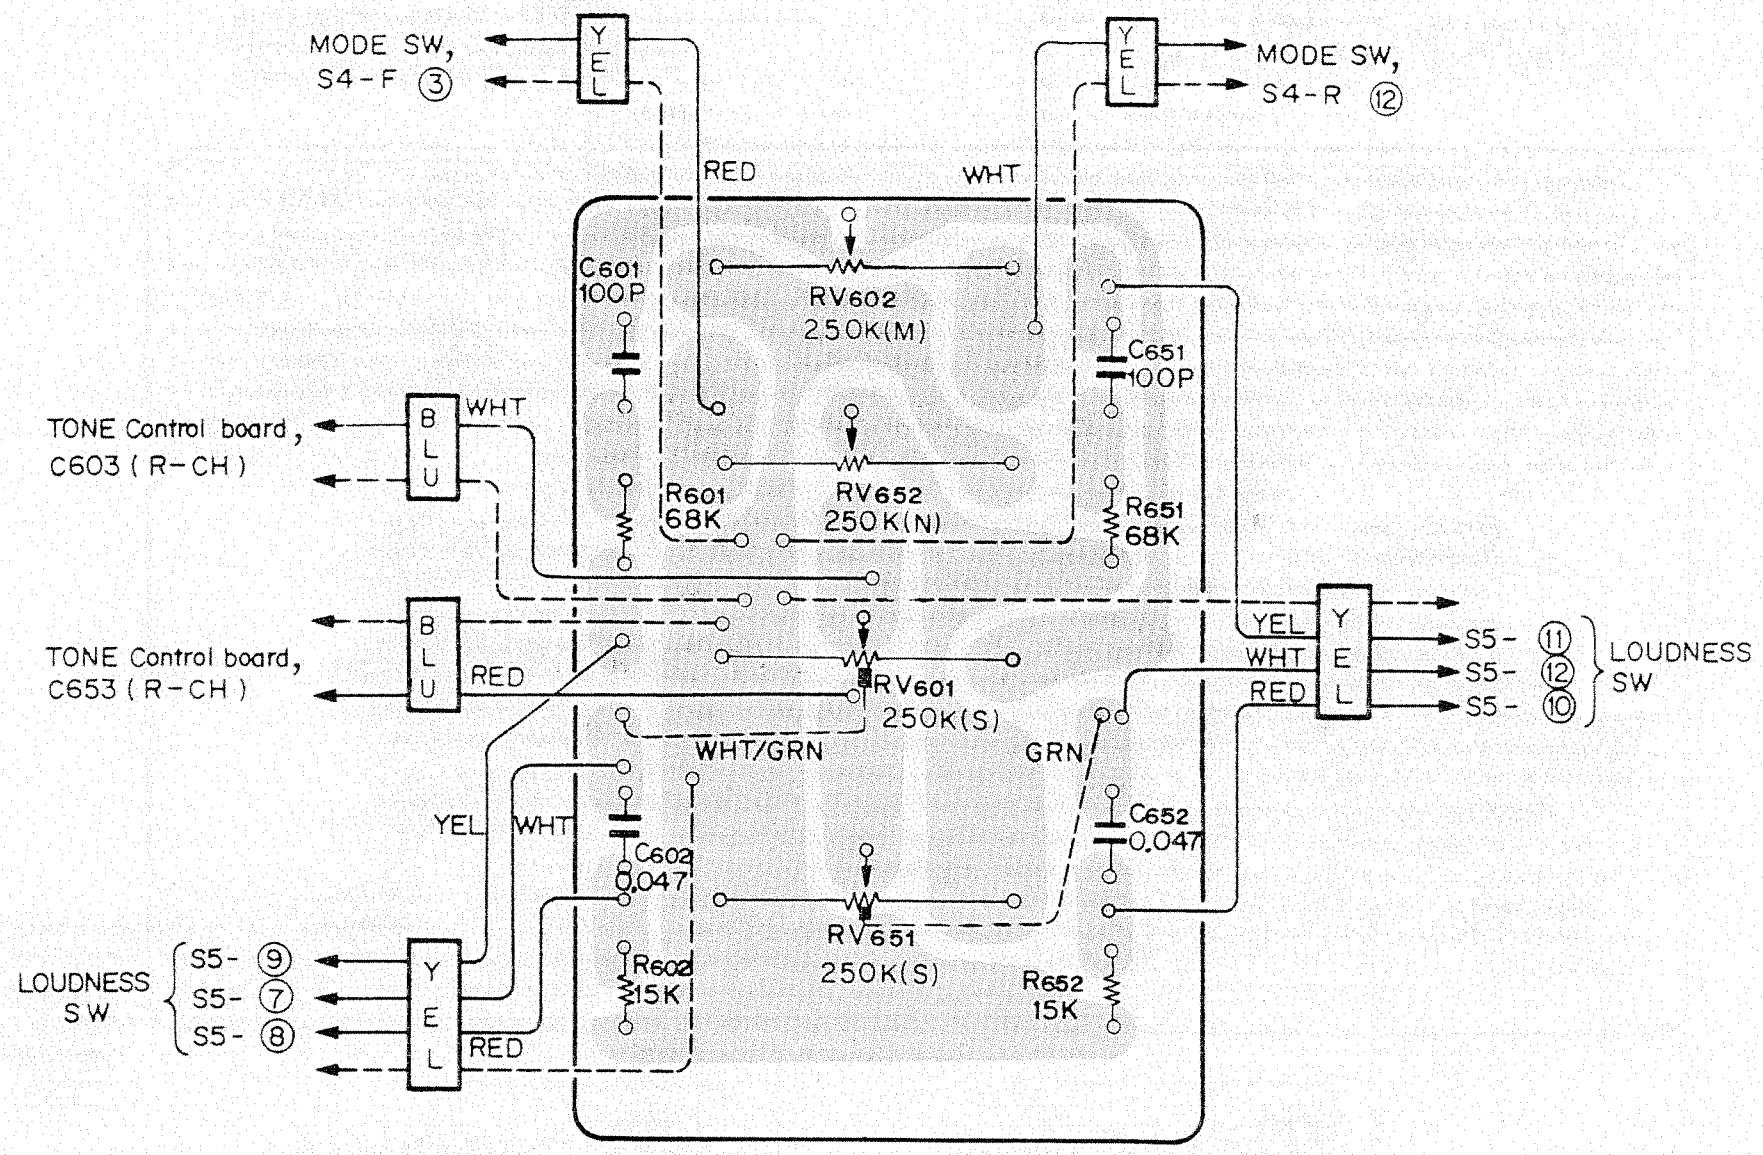
MODE SW,
S4-F ③
YEL
YEL
MODE SW,
S4-R ⑫
RED
WHT
C601
100P
RV602
250K(M)
C651
100P
TONE Control board,
C603 (R-CH)
BLU
WHT
RV652
250K(N)
R601
68K
R651
68K
TONE Control board,
C653 (R-CH)
BLU
RED
RV601
250K(S)
YEL
WHT
RED
YEL
S5- ⑪
S5- ⑫
S5- ⑩
LOUDNESS
SW
WHT/GRN
GRN
YEL
WHT
C602
0.047
C652
0.047
RV651
250K(S)
LOUDNESS
SW
S5- ⑨
S5- ⑦
S5- ⑧
YEL
RED
R602
15K
R652
15K

— Component Side —

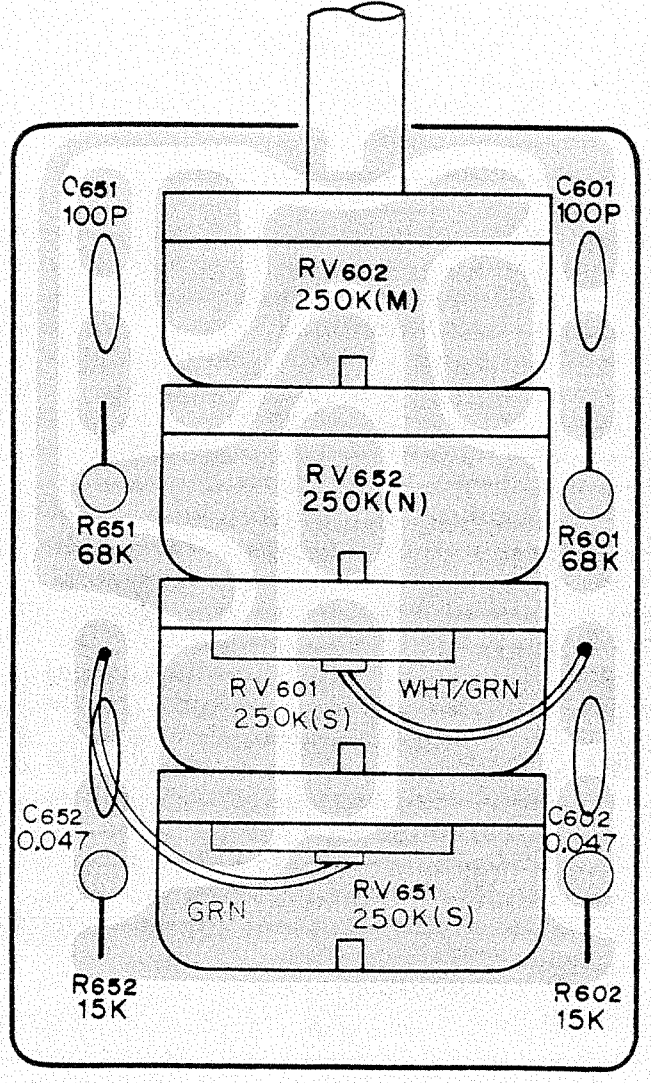
C651
100P
C601
100P
RV602
250K(M)
RV652
250K(N)
R651
68K
R601
68K
RV601
250K(S)
WHT/GRN
C652
0.047
C602
0.047
RV651
250K(S)
GRN
R652
15K
R602
15K

MOUNTING DIAGRAM – Equalizer Board –

– Conductor Side –

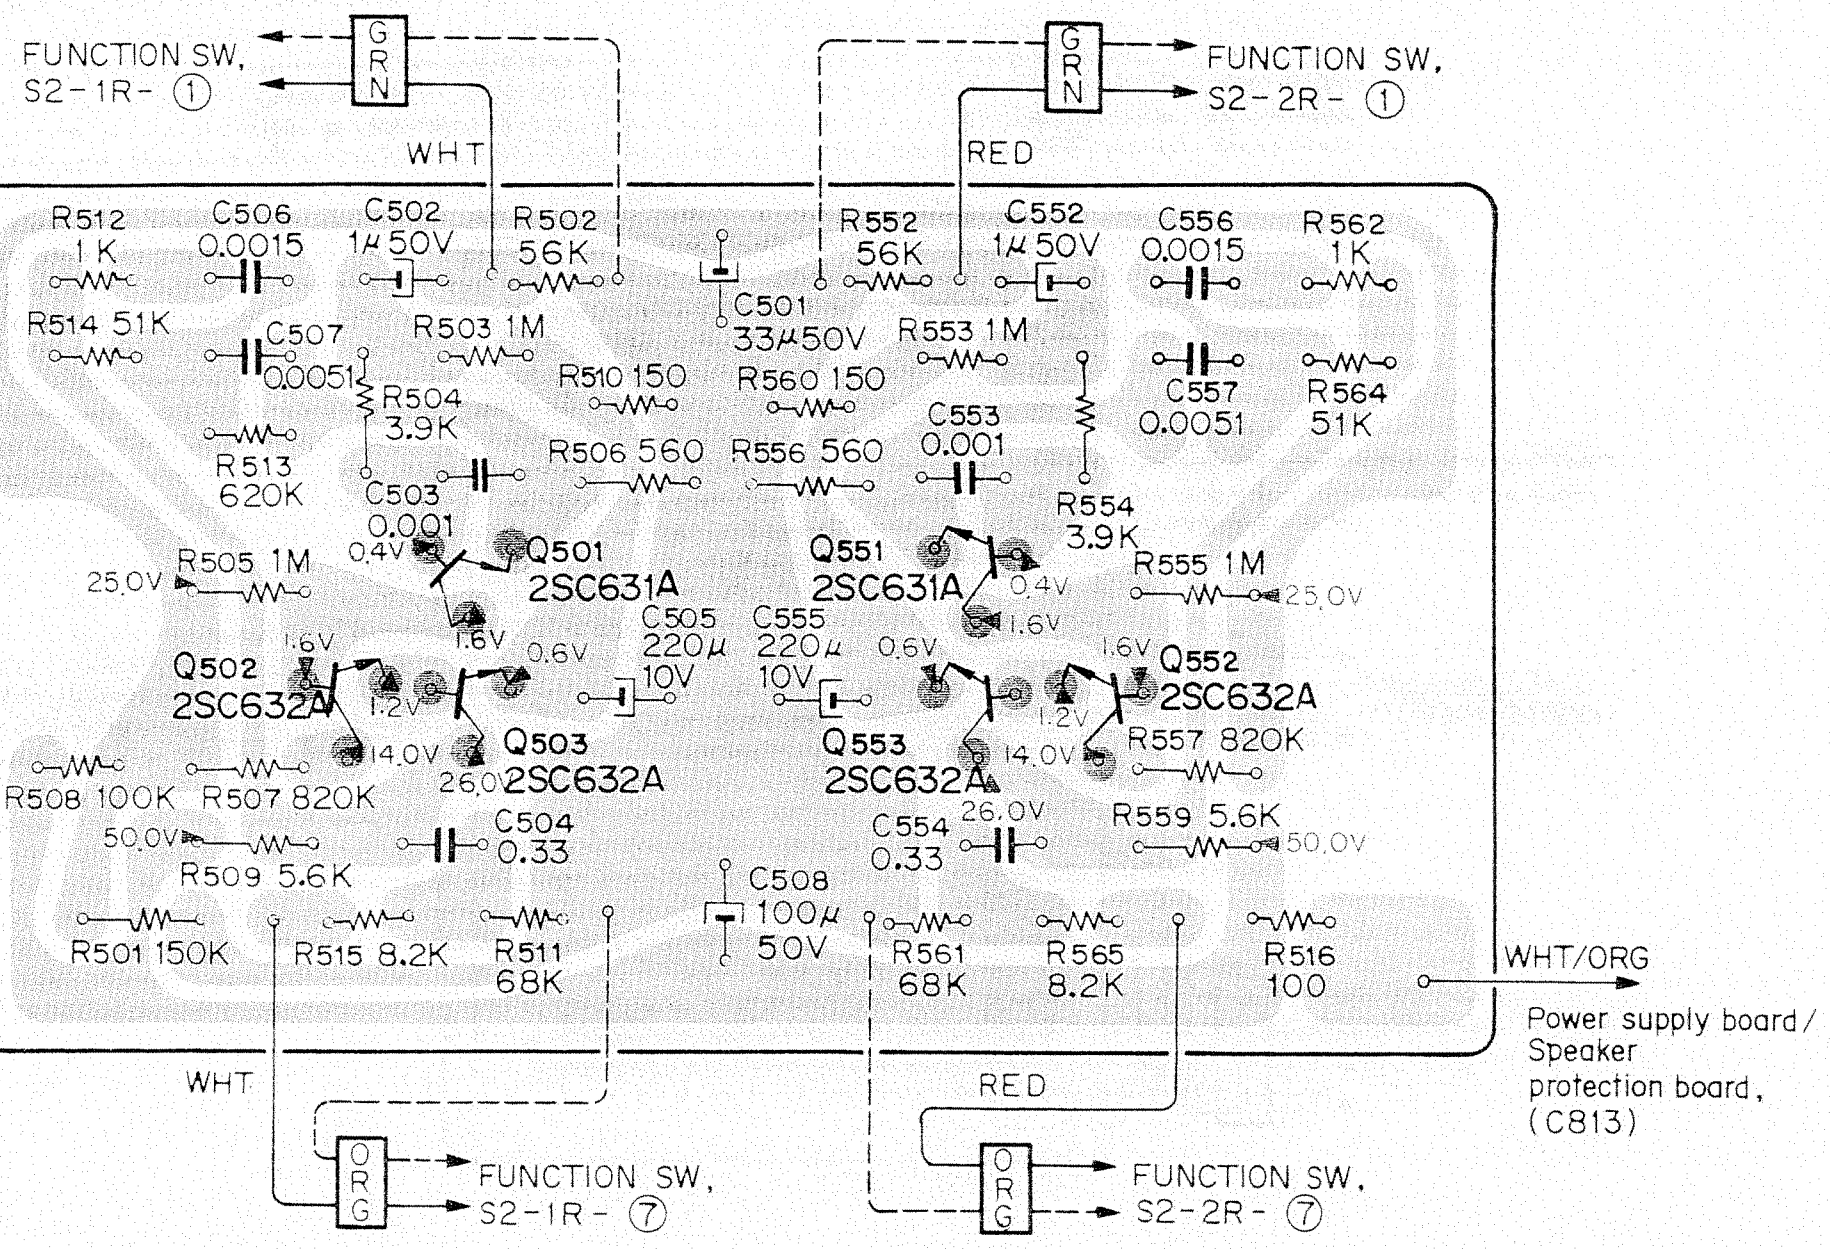
FUNCTION SW, S2-1R- ①
GRN
WHT
RED
FUNCTION SW. S2-2R- ①
R512 1K
C506 0.0015
C502 1µ50V
R502 56K
C501 33µ50V
R552 56K
C552 1µ50V
C556 0.0015
R562 1K
R514 51K
C507 0.0051
R503 1M
R553 1M
C557 0.0051
R564 51K
R504 3.9K
R510 150
R560 150
C553 0.001
R513 620K
C503 0.001
R506 560
R556 560
R554 3.9K
R505 1M
Q501 2SC631A
Q551 2SC631A
R555 1M
25.0V
0.4V
1.6V
0.6V
C505 220µ 10V
C555 220µ 10V
Q502 2SC632A
Q552 2SC632A
1.2V
14.0V
26.0V
Q503 2SC632A
Q553 2SC632A
R557 820K
R508 100K
R507 820K
50.0V
R509 5.6K
C504 0.33
C554 0.33
R559 5.6K
C508 100µ 50V
R501 150K
R515 8.2K
R511 68K
R561 68K
R565 8.2K
R516 100
WHT/ORG
Power supply board/ Speaker protection board, (C813)
ORG
FUNCTION SW, S2-1R- ⑦
FUNCTION SW, S2-2R- ⑦

– Component Side –

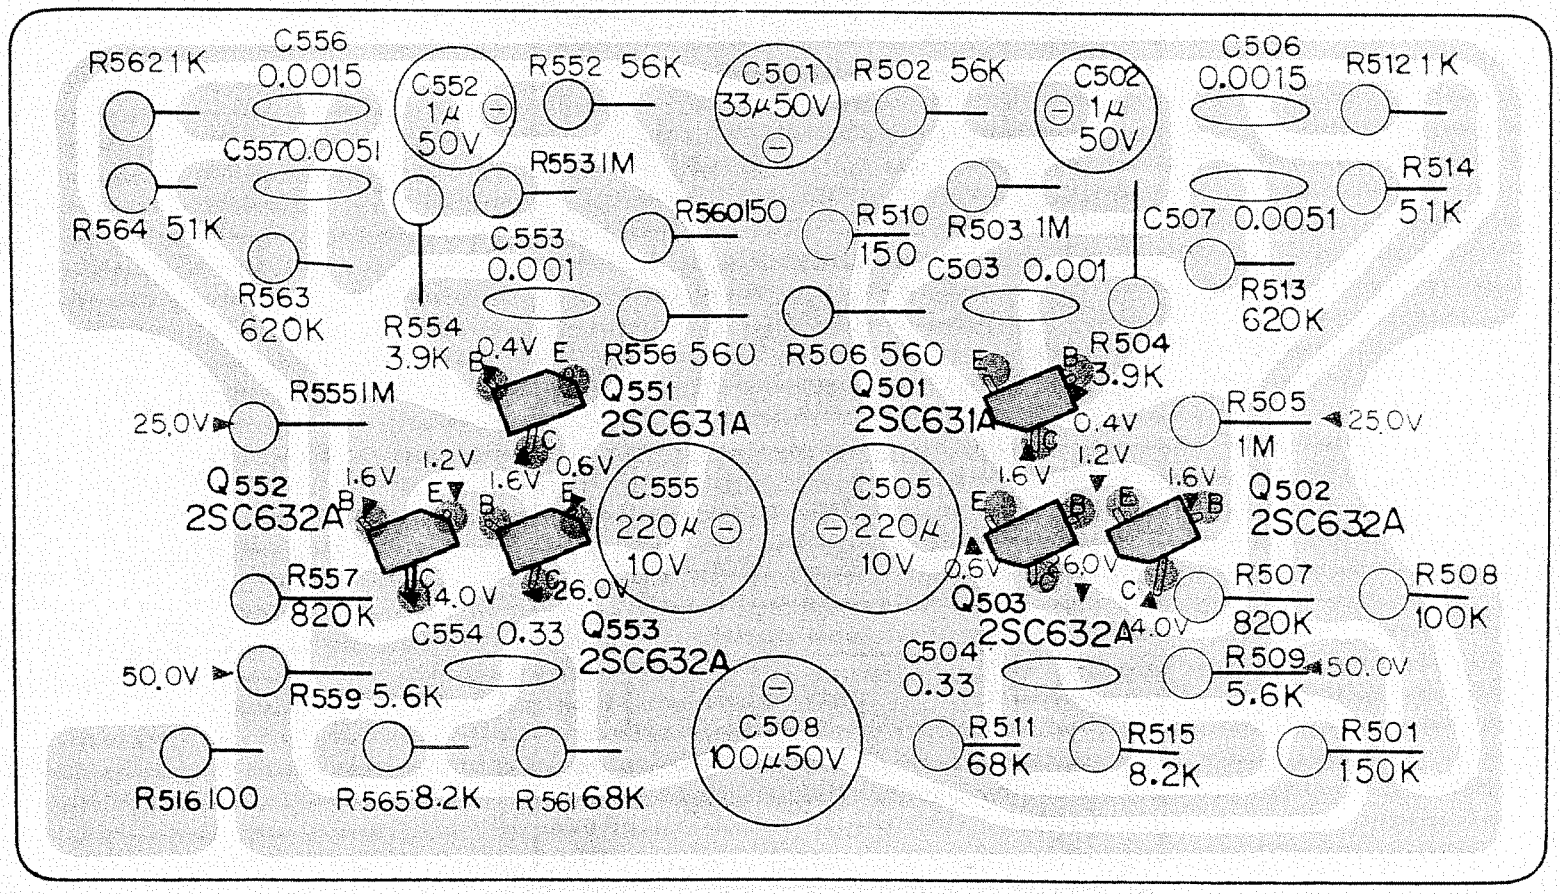
R562 1K
C556 0.0015
C552 1µ 50V
R552 56K
C501 33µ50V
R502 56K
C502 1µ 50V
C506 0.0015
R512 1K
C557 0.0051
R553 1M
R514 51K
R564 51K
C553 0.001
R560 150
R510 150
R503 1M
C503 0.001
C507 0.0051
R563 620K
R513 620K
R554 3.9K
R556 560
R506 560
R504 3.9K
R555 1M
Q551 2SC631A
Q501 2SC631A
R505 1M
25.0V
0.4V
1.2V
1.6V
0.6V
Q552 2SC632A
C555 220µ 10V
C505 220µ 10V
Q502 2SC632A
R557 820K
14.0V
26.0V
Q503 2SC632A
R507 820K
R508 100K
C554 0.33
Q553 2SC632A
C504 0.33
R509 5.6K
50.0V
R559 5.6K
C508 100µ50V
R511 68K
R515 8.2K
R501 150K
R516 100
R565 8.2K
R561 68K
E
B
C

MOUNTING DIAGRAM – Fm Front End –

– Conductor Side –

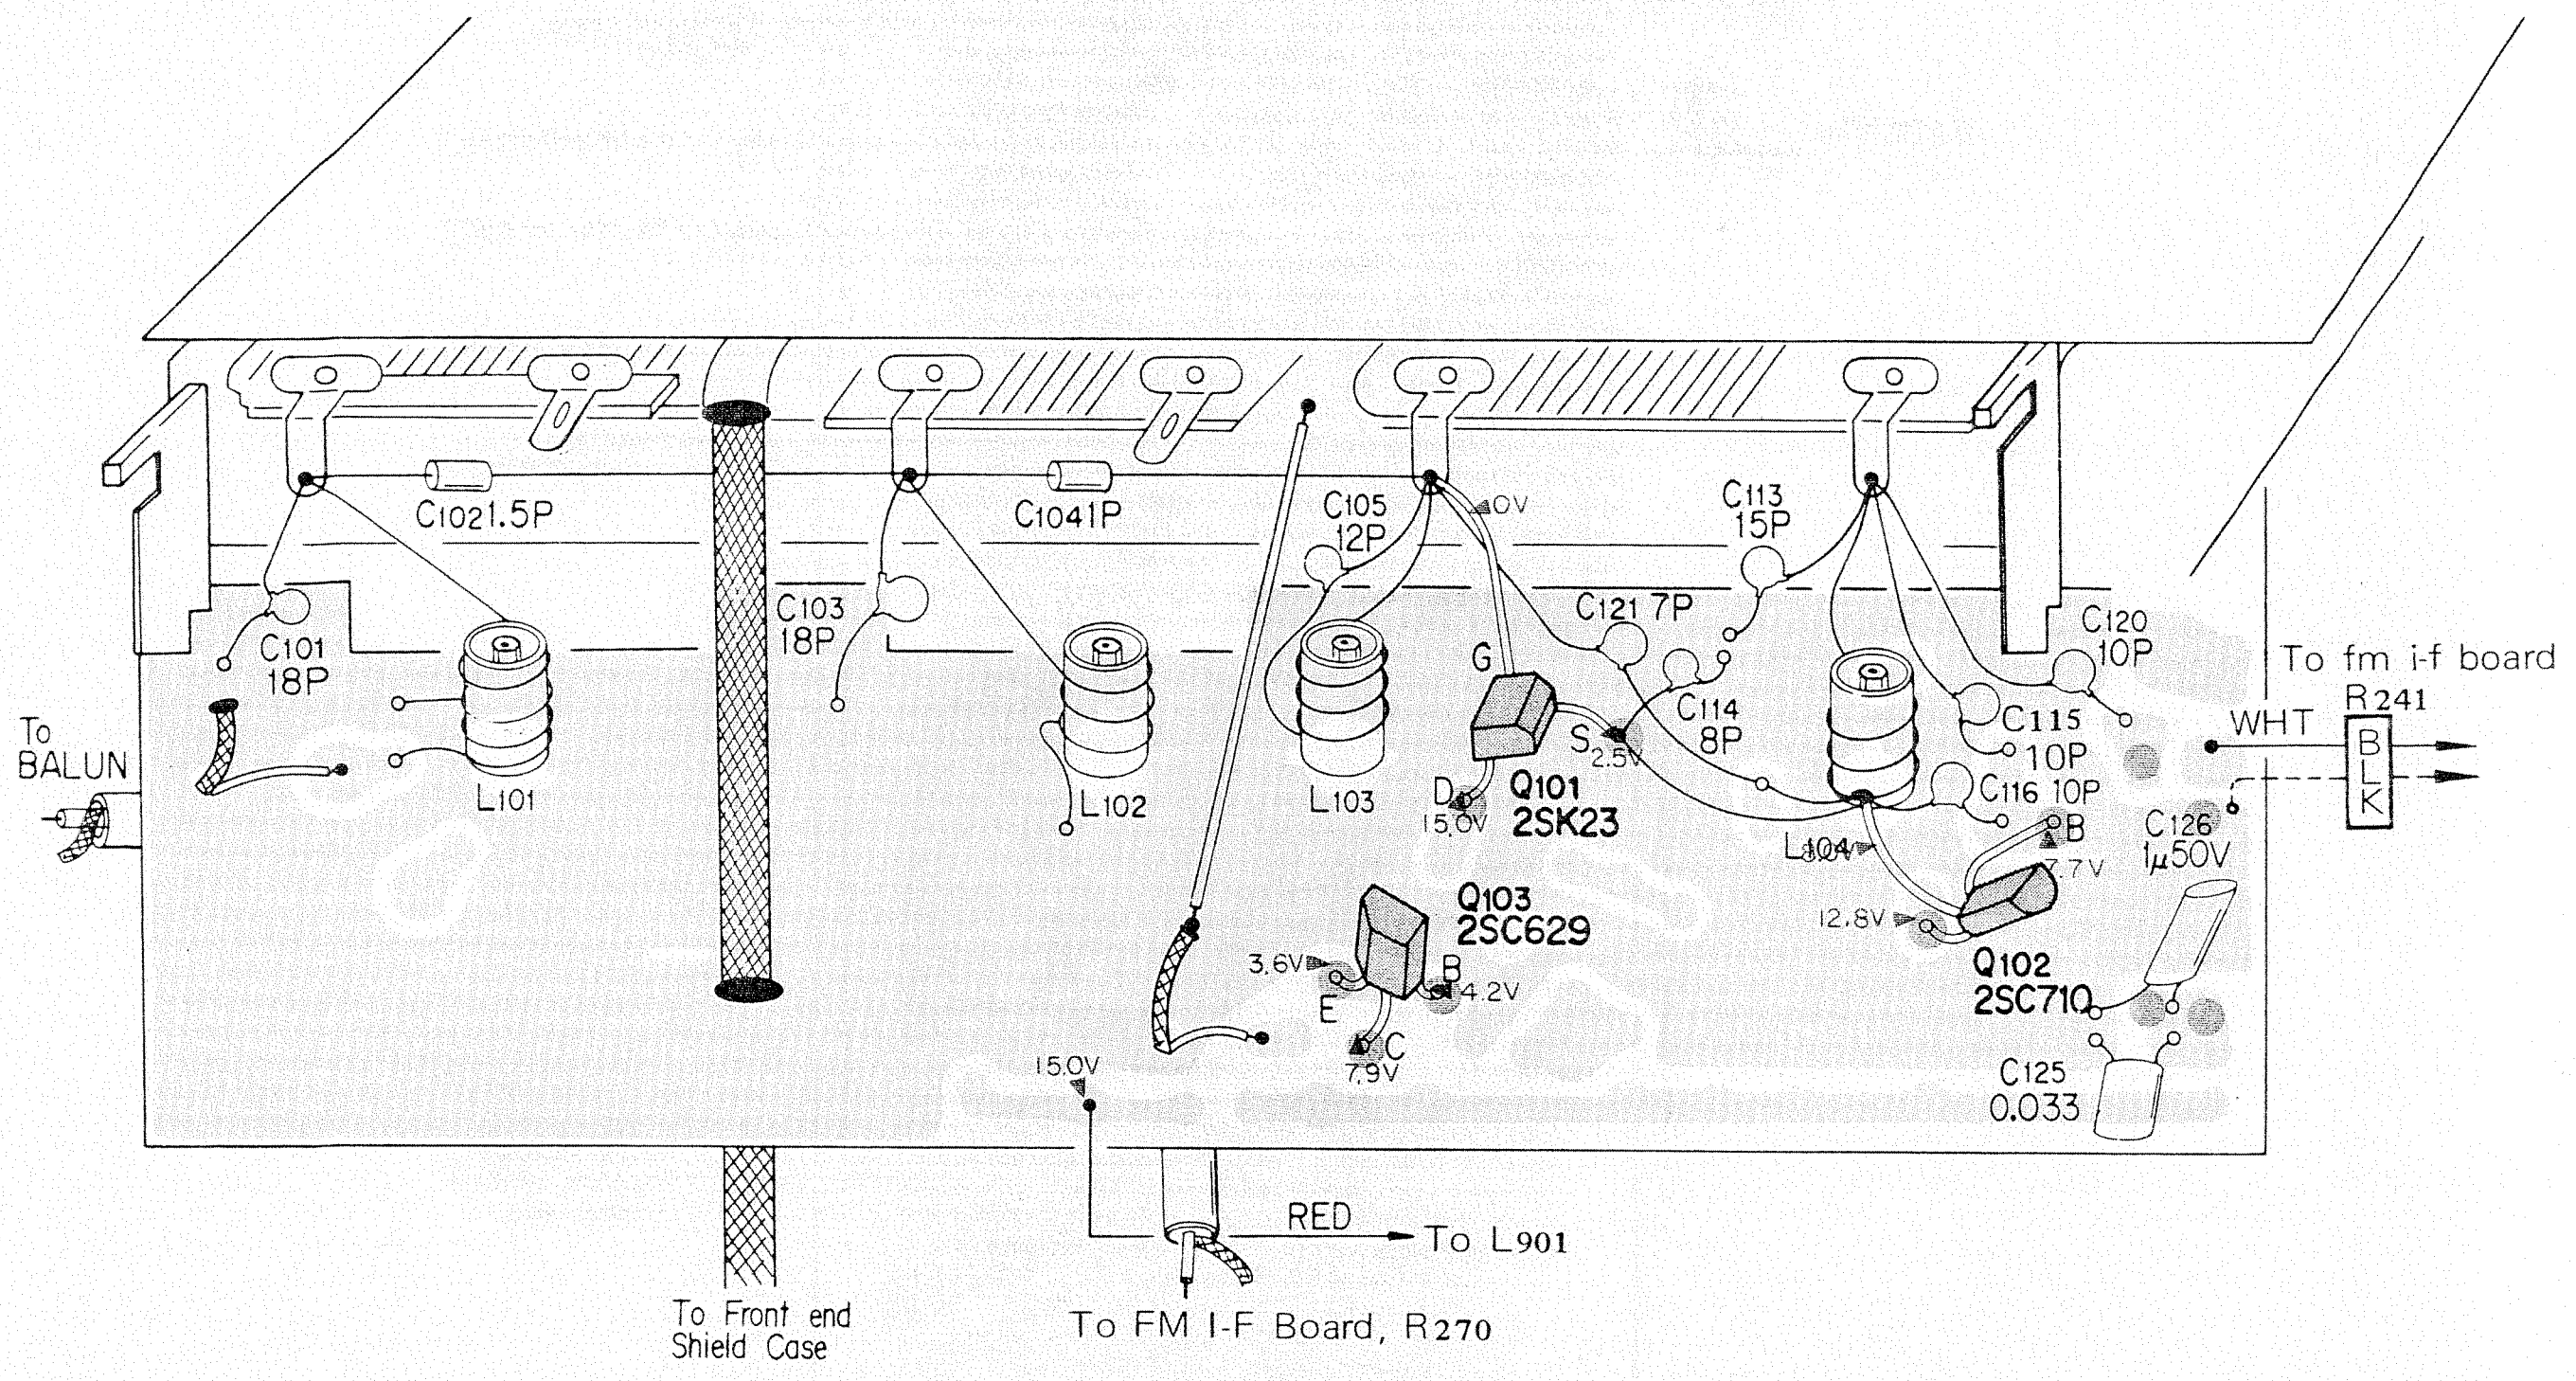
C102 1.5P
C104 1P
C105 12P
0V
C113 15P
C101 18P
C103 18P
C121 7P
C120 10P
To fm i-f board
R241
WHT
B L K
To BALUN
L101
L102
L103
G
S 2.5V
D 15.0V
Q101 2SK23
C114 8P
C115 10P
C116 10P
B 7.7V
C126 1μ50V
L104
12.8V
Q102 2SC710
Q103 2SC629
3.6V
E
B 4.2V
C 7.9V
15.0V
C125 0.033
RED
To L901
To Front end Shield Case
To FM I-F Board, R270

– Component Side –

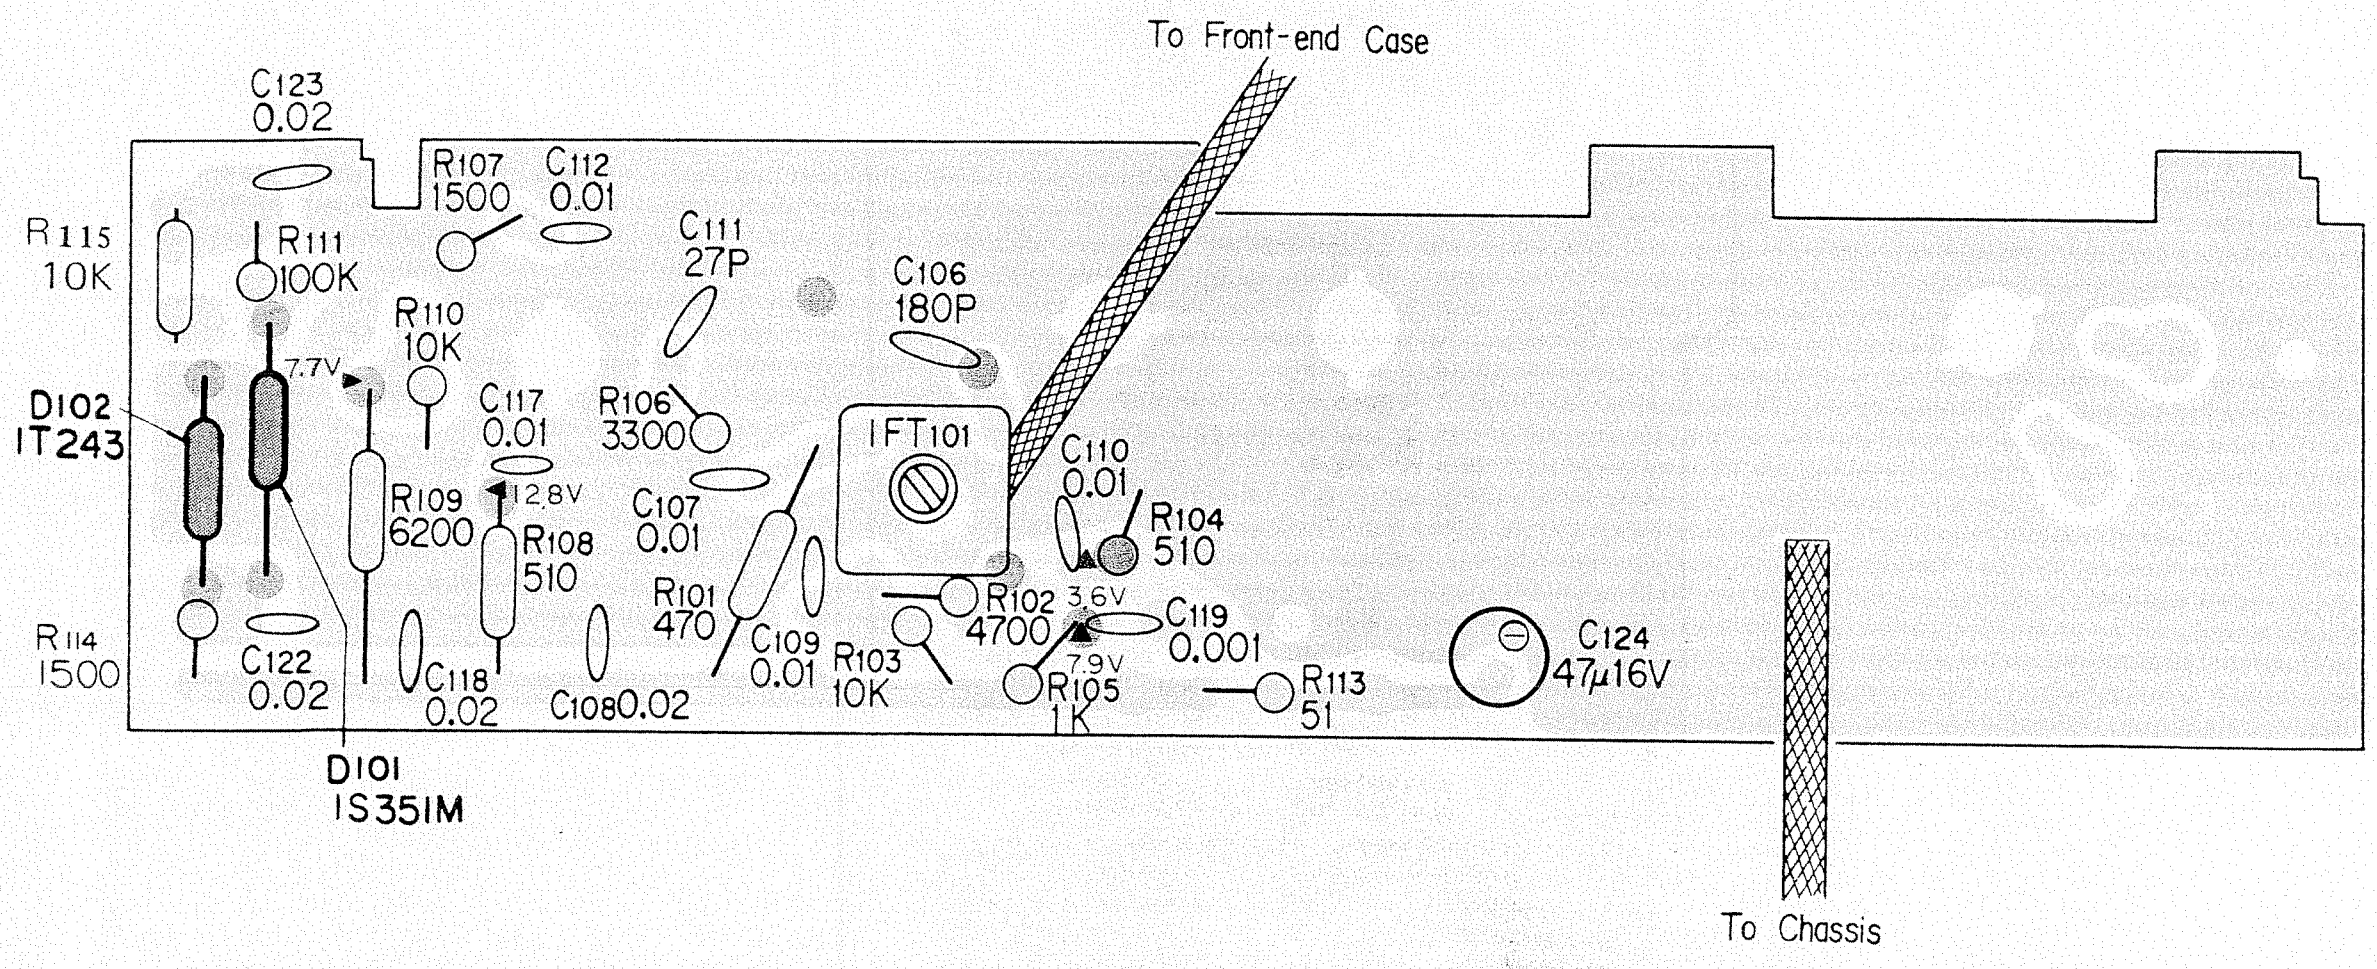
To Front-end Case
C123 0.02
R107 1500
C112 0.01
R115 10K
R111 100K
C111 27P
C106 180P
R110 10K
D102 IT243
7.7V
C117 0.01
R106 3300
IFT101
C110 0.01
R104 510
R109 6200
12.8V
R108 510
C107 0.01
R101 470
R102 4700
3.6V
C119 0.001
R114 1500
C122 0.02
C118 0.02
C108 0.02
C109 0.01
R103 10K
7.9V
R105 1K
R113 51
C124 47μ16V
D101 IS351M
To Chassis

MOUNTING DIAGRAM – Fm I-f Board –

– Conductor Side –

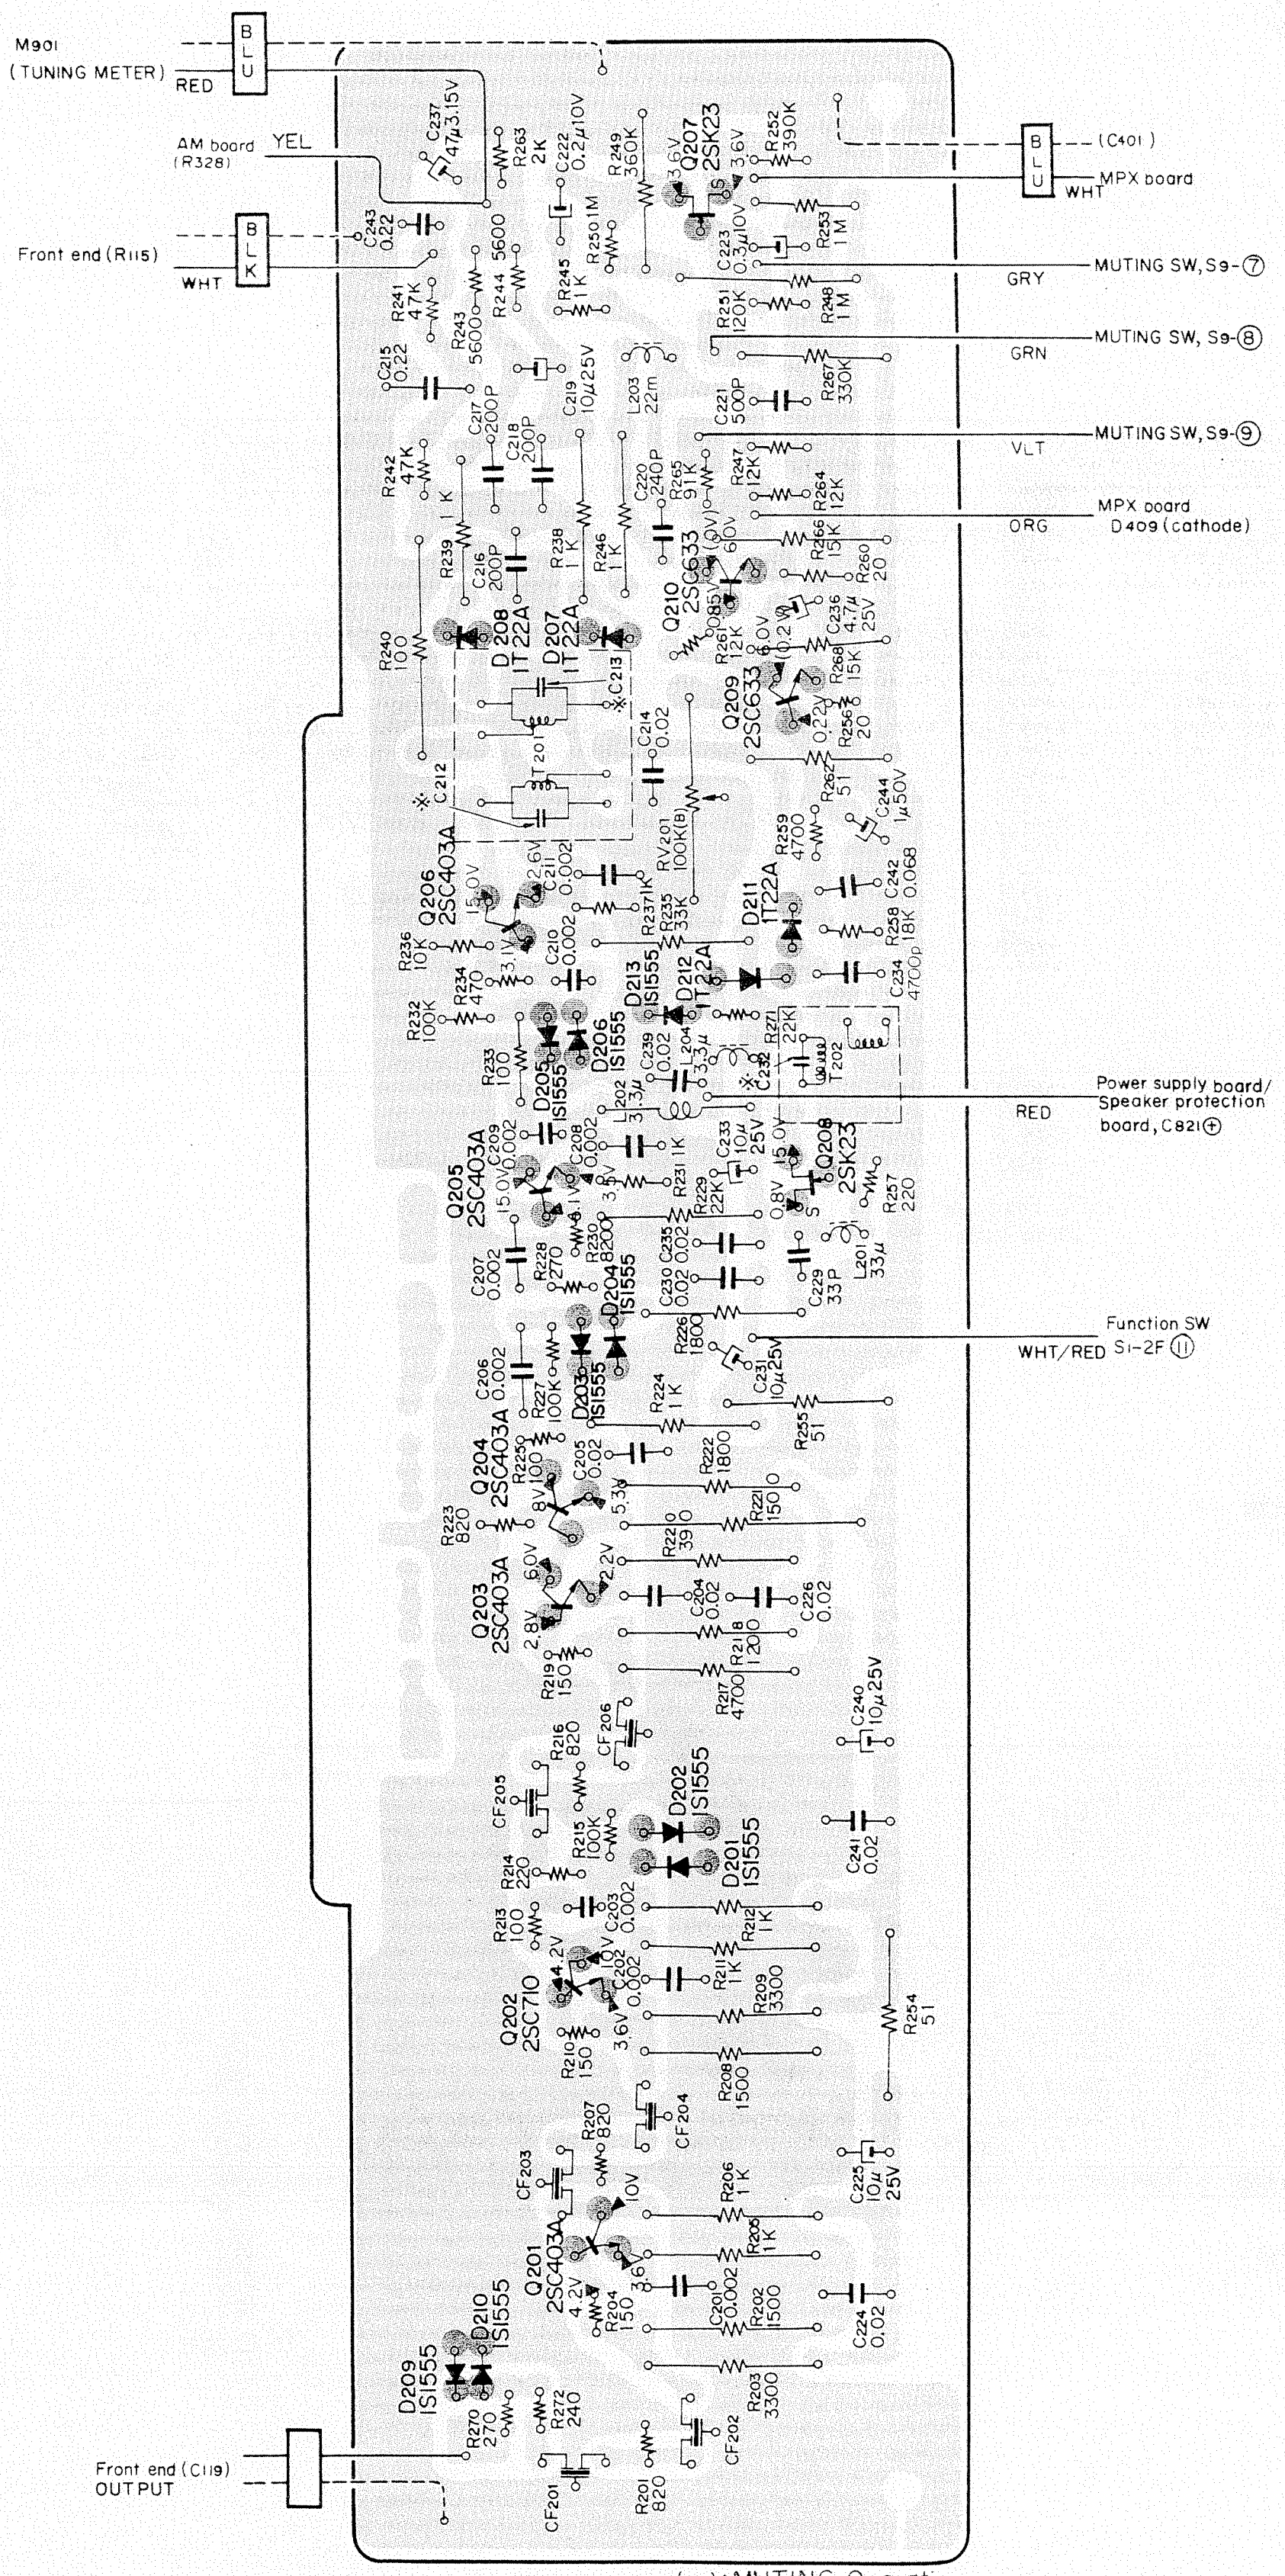
M901
(TUNING METER)
RED
BLU
AM board
(R328)
YEL
Front end (R115)
BLK
WHT
(C401)
BLU
WHT
MPX board
GRY
MUTING SW, S9-⑦
GRN
MUTING SW, S9-⑧
VLT
MUTING SW, S9-⑨
ORG
MPX board
D409 (cathode)
RED
Power supply board/
Speaker protection
board, C821⊕
WHT/RED
Function SW
S1-2F ⑪
Front end (C119)
OUTPUT
Q201 2SC403A
Q202 2SC710
Q203 2SC403A
Q204 2SC403A
Q205 2SC403A
Q206 2SC403A
Q207 2SK23
Q208 2SK23
Q209 2SC633
Q210 2SC633
D201 1S1555
D202 1S1555
D203 1S1555
D204 1S1555
D205 1S1555
D206 1S1555
D207 1T22A
D208 1T22A
D209 1S1555
D210 1S1555
D211 1T22A
D212 1T22A
D213 1S1555
CF201
CF202
CF203
CF204
CF205
CF206
T201
T202
RV201 100K(B)
L201 33μ
L202 3.3μ
L203 22m
L204 3.3μ

( );MUTING Operation

— *Component Side* —

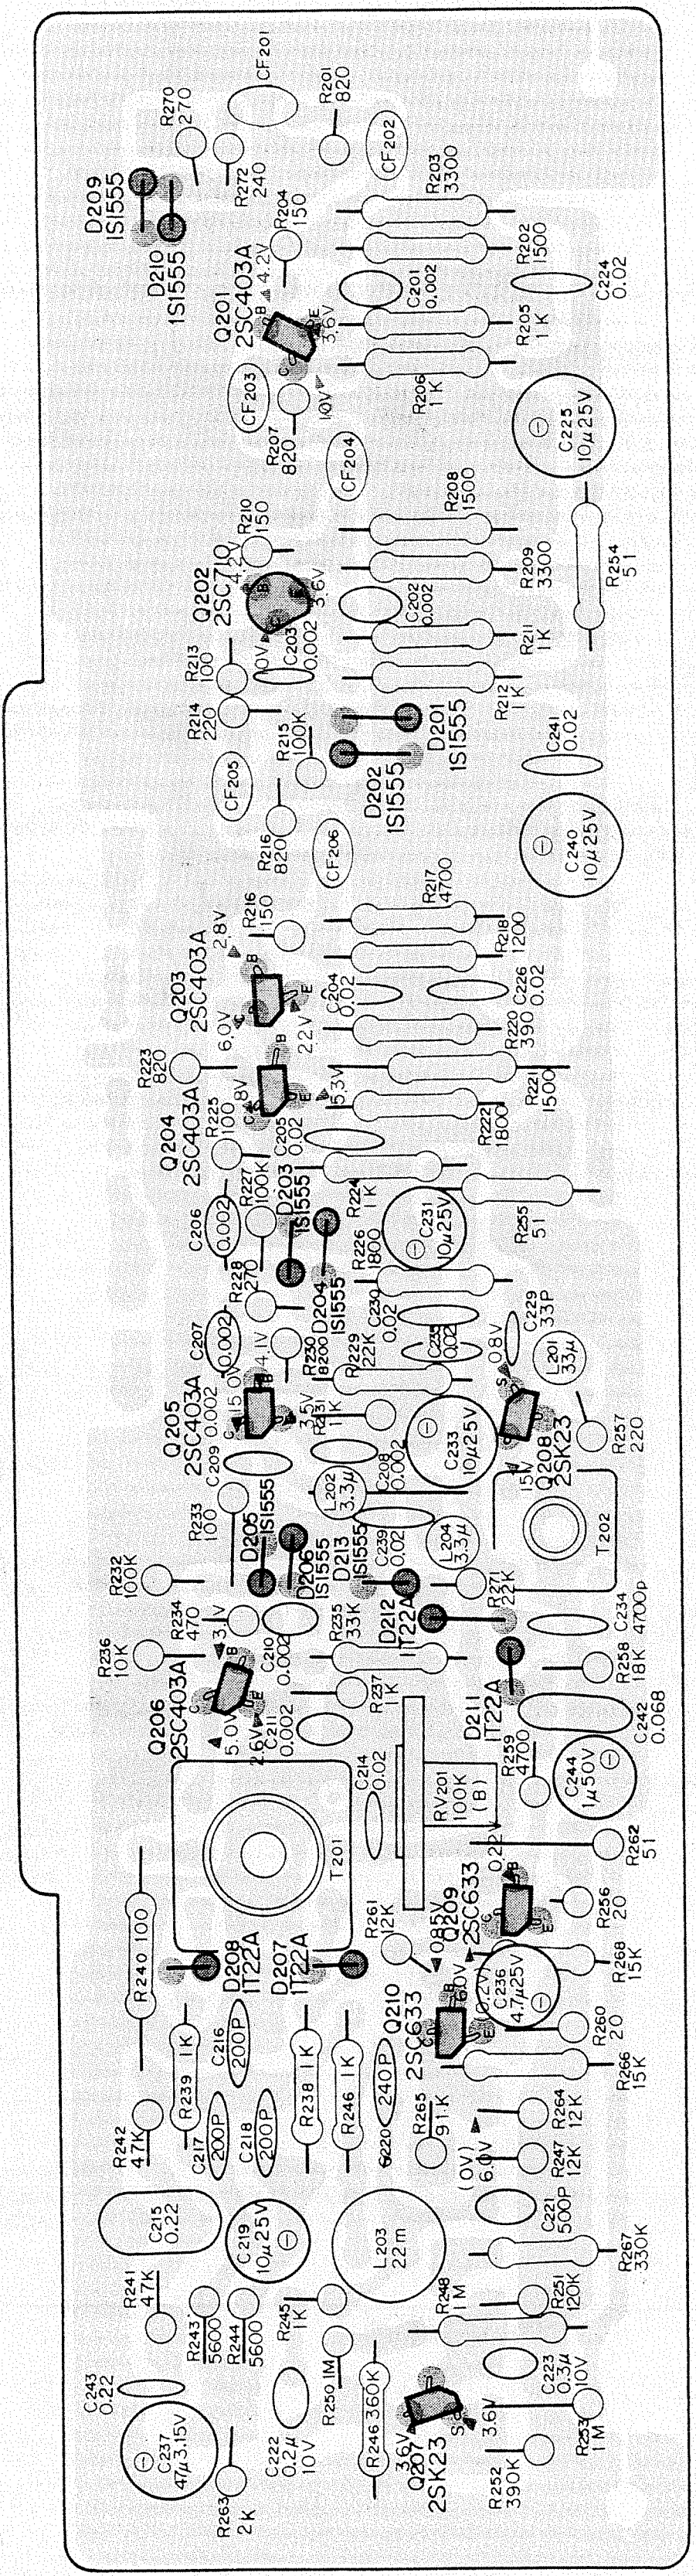
D209 1S1555
D210 1S1555
R270 270
R272 240
CF201
R201 820
CF202
R203 3300
R204 150
Q201 2SC403A
C201 0.002
R202 1500
C224 0.02
R205 1K
CF203
R207 820
R206 1K
C225 10μ25V
CF204
R208 1500
R210 150
Q202 2SC710
C202 0.002
C203 0.002
R209 3300
R254 51
R211 1K
R213 100
R214 220
R215 100K
D201 1S1555
D202 1S1555
R212 1K
C241 0.02
CF205
R216 820
CF206
C240 10μ25V
R217 4700
Q203 2SC403A
R216 150
R218 1200
C204 0.02
C226 0.02
R220 390
R223 820
Q204 2SC403A
R225 100
C205 0.02
R221 1500
R222 1800
R227 100K
D203 1S1555
R224 1K
C231 10μ25V
R255 51
C206 0.002
R226 1800
R228 270
D204 1S1555
C207 0.002
R229 22K
C230 0.02
C235 0.02
C229 33P
L201 3.3μ
R230 8200
R231 1K
Q205 2SC403A
C209 0.002
C208 0.002
C233 10μ25V
Q208 2SK23
R257 220
L202 3.3μ
R233 120
D205 1S1555
D206 1S1555
D213 1S1555
C239 0.02
L204 3.3μ
T202
R232 100K
D212 1T22A
R271 22K
R235 33K
R236 10K
R234 470
C210 0.002
R258 18K
C234 4700P
Q206 2SC403A
C211 0.002
R237 1K
D211 1T22A
C246 0.068
R259 4700
C244 1μ50V
C214 0.02
RV201 100K (B)
R262 51
T201
R261 12K
Q209 2SC633
R256 20
R240 100
D208 1T22A
D207 1T22A
Q210 2SC633
C236 4.7μ25V
R268 15K
R260 20
R239 1K
C216 200P
R238 1K
R246 1K
C240 240P
R265 91K
R266 15K
R242 47K
C217 200P
C218 200P
C220
R247 12K
R264 12K
C215 0.22
C219 10μ25V
L203 22m
C221 500P
R267 330K
R241 47K
R243 5600
R244 5600
R245 1K
R248 1M
R251 120K
C243 0.22
R250 1M
C223 0.3μ 10V
C237 47μ3.15V
C222 0.2μ 10V
R246 360K
Q207 2SK23
R253 1M
R263 2K
R252 390K

( );MUTING Operation

MOUNTING DIAGRAM – MPX Board –

– Conductor Side –

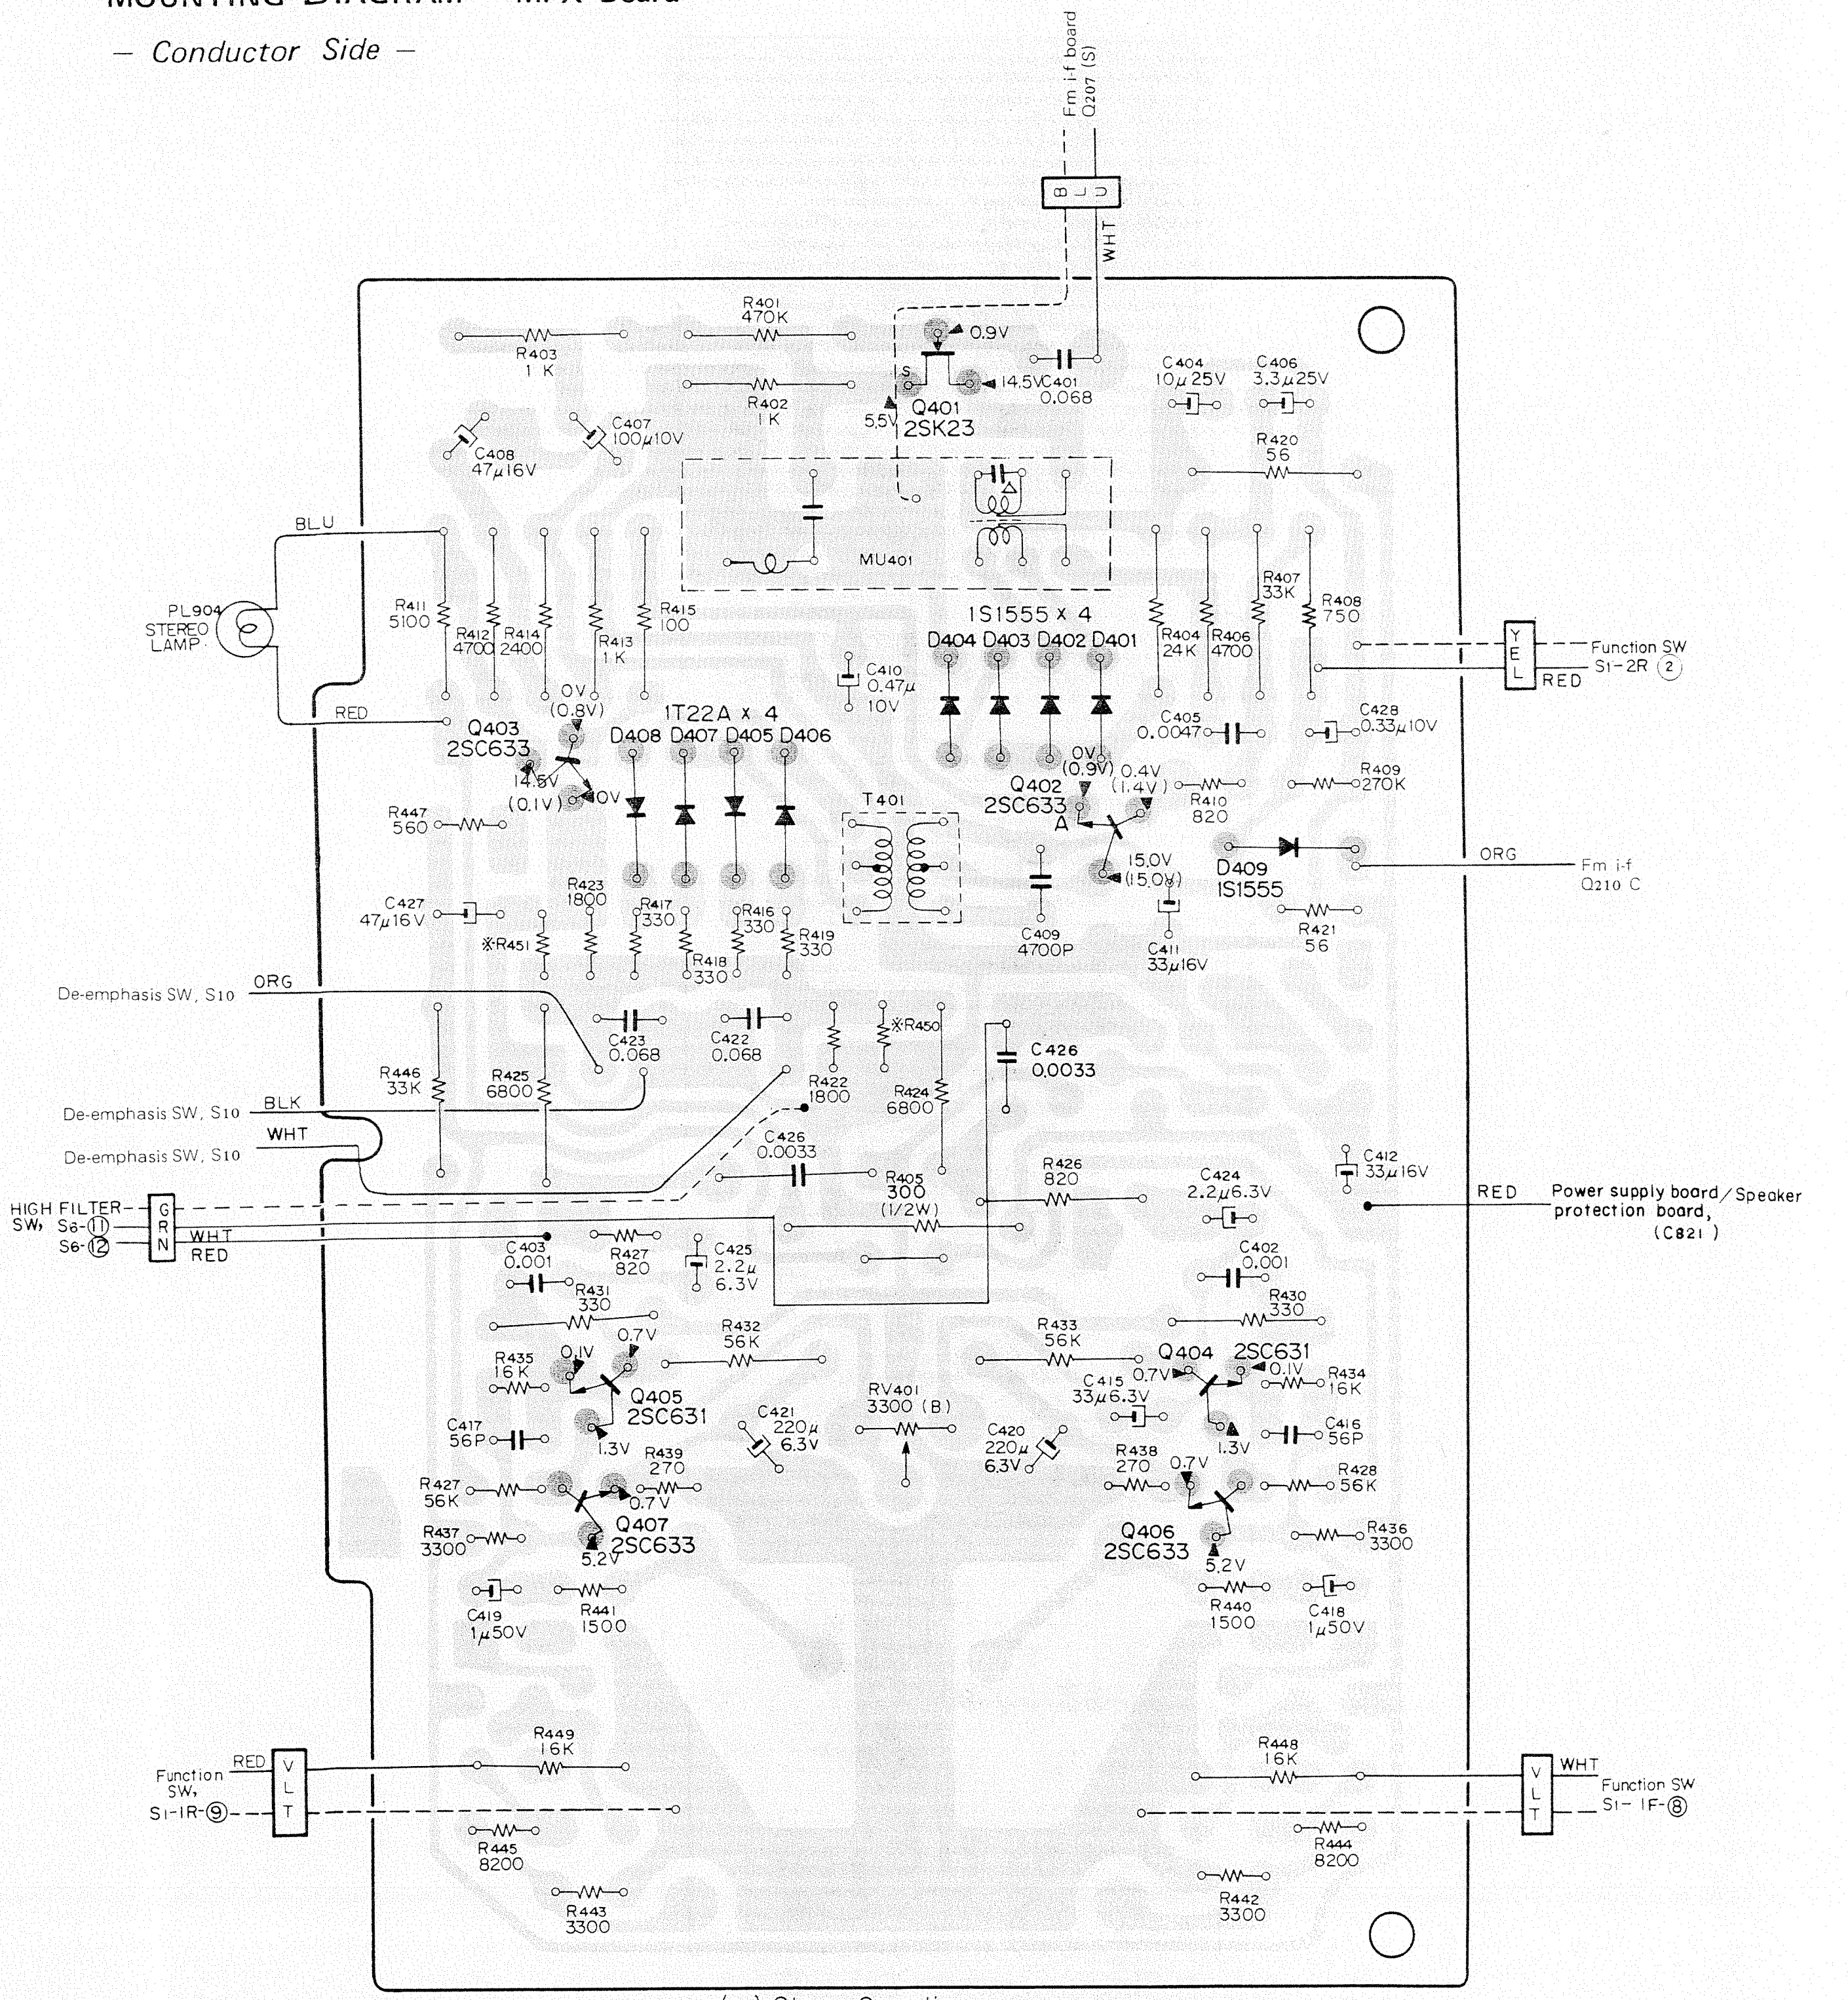
Fm i-f board Q207 (S)
BLU
WHT
R401 470K
R403 1K
R402 1K
0.9V
S
14.5V
5.5V
Q401 2SK23
C401 0.068
C404 10μ25V
C406 3.3μ25V
C407 100μ10V
C408 47μ16V
R420 56
MU401
BLU
PL904 STEREO LAMP
R411 5100
R412 4700
R414 2400
R413 1K
R415 100
R407 33K
R408 750
R404 24K
R406 4700
1S1555 x 4
D404 D403 D402 D401
C410 0.47μ 10V
YEL
Function SW S1-2R ②
RED
RED
Q403 2SC633
0V (0.8V)
14.5V
(0.1V)
0V
1T22A x 4
D408 D407 D405 D406
C405 0.0047
C428 0.33μ10V
0V (0.9V)
0.4V (1.4V)
R409 270K
R410 820
Q402 2SC633
A
R447 560
T401
15.0V (15.0V)
D409 1S1555
ORG
Fm i-f Q210 C
C427 47μ16V
R423 1800
R417 330
R416 330
R419 330
R418 330
※R451
C409 4700P
C411 33μ16V
R421 56
De-emphasis SW, S10
ORG
C423 0.068
C422 0.068
※R450
C426 0.0033
R446 33K
R425 6800
R422 1800
R424 6800
De-emphasis SW, S10
BLK
De-emphasis SW, S10
WHT
C426 0.0033
C412 33μ16V
R405 300 (1/2W)
R426 820
C424 2.2μ6.3V
RED
Power supply board/Speaker protection board, (C821)
HIGH FILTER SW, S6-⑪ S6-⑫
GRN
WHT
RED
C403 0.001
R427 820
C425 2.2μ 6.3V
C402 0.001
R431 330
R430 330
R433 56K
R432 56K
R435 16K
0.1V
0.7V
Q405 2SC631
Q404 2SC631
0.7V
0.1V
R434 16K
C415 33μ6.3V
RV401 3300 (B)
C417 56P
1.3V
C421 220μ 6.3V
C420 220μ 6.3V
1.3V
C416 56P
R439 270
R438 270
0.7V
R428 56K
R427 56K
0.7V
Q407 2SC633
R437 3300
5.2V
Q406 2SC633
5.2V
R436 3300
C419 1μ50V
R441 1500
R440 1500
C418 1μ50V
R449 16K
R448 16K
Function SW, S1-1R-⑨
RED
VLT
VLT
WHT
Function SW S1-1F-⑧
R445 8200
R444 8200
R443 3300
R442 3300

( ); Stereo Operation

– Component Side –

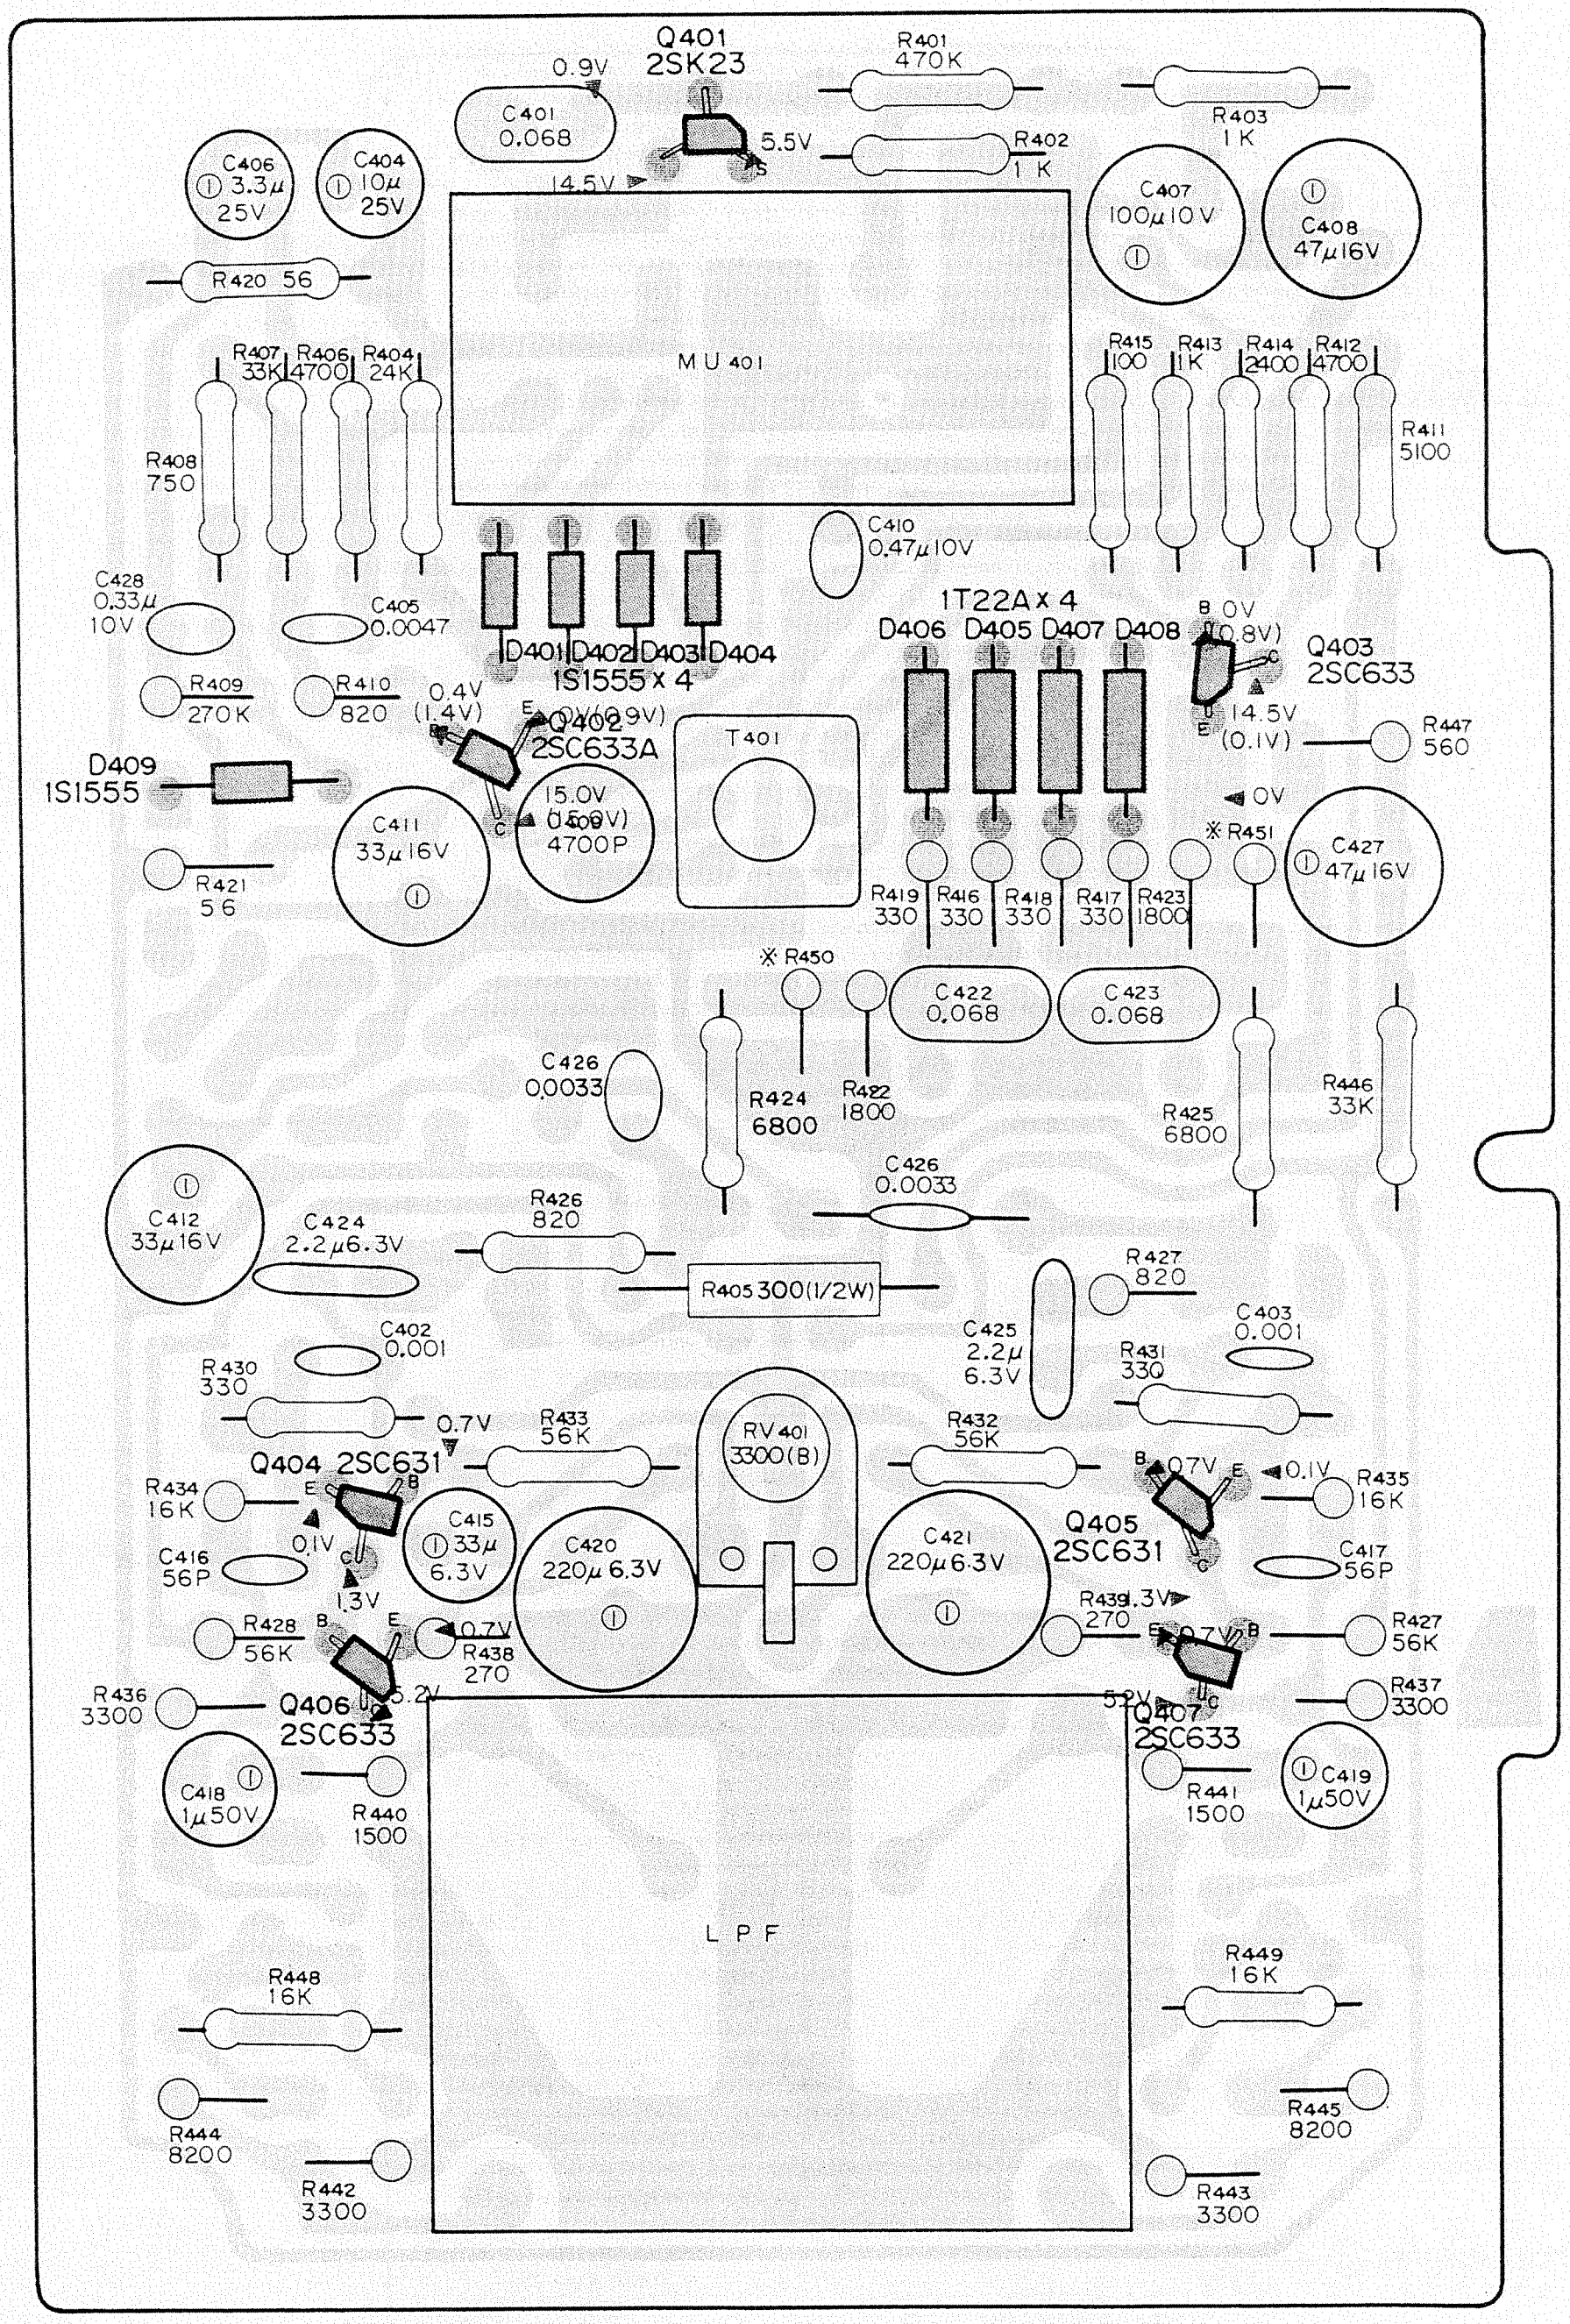
Q401
2SK23
0.9V
5.5V
14.5V
C401
0.068
R401
470K
R402
1K
R403
1K
C406
3.3μ
25V
C404
10μ
25V
C407
100μ10V
C408
47μ16V
R420 56
MU 401
R407
33K
R406
4700
R404
24K
R408
750
R415
100
R413
1K
R414
2400
R412
4700
R411
5100
C410
0.47μ10V
C428
0.33μ
10V
C405
0.0047
D401 D402 D403 D404
1S1555 x 4
1T22A x 4
D406 D405 D407 D408
B 0V
(0.8V)
C
Q403
2SC633
14.5V
(0.1V)
E
R447
560
R409
270K
R410
820
0.4V
(1.4V)
E
0V(0.9V)
Q402
2SC633A
B
C
T401
D409
1S1555
C411
33μ16V
15.0V
(15.0V)
C409
4700P
0V
※R451
C427
47μ16V
R421
56
R419
330
R416
330
R418
330
R417
330
R423
1800
※R450
C422
0.068
C423
0.068
C426
0.0033
R424
6800
R422
1800
R425
6800
R446
33K
C412
33μ16V
C424
2.2μ6.3V
R426
820
C426
0.0033
R405 300(1/2W)
R427
820
C402
0.001
C425
2.2μ
6.3V
C403
0.001
R430
330
R431
330
0.7V
R433
56K
RV401
3300(B)
R432
56K
Q404 2SC631
B 0.7V E
0.1V
R435
16K
R434
16K
E
C
B
0.1V
C415
33μ
6.3V
C420
220μ6.3V
C421
220μ6.3V
Q405
2SC631
C
C416
56P
C417
56P
1.3V
R428
56K
E
0.7V
R438
270
R439 1.3V
270
E 0.7V B
R427
56K
R436
3300
Q406
2SC633
5.2V
5.2V
Q407
2SC633
R437
3300
C418
1μ50V
R440
1500
R441
1500
C419
1μ50V
LPF
R448
16K
R449
16K
R444
8200
R445
8200
R442
3300
R443
3300

( ); Stereo Operation

MOUNTING DIAGRAM — A-m I-f Board —

— Conductor Side —

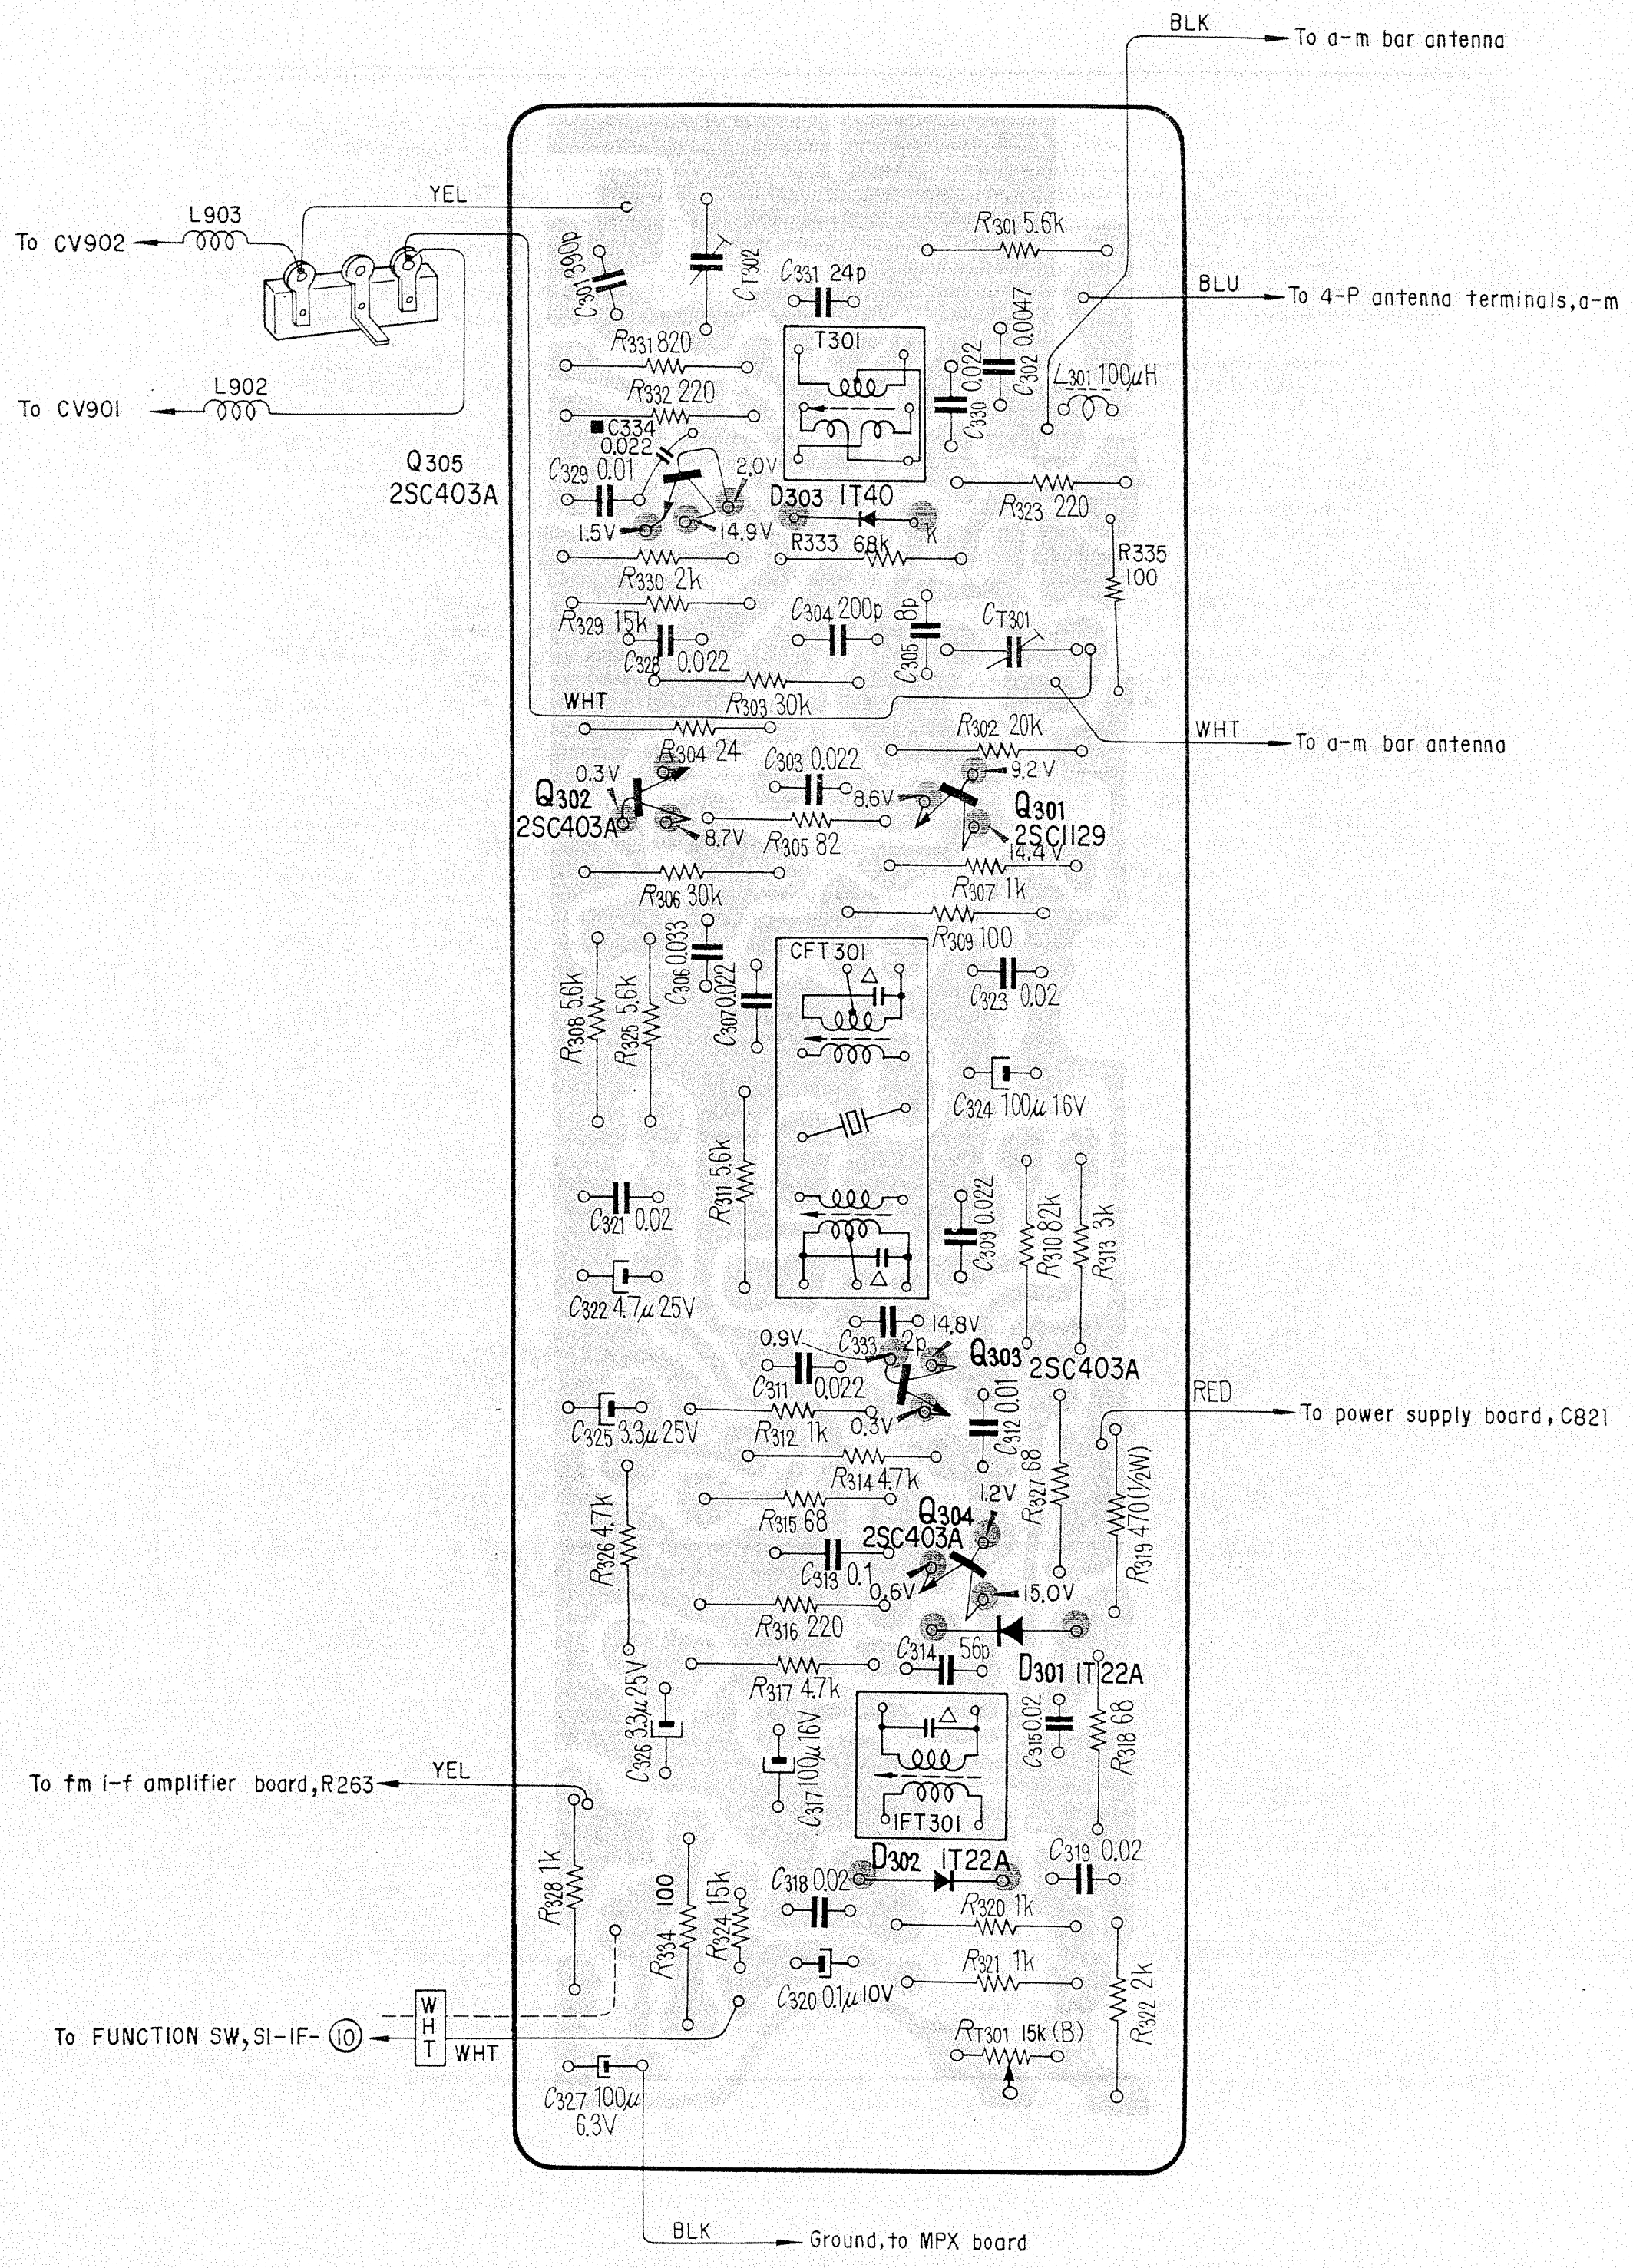
BLK
To a-m bar antenna
YEL
L903
To CV902
To CV901
L902
Q305
2SC403A
R301 5.6k
BLU
To 4-P antenna terminals,a-m
C311 390p
CT302
C331 24p
T301
C330 0.022
C302 0.0047
L301 100μH
R331 820
R332 220
C334 0.022
C329 0.01
2.0V
1.5V
14.9V
D303 IT40
R333 68k
R323 220
R335 100
R330 2k
R329 15k
C328 0.022
C304 200p
C305 8p
CT301
WHT
R303 30k
WHT
To a-m bar antenna
R304 24
C303 0.022
R302 20k
9.2V
0.3V
Q302
2SC403A
8.6V
Q301
2SC1129
8.7V
R305 82
14.4V
R306 30k
R307 1k
R309 100
C306 0.033
C307 0.022
CFT301
C323 0.02
R308 5.6k
R325 5.6k
C324 100μ 16V
R311 5.6k
C321 0.02
C309 0.022
R310 82k
R313 3k
C322 4.7μ 25V
14.8V
0.9V
C333 12p
Q303 2SC403A
C311 0.022
RED
To power supply board, C821
C325 3.3μ 25V
R312 1k
0.3V
C312 0.01
R314 4.7k
R327 68
R326 4.7k
R315 68
Q304
1.2V
2SC403A
R319 470(1/2W)
C313 0.1
0.6V
15.0V
R316 220
C314 56p
D301 IT22A
C326 3.3μ 25V
R317 4.7k
C315 0.02
R318 68
C317 100μ 16V
IFT301
YEL
To fm i-f amplifier board,R263
R328 1k
C318 0.02
D302 IT22A
C319 0.02
R320 1k
R334 100
R324 15k
R321 1k
C320 0.1μ 10V
R322 2k
To FUNCTION SW,S1-IF- ⑩
WHT
WHT
RT301 15k(B)
C327 100μ 6.3V
BLK
Ground,to MPX board

– Component Side –

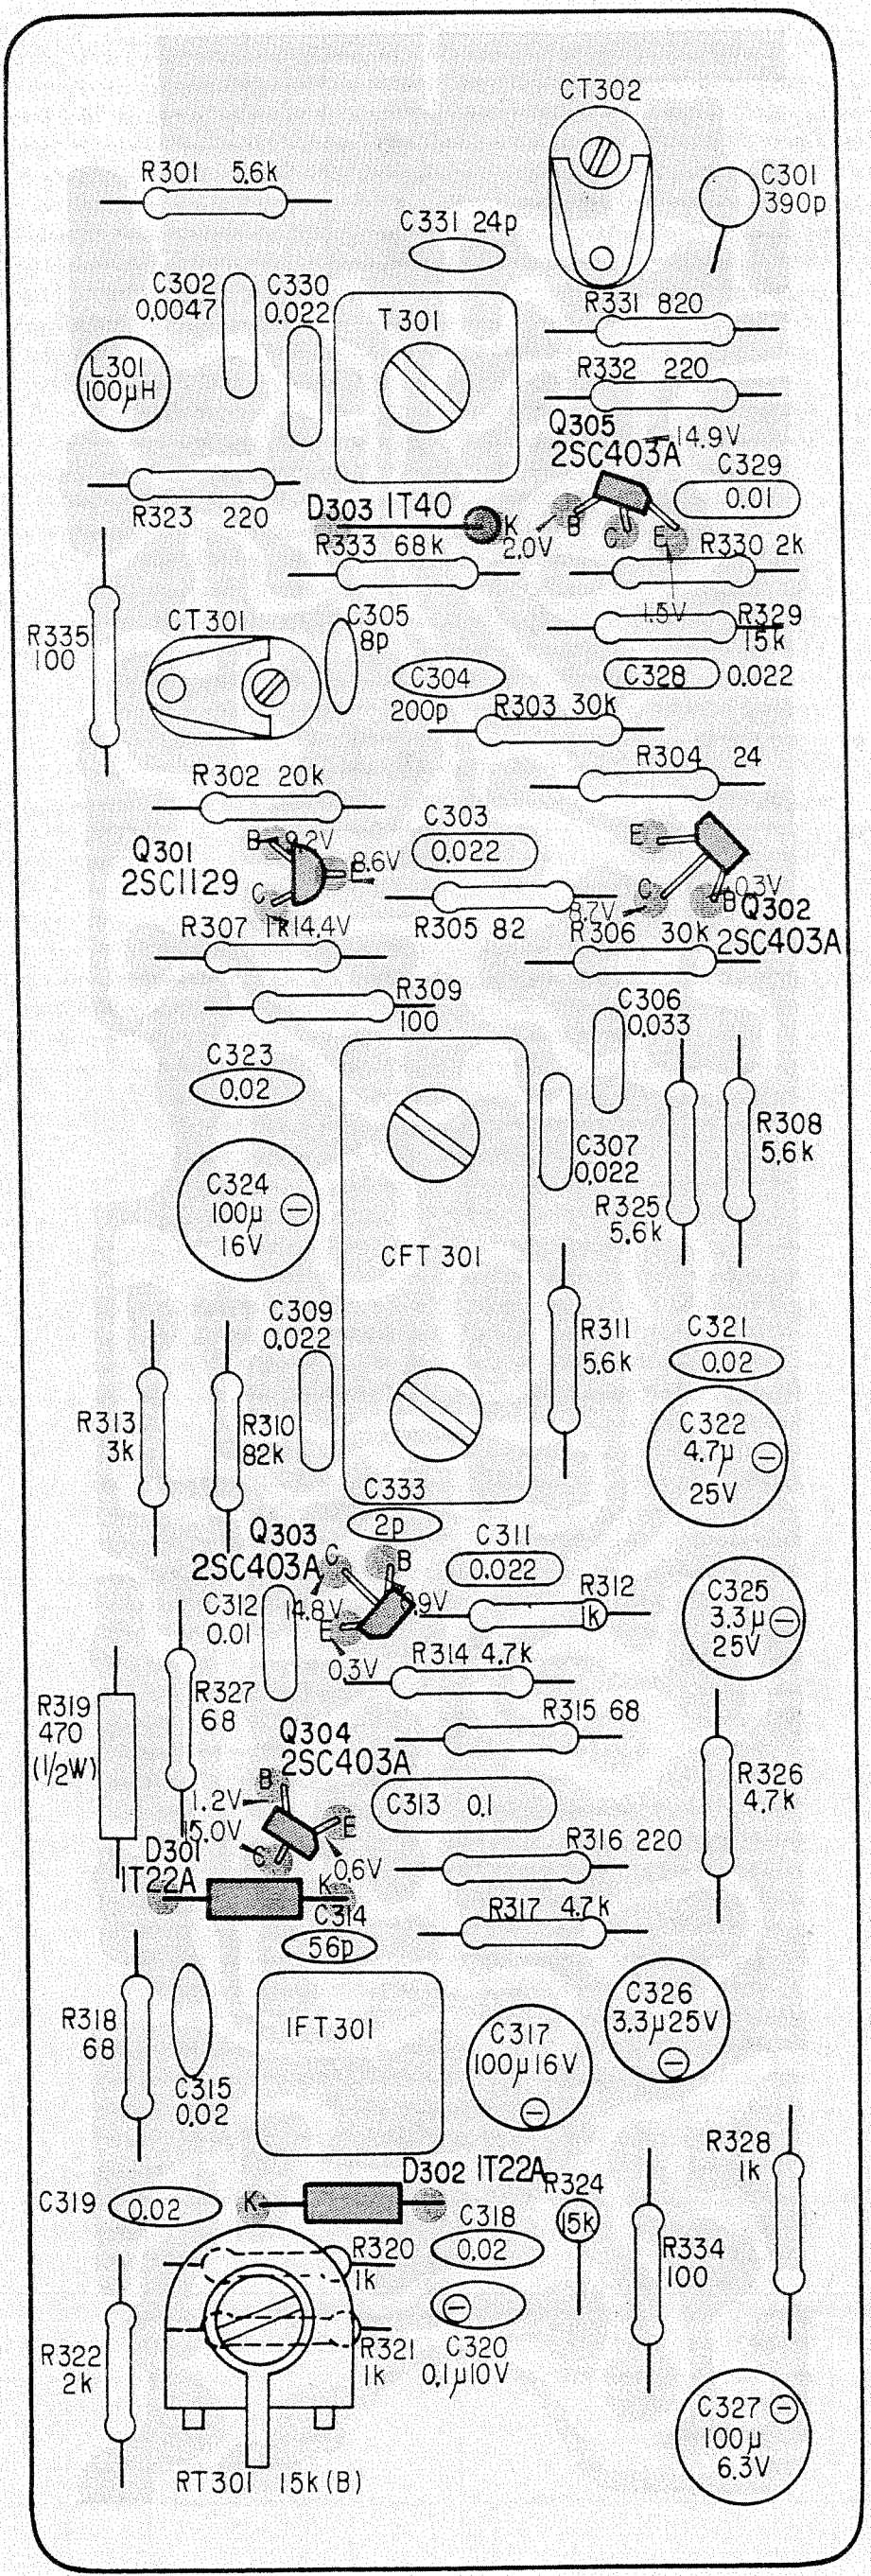
CT302
R301 5.6k
C331 24p
C301
390p
C302
0.0047
C330
0.022
T301
R331 820
L301
100μH
R332 220
Q305
2SC403A
14.9V
C329
0.01
R323 220
D303 1T40
K
B
C
E
R333 68k
2.0V
R330 2k
1.5V
R329
15k
R335
100
CT301
C305
8p
C304
200p
C328
0.022
R303 30k
R304 24
R302 20k
C303
0.022
Q301
2SC1129
B
9.2V
8.6V
E
C
R307 1k
14.4V
R305 82
E
C
8.7V
0.3V
B
Q302
2SC403A
R306 30k
R309
100
C306
0.033
C323
0.02
R308
5.6k
C307
0.022
C324
100μ
16V
R325
5.6k
CFT 301
C309
0.022
R311
5.6k
C321
0.02
R313
3k
R310
82k
C322
4.7μ
25V
C333
2p
Q303
2SC403A
C
B
C311
0.022
C312
0.01
14.8V
9V
E
R312
1k
C325
3.3μ
25V
0.3V
R314 4.7k
R319
470
(1/2W)
R327
68
R315 68
Q304
2SC403A
B
1.2V
15.0V
C313 0.1
E
C
0.6V
R326
4.7k
D301
1T22A
K
R316 220
C314
56p
R317 4.7k
R318
68
IFT301
C315
0.02
C317
100μ16V
C326
3.3μ25V
D302 1T22A
R324
15k
R328
1k
C319
0.02
K
C318
0.02
R320
1k
R334
100
R322
2k
R321
1k
C320
0.1μ10V
C327
100μ
6.3V
RT301 15k(B)

MOUNTING DIAGRAM – Power Amplifier Board –

– Conductor Side –

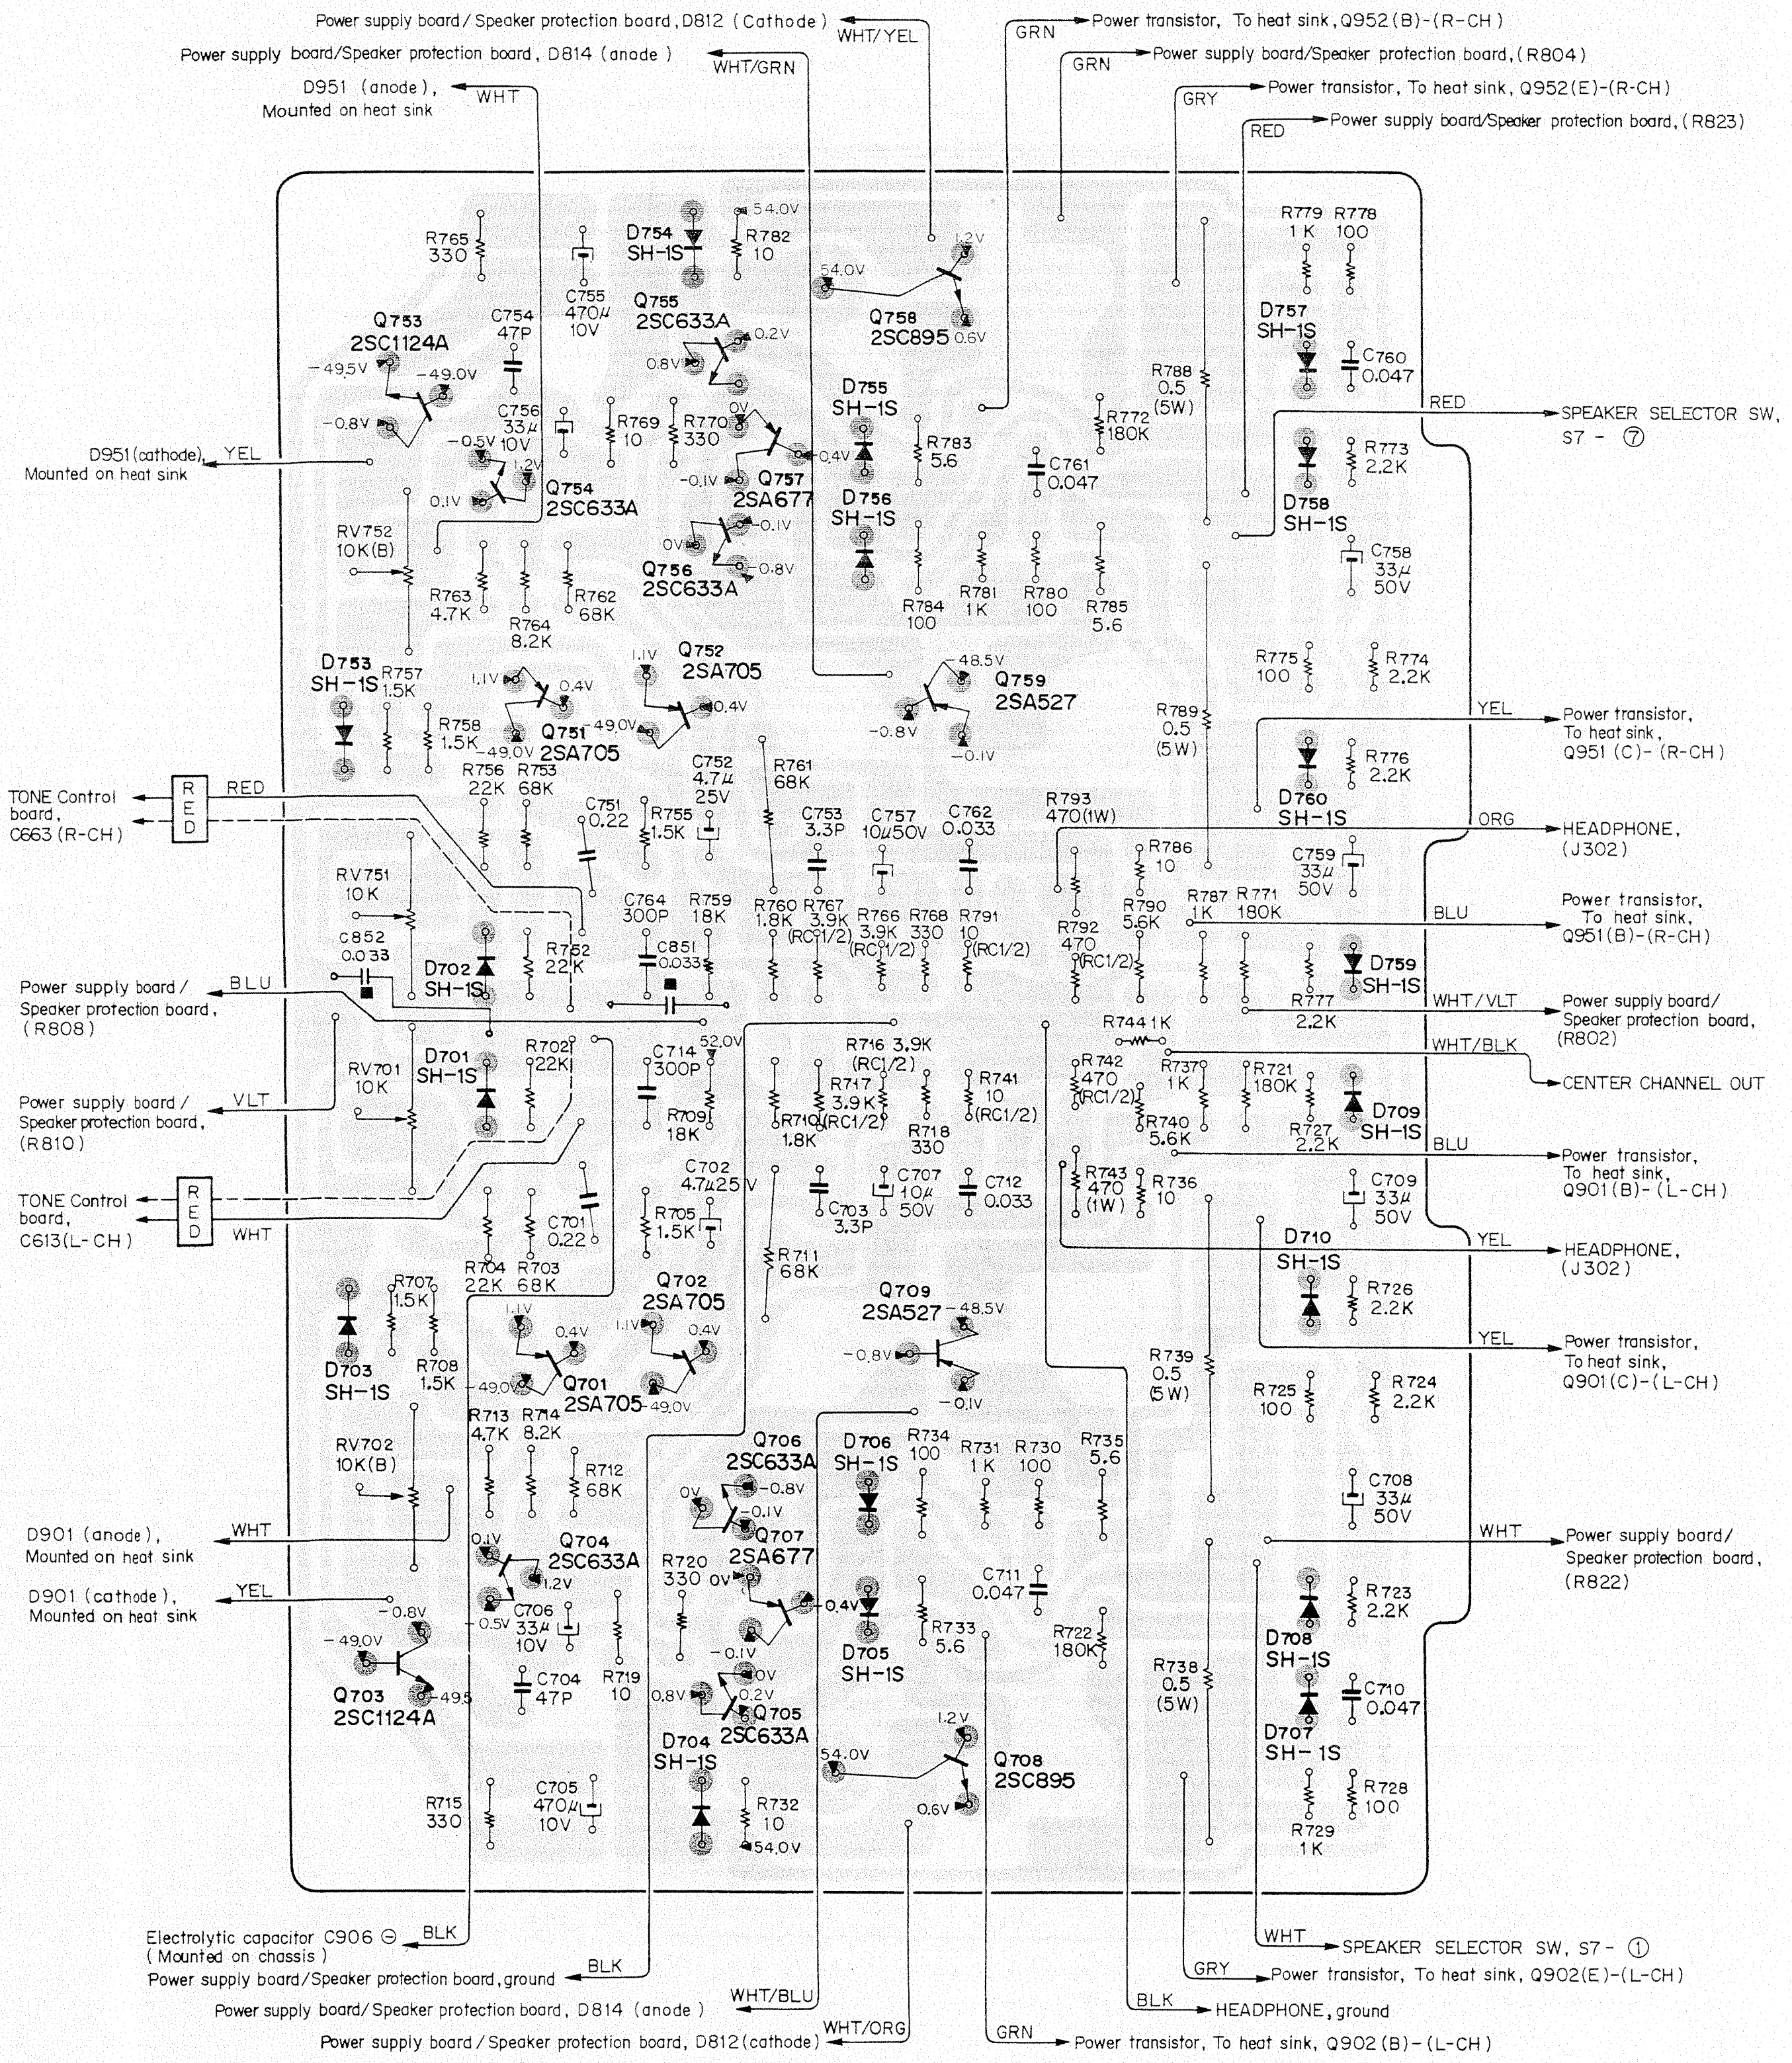
Power supply board / Speaker protection board, D812 (Cathode)
WHT/YEL
Power supply board/Speaker protection board, D814 (anode)
WHT/GRN
D951 (anode), Mounted on heat sink
WHT
GRN
Power transistor, To heat sink, Q952(B)-(R-CH)
GRN
Power supply board/Speaker protection board, (R804)
GRY
Power transistor, To heat sink, Q952(E)-(R-CH)
RED
Power supply board/Speaker protection board, (R823)
R765 330
D754 SH-1S
54.0V
R782 10
C755 470μ 10V
Q755 2SC633A
54.0V
1.2V
Q758 2SC895
0.6V
0.2V
0.8V
R779 1K
R778 100
D757 SH-1S
C760 0.047
Q753 2SC1124A
C754 47P
-49.5V
-49.0V
-0.8V
C756 33μ 10V
-0.5V
1.2V
R769 10
R770 330
0V
D755 SH-1S
R788 0.5 (5W)
R772 180K
-0.4V
R783 5.6
C761 0.047
RED
SPEAKER SELECTOR SW, S7 - ⑦
R773 2.2K
D951 (cathode), Mounted on heat sink
YEL
0.1V
Q754 2SC633A
-0.1V
Q757 2SA677
D756 SH-1S
D758 SH-1S
-0.1V
0V
-0.8V
Q756 2SC633A
C758 33μ 50V
RV752 10K(B)
R763 4.7K
R764 8.2K
R762 68K
R784 100
R781 1K
R780 100
R785 5.6
D753 SH-1S
R757 1.5K
1.1V
Q752 2SA705
1.1V
0.4V
-48.5V
Q759 2SA527
R775 100
R774 2.2K
0.4V
R758 1.5K
Q751 2SA705
49.0V
-49.0V
-0.8V
-0.1V
R789 0.5 (5W)
YEL
Power transistor, To heat sink, Q951 (C)-(R-CH)
R776 2.2K
TONE Control board, C663 (R-CH)
RED
R756 22K
R753 68K
C752 4.7μ 25V
R761 68K
R793 470(1W)
D760 SH-1S
ORG
HEADPHONE, (J302)
C751 0.22
R755 1.5K
C753 3.3P
C757 10μ50V
C762 0.033
R786 10
C759 33μ 50V
RV751 10K
C764 300P
R759 18K
R760 1.8K
R767 3.9K (RC1/2)
R766 3.9K (RC1/2)
R768 330
R791 10 (RC1/2)
R790 5.6K
R787 1K
R771 180K
BLU
Power transistor, To heat sink, Q951(B)-(R-CH)
C852 0.033
R752 22K
C851 0.033
R792 470 (RC1/2)
D759 SH-1S
Power supply board / Speaker protection board, (R808)
BLU
D702 SH-1S
R777 2.2K
WHT/VLT
Power supply board/ Speaker protection board, (R802)
R744 1K
WHT/BLK
RV701 10K
D701 SH-1S
R702 22K
C714 300P
52.0V
R716 3.9K (RC1/2)
R742 470 (RC1/2)
R737 1K
R721 180K
CENTER CHANNEL OUT
Power supply board / Speaker protection board, (R810)
VLT
R709 18K
R717 3.9K
R710 1.8K
(RC1/2)
R718 330
R741 10 (RC1/2)
R740 5.6K
R727 2.2K
D709 SH-1S
BLU
Power transistor, To heat sink, Q901(B)-(L-CH)
TONE Control board, C613(L-CH)
RED
WHT
C702 4.7μ25V
C701 0.22
R705 1.5K
C707 10μ 50V
C703 3.3P
C712 0.033
R743 470 (1W)
R736 10
C709 33μ 50V
D710 SH-1S
YEL
HEADPHONE, (J302)
R707 1.5K
R704 22K
R703 68K
Q702 2SA705
R711 68K
Q709 2SA527
-48.5V
R726 2.2K
1.1V
0.4V
1.1V
0.4V
-0.8V
D703 SH-1S
R708 1.5K
-49.0V
Q701 2SA705
-49.0V
-0.1V
R739 0.5 (5W)
YEL
Power transistor, To heat sink, Q901(C)-(L-CH)
R725 100
R724 2.2K
RV702 10K(B)
R713 4.7K
R714 8.2K
R712 68K
Q706 2SC633A
-0.8V
0V
-0.1V
D706 SH-1S
R734 100
R731 1K
R730 100
R735 5.6
C708 33μ 50V
D901 (anode), Mounted on heat sink
WHT
0.1V
Q704 2SC633A
Q707 2SA677
WHT
Power supply board/ Speaker protection board, (R822)
D901 (cathode), Mounted on heat sink
YEL
-0.8V
-0.5V
C706 33μ 10V
1.2V
R720 330
0V
-0.4V
C711 0.047
R723 2.2K
-49.0V
-49.5V
-0.1V
0V
R733 5.6
R722 180K
D708 SH-1S
Q703 2SC1124A
C704 47P
R719 10
0.8V
0.2V
Q705 2SC633A
D705 SH-1S
R738 0.5 (5W)
C710 0.047
D707 SH-1S
D704 SH-1S
1.2V
54.0V
Q708 2SC895
0.6V
R715 330
C705 470μ 10V
R732 10
54.0V
R728 100
R729 1K
Electrolytic capacitor C906 ⊖ (Mounted on chassis)
BLK
WHT
SPEAKER SELECTOR SW, S7 - ①
Power supply board/Speaker protection board, ground
BLK
GRY
Power transistor, To heat sink, Q902(E)-(L-CH)
Power supply board/Speaker protection board, D814 (anode)
WHT/BLU
BLK
HEADPHONE, ground
Power supply board / Speaker protection board, D812(cathode)
WHT/ORG
GRN
Power transistor, To heat sink, Q902 (B)-(L-CH)

– *Component Side* –

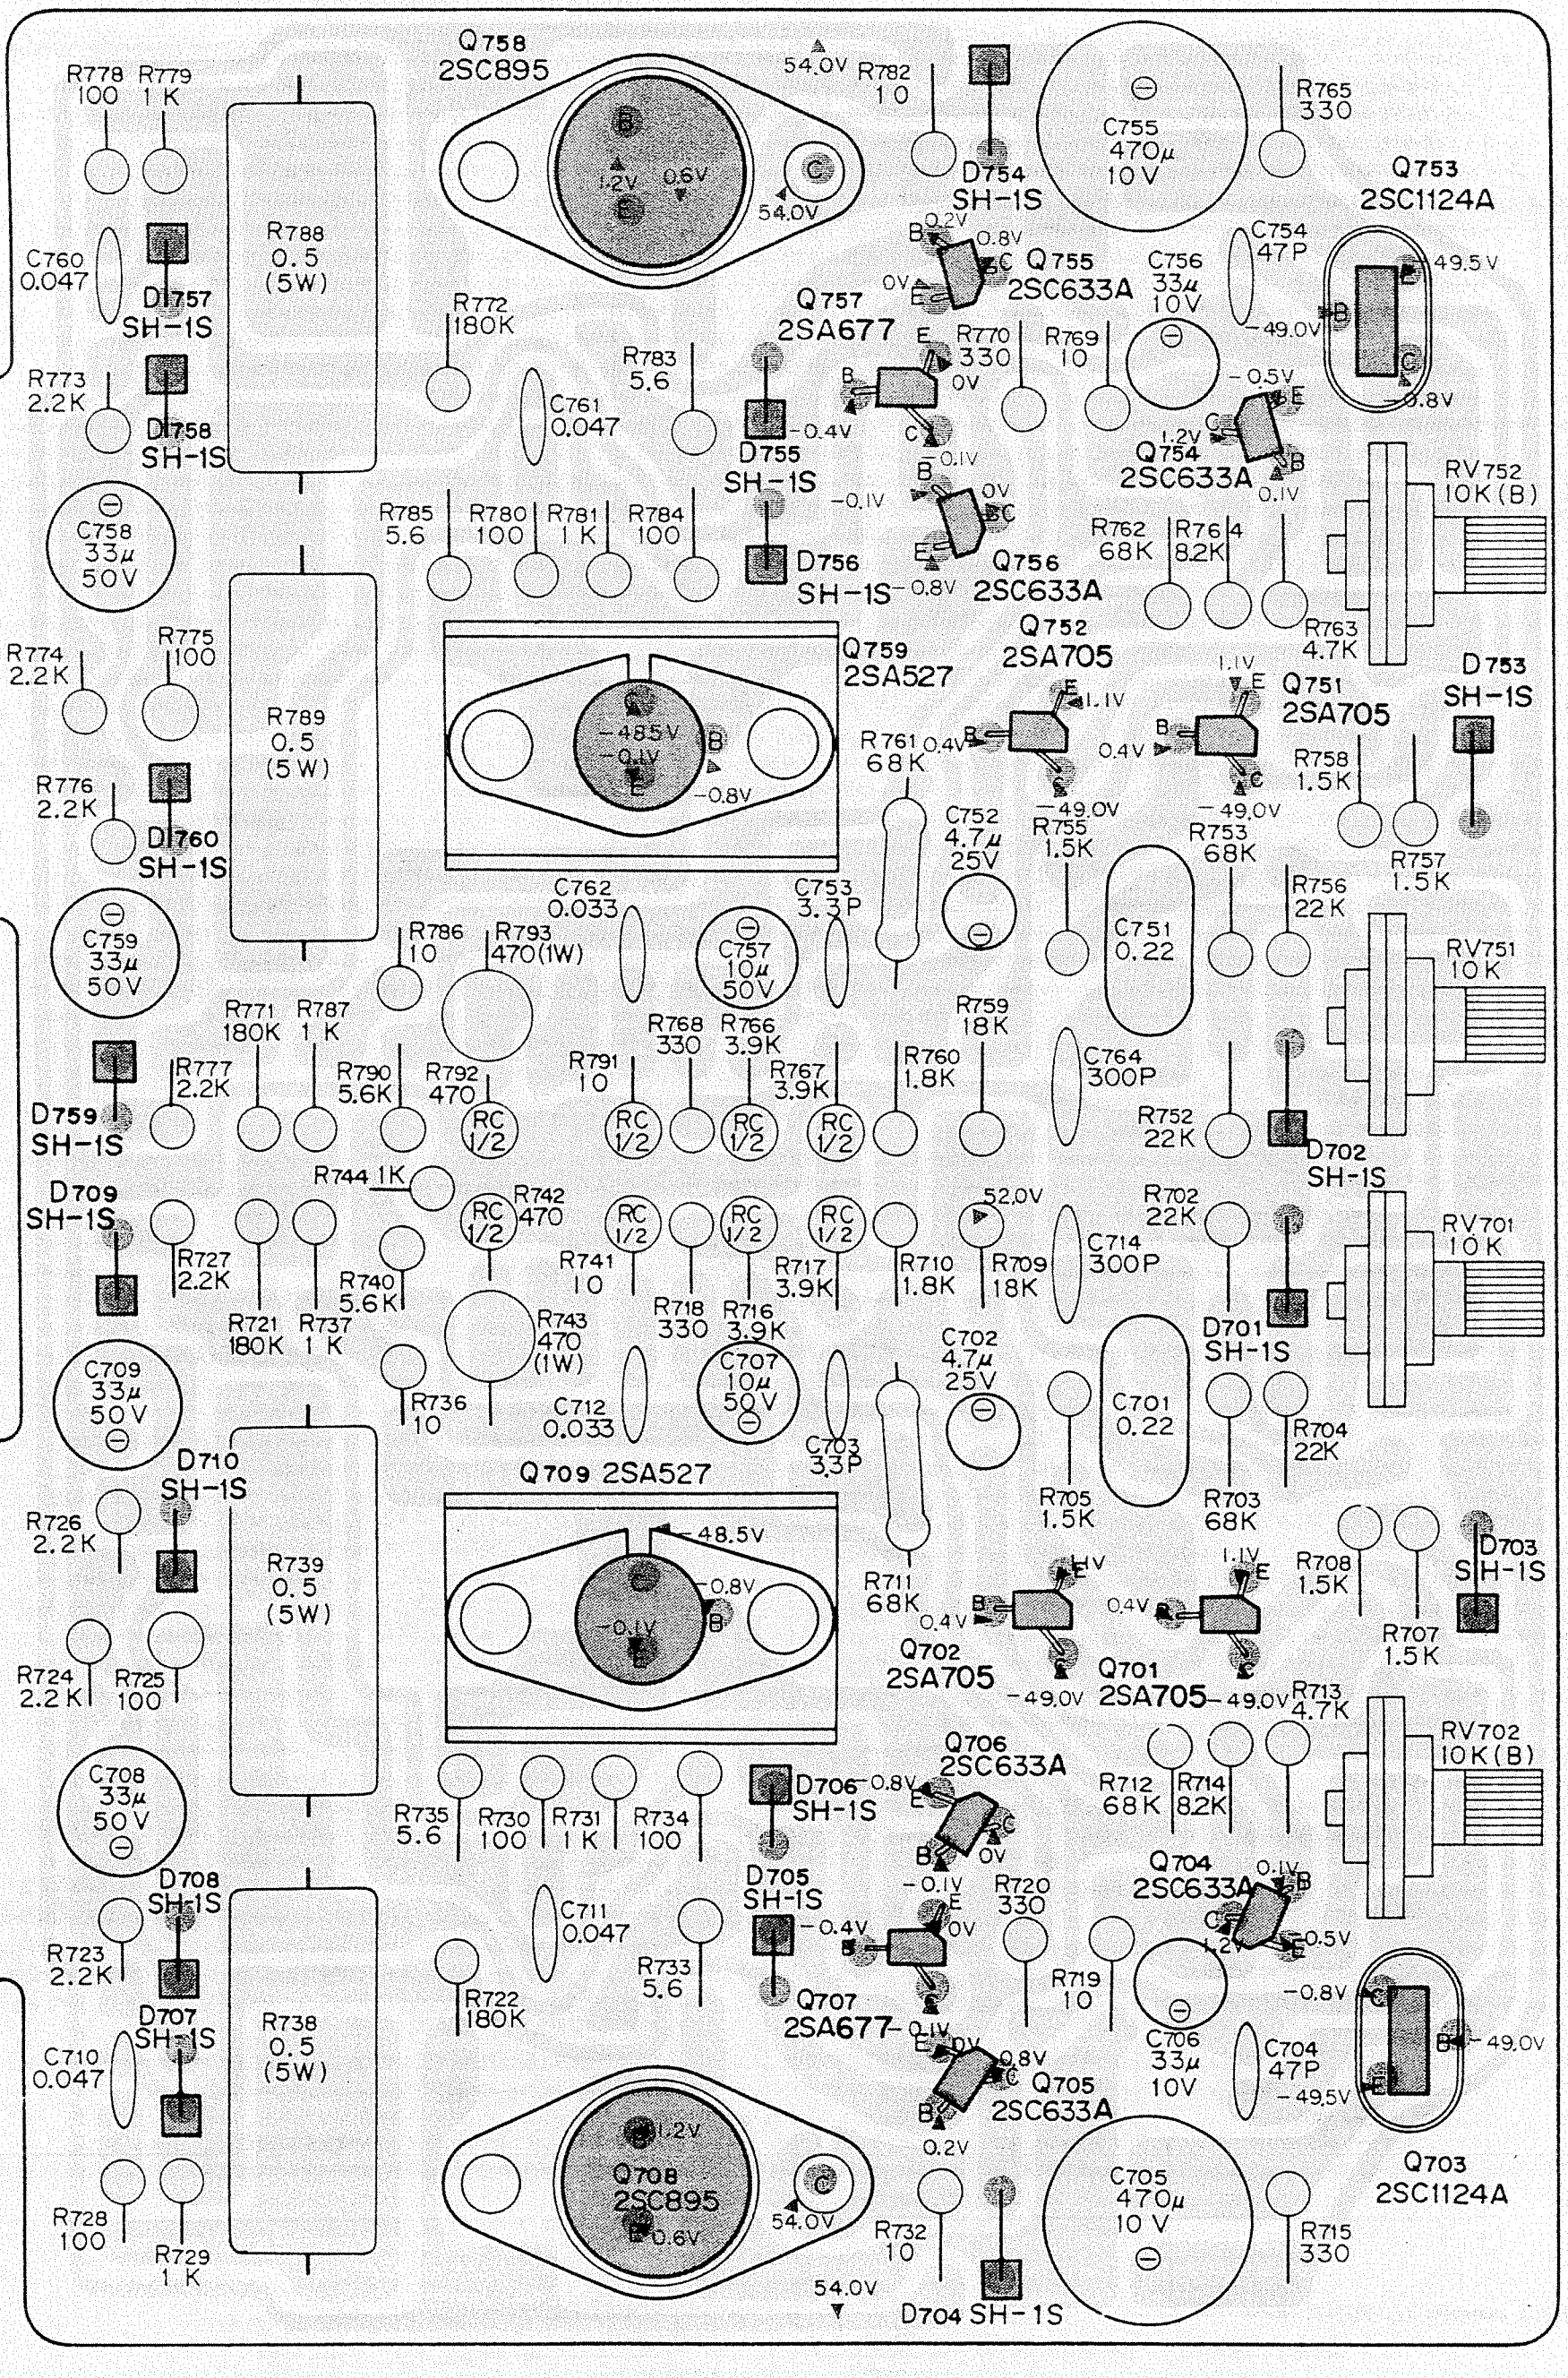
Q758 2SC895
R778 100
R779 1K
R788 0.5 (5W)
C760 0.047
D757 SH-1S
R773 2.2K
D758 SH-1S
C758 33μ 50V
R774 2.2K
R775 100
R789 0.5 (5W)
R776 2.2K
D760 SH-1S
C759 33μ 50V
R772 180K
C761 0.047
R783 5.6
R785 5.6
R780 100
R781 1K
R784 100
54.0V
R782 10
D754 SH-1S
C755 470μ 10V
R765 330
Q753 2SC1124A
Q755 2SC633A
C756 33μ 10V
C754 47P
49.5V
-49.0V
Q757 2SA677
R770 330
R769 10
D755 SH-1S
Q754 2SC633A
D756 SH-1S
Q756 2SC633A
RV752 10K(B)
R762 68K
R764 8.2K
R763 4.7K
Q759 2SA527
-48.5V
-0.1V
-0.8V
Q752 2SA705
Q751 2SA705
D753 SH-1S
R761 68K
R758 1.5K
C752 4.7μ 25V
R755 1.5K
R753 68K
R757 1.5K
R756 22K
C762 0.033
C753 3.3P
C751 0.22
RV751 10K
R786 10
R793 470(1W)
C757 10μ 50V
R771 180K
R787 1K
R759 18K
R768 330
R766 3.9K
R760 1.8K
C764 300P
R777 2.2K
R790 5.6K
R792 470
R791 10
R767 3.9K
D759 SH-1S
R752 22K
D702 SH-1S
RC 1/2
R744 1K
D709 SH-1S
R742 470
52.0V
R702 22K
C714 300P
RV701 10K
R727 2.2K
R740 5.6K
R741 10
R717 3.9K
R710 1.8K
R709 18K
R721 180K
R737 1K
R743 470 (1W)
R718 330
R716 3.9K
D701 SH-1S
C709 33μ 50V
R736 10
C712 0.033
C707 10μ 50V
C702 4.7μ 25V
C701 0.22
R704 22K
C703 3.3P
D710 SH-1S
Q709 2SA527
R705 1.5K
R703 68K
R726 2.2K
R739 0.5 (5W)
-48.5V
R711 68K
R708 1.5K
D703 SH-1S
R707 1.5K
R724 2.2K
R725 100
Q702 2SA705
Q701 2SA705
R713 4.7K
C708 33μ 50V
Q706 2SC633A
R735 5.6
R730 100
R731 1K
R734 100
D706 SH-1S
R712 68K
R714 8.2K
RV702 10K(B)
D708 SH-1S
D705 SH-1S
Q704 2SC633A
C711 0.047
R720 330
R723 2.2K
R733 5.6
R719 10
R722 180K
Q707 2SA677
C706 33μ 10V
C704 47P
-49.5V
49.0V
D707 SH-1S
R738 0.5 (5W)
C710 0.047
Q705 2SC633A
Q708 2SC895
C705 470μ 10V
Q703 2SC1124A
R728 100
R729 1K
R732 10
R715 330
54.0V
D704 SH-1S

MOUNTING DIAGRAM – Power Supply Board –

– Conductor Side –

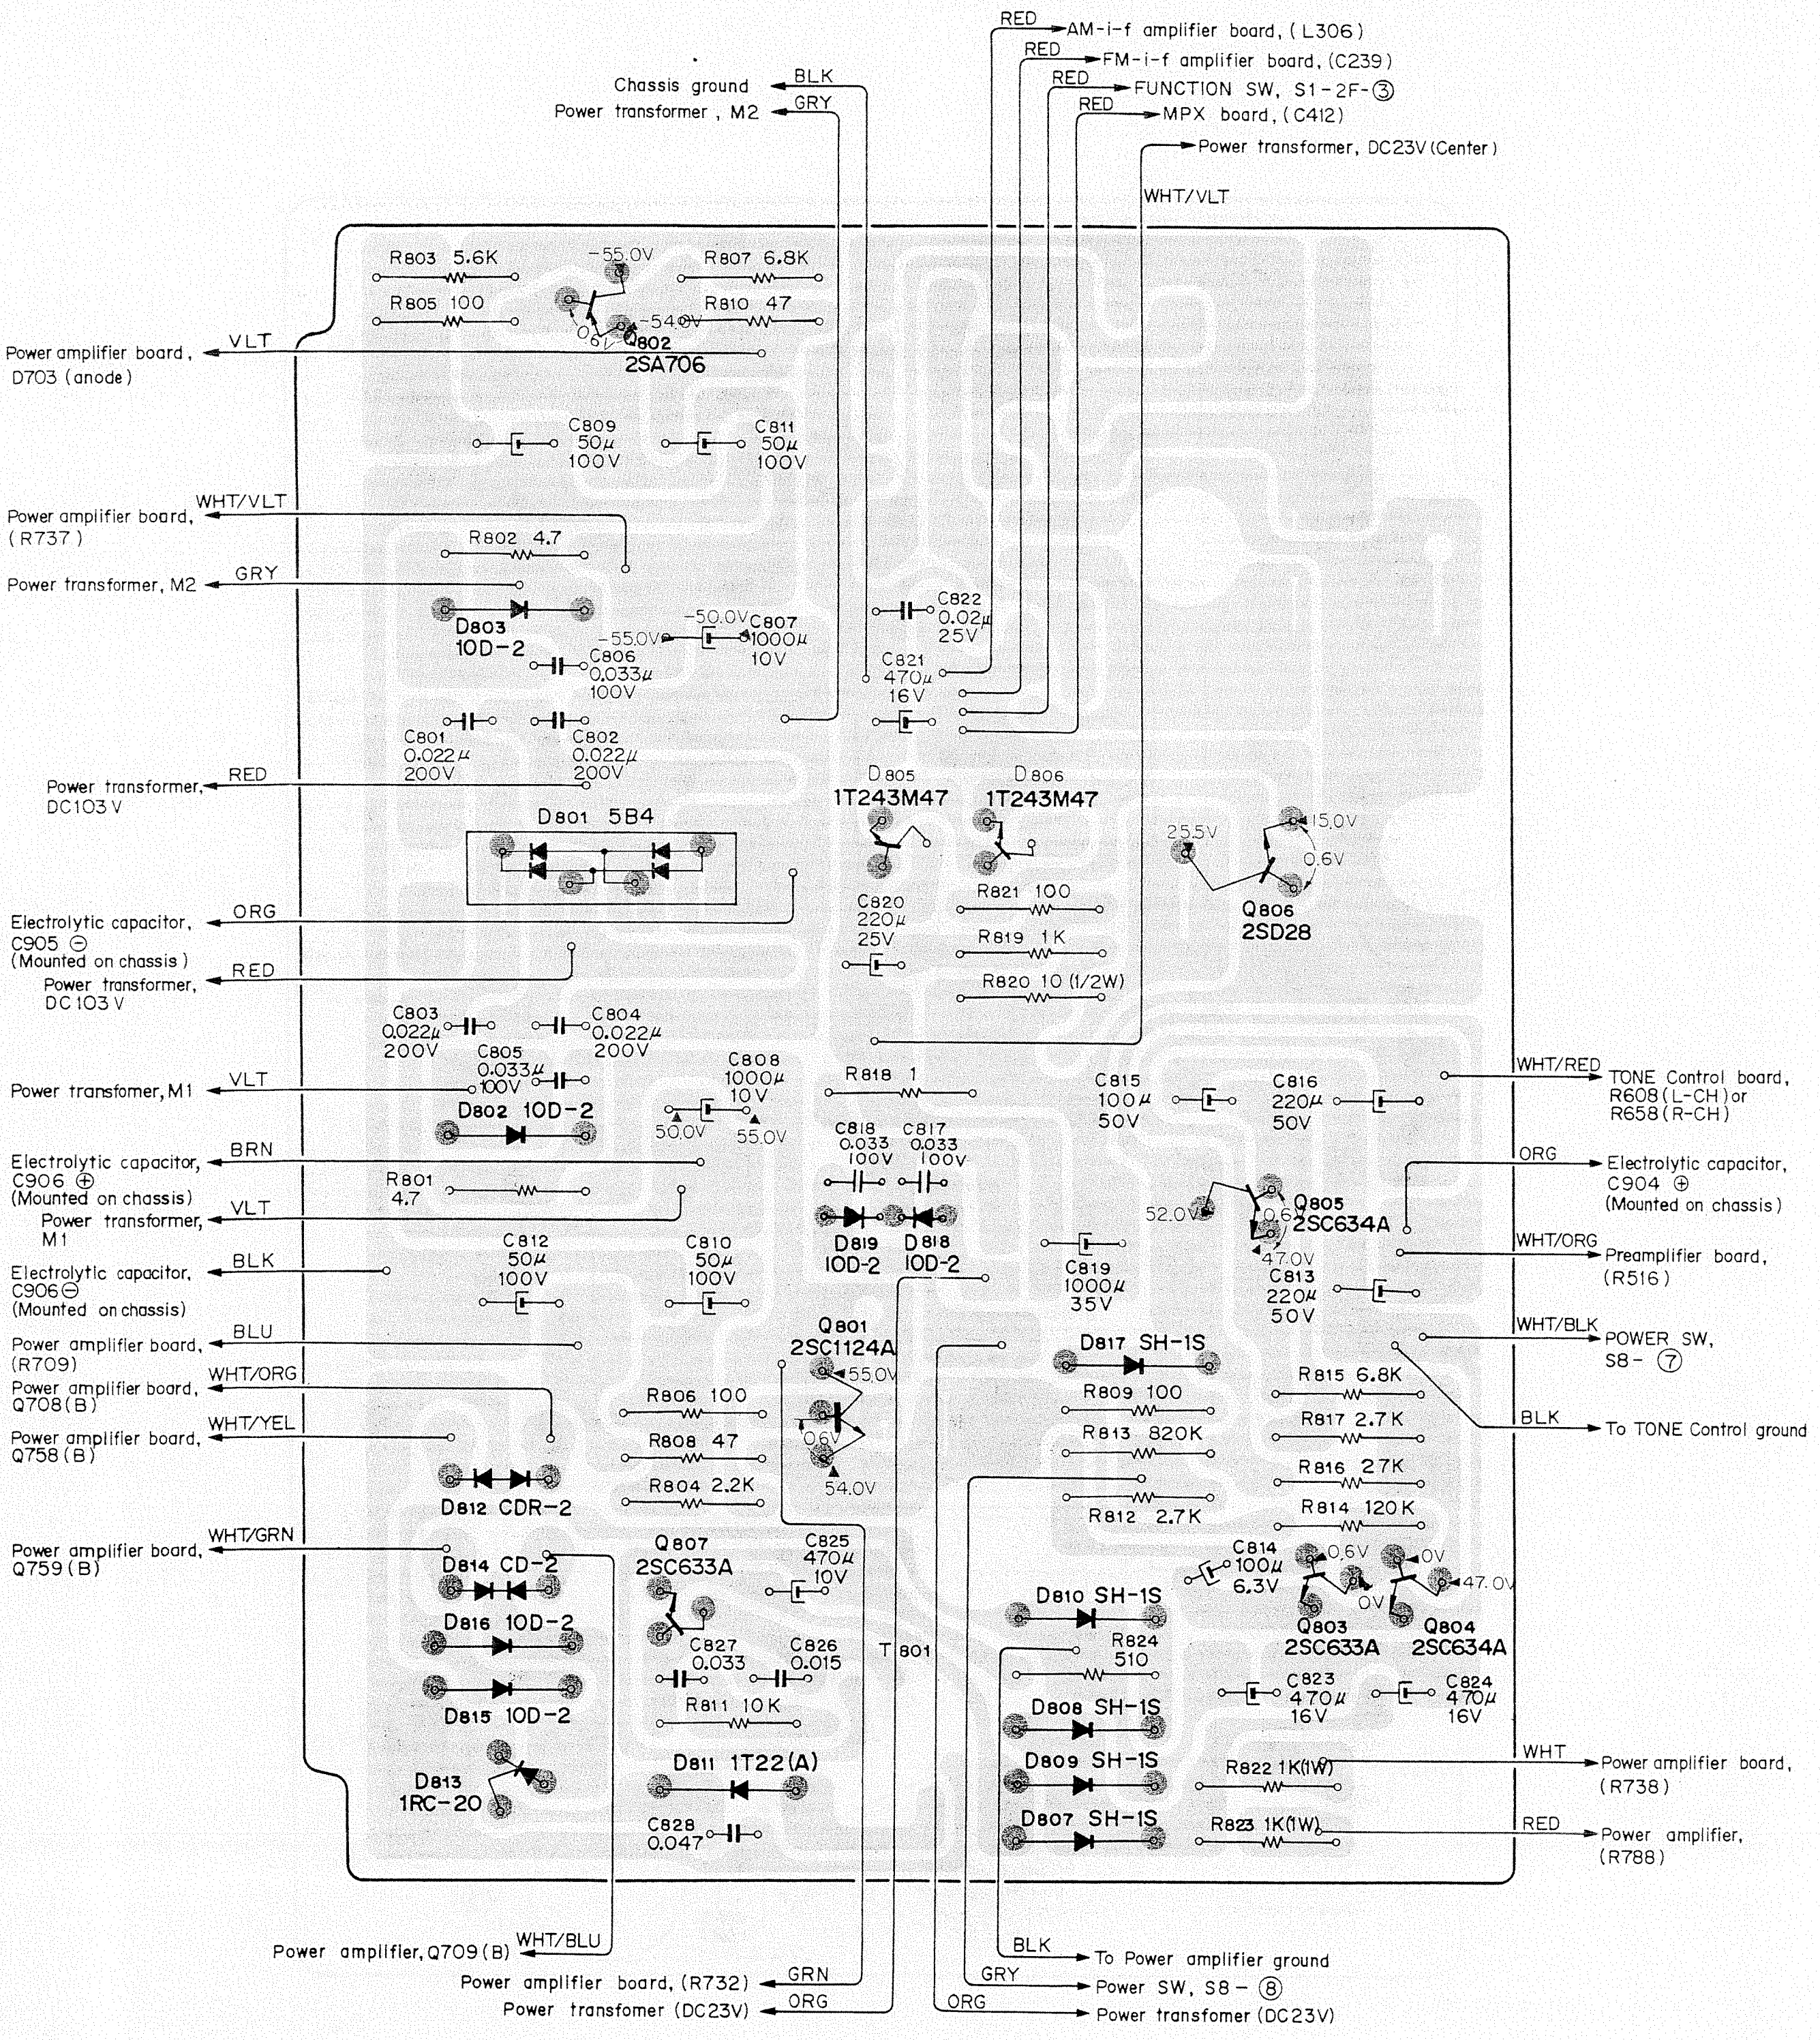
RED → AM-i-f amplifier board, (L306)
RED → FM-i-f amplifier board, (C239)
RED → FUNCTION SW, S1-2F-③
RED → MPX board, (C412)
→ Power transformer, DC23V (Center)
WHT/VLT
Chassis ground ← BLK
Power transformer, M2 ← GRY
R803 5.6K
-55.0V
R807 6.8K
R805 100
R810 47
-54.0V
0.6V
Q802
2SA706
Power amplifier board, D703 (anode) ← VLT
C809 50μ 100V
C811 50μ 100V
Power amplifier board, (R737) ← WHT/VLT
R802 4.7
Power transformer, M2 ← GRY
D803 10D-2
-50.0V
C807 1000μ 10V
-55.0V
C806 0.033μ 100V
C822 0.02μ 25V
C821 470μ 16V
C801 0.022μ 200V
C802 0.022μ 200V
Power transformer, DC103V ← RED
D805 1T243M47
D806 1T243M47
D801 5B4
25.5V
15.0V
0.6V
Q806 2SD28
C820 220μ 25V
R821 100
R819 1K
R820 10 (1/2W)
Electrolytic capacitor, C905 ⊖ (Mounted on chassis) ← ORG
Power transformer, DC 103 V ← RED
C803 0.022μ 200V
C804 0.022μ 200V
C805 0.033μ 100V
C808 1000μ 10V
D802 10D-2
50.0V
55.0V
R818 1
C815 100μ 50V
C816 220μ 50V
WHT/RED → TONE Control board, R608 (L-CH) or R658 (R-CH)
Power transfomer, M1 ← VLT
Electrolytic capacitor, C906 ⊕ (Mounted on chassis) ← BRN
Power transformer, M1 ← VLT
R801 4.7
C818 0.033 100V
C817 0.033 100V
ORG → Electrolytic capacitor, C904 ⊕ (Mounted on chassis)
52.0V
0.6V
Q805 2SC634A
47.0V
D819 10D-2
D818 10D-2
C819 1000μ 35V
C813 220μ 50V
WHT/ORG → Preamplifier board, (R516)
Electrolytic capacitor, C906⊖ (Mounted on chassis) ← BLK
C812 50μ 100V
C810 50μ 100V
Q801 2SC1124A
55.0V
D817 SH-1S
WHT/BLK → POWER SW, S8- ⑦
Power amplifier board, (R709) ← BLU
Power amplifier board, Q708 (B) ← WHT/ORG
Power amplifier board, Q758 (B) ← WHT/YEL
R806 100
R809 100
R815 6.8K
R817 2.7K
BLK → To TONE Control ground
R808 47
R813 820K
0.6V
54.0V
R804 2.2K
R816 27K
D812 CDR-2
R812 2.7K
R814 120K
Power amplifier board, Q759 (B) ← WHT/GRN
Q807 2SC633A
C825 470μ 10V
C814 100μ 6.3V
0.6V
0V
0V
47.0V
D814 CD-2
D816 10D-2
D810 SH-1S
Q803 2SC633A
Q804 2SC634A
C827 0.033
C826 0.015
T801
R824 510
D815 10D-2
R811 10K
D808 SH-1S
C823 470μ 16V
C824 470μ 16V
D813 1RC-20
D811 1T22(A)
D809 SH-1S
R822 1K(1W)
WHT → Power amplifier board, (R738)
C828 0.047
D807 SH-1S
R823 1K(1W)
RED → Power amplifier, (R788)
Power amplifier, Q709 (B) ← WHT/BLU
Power amplifier board, (R732) ← GRN
Power transfomer (DC23V) ← ORG
BLK → To Power amplifier ground
GRY → Power SW, S8 - ⑧
ORG → Power transfomer (DC23V)

— Component Side —

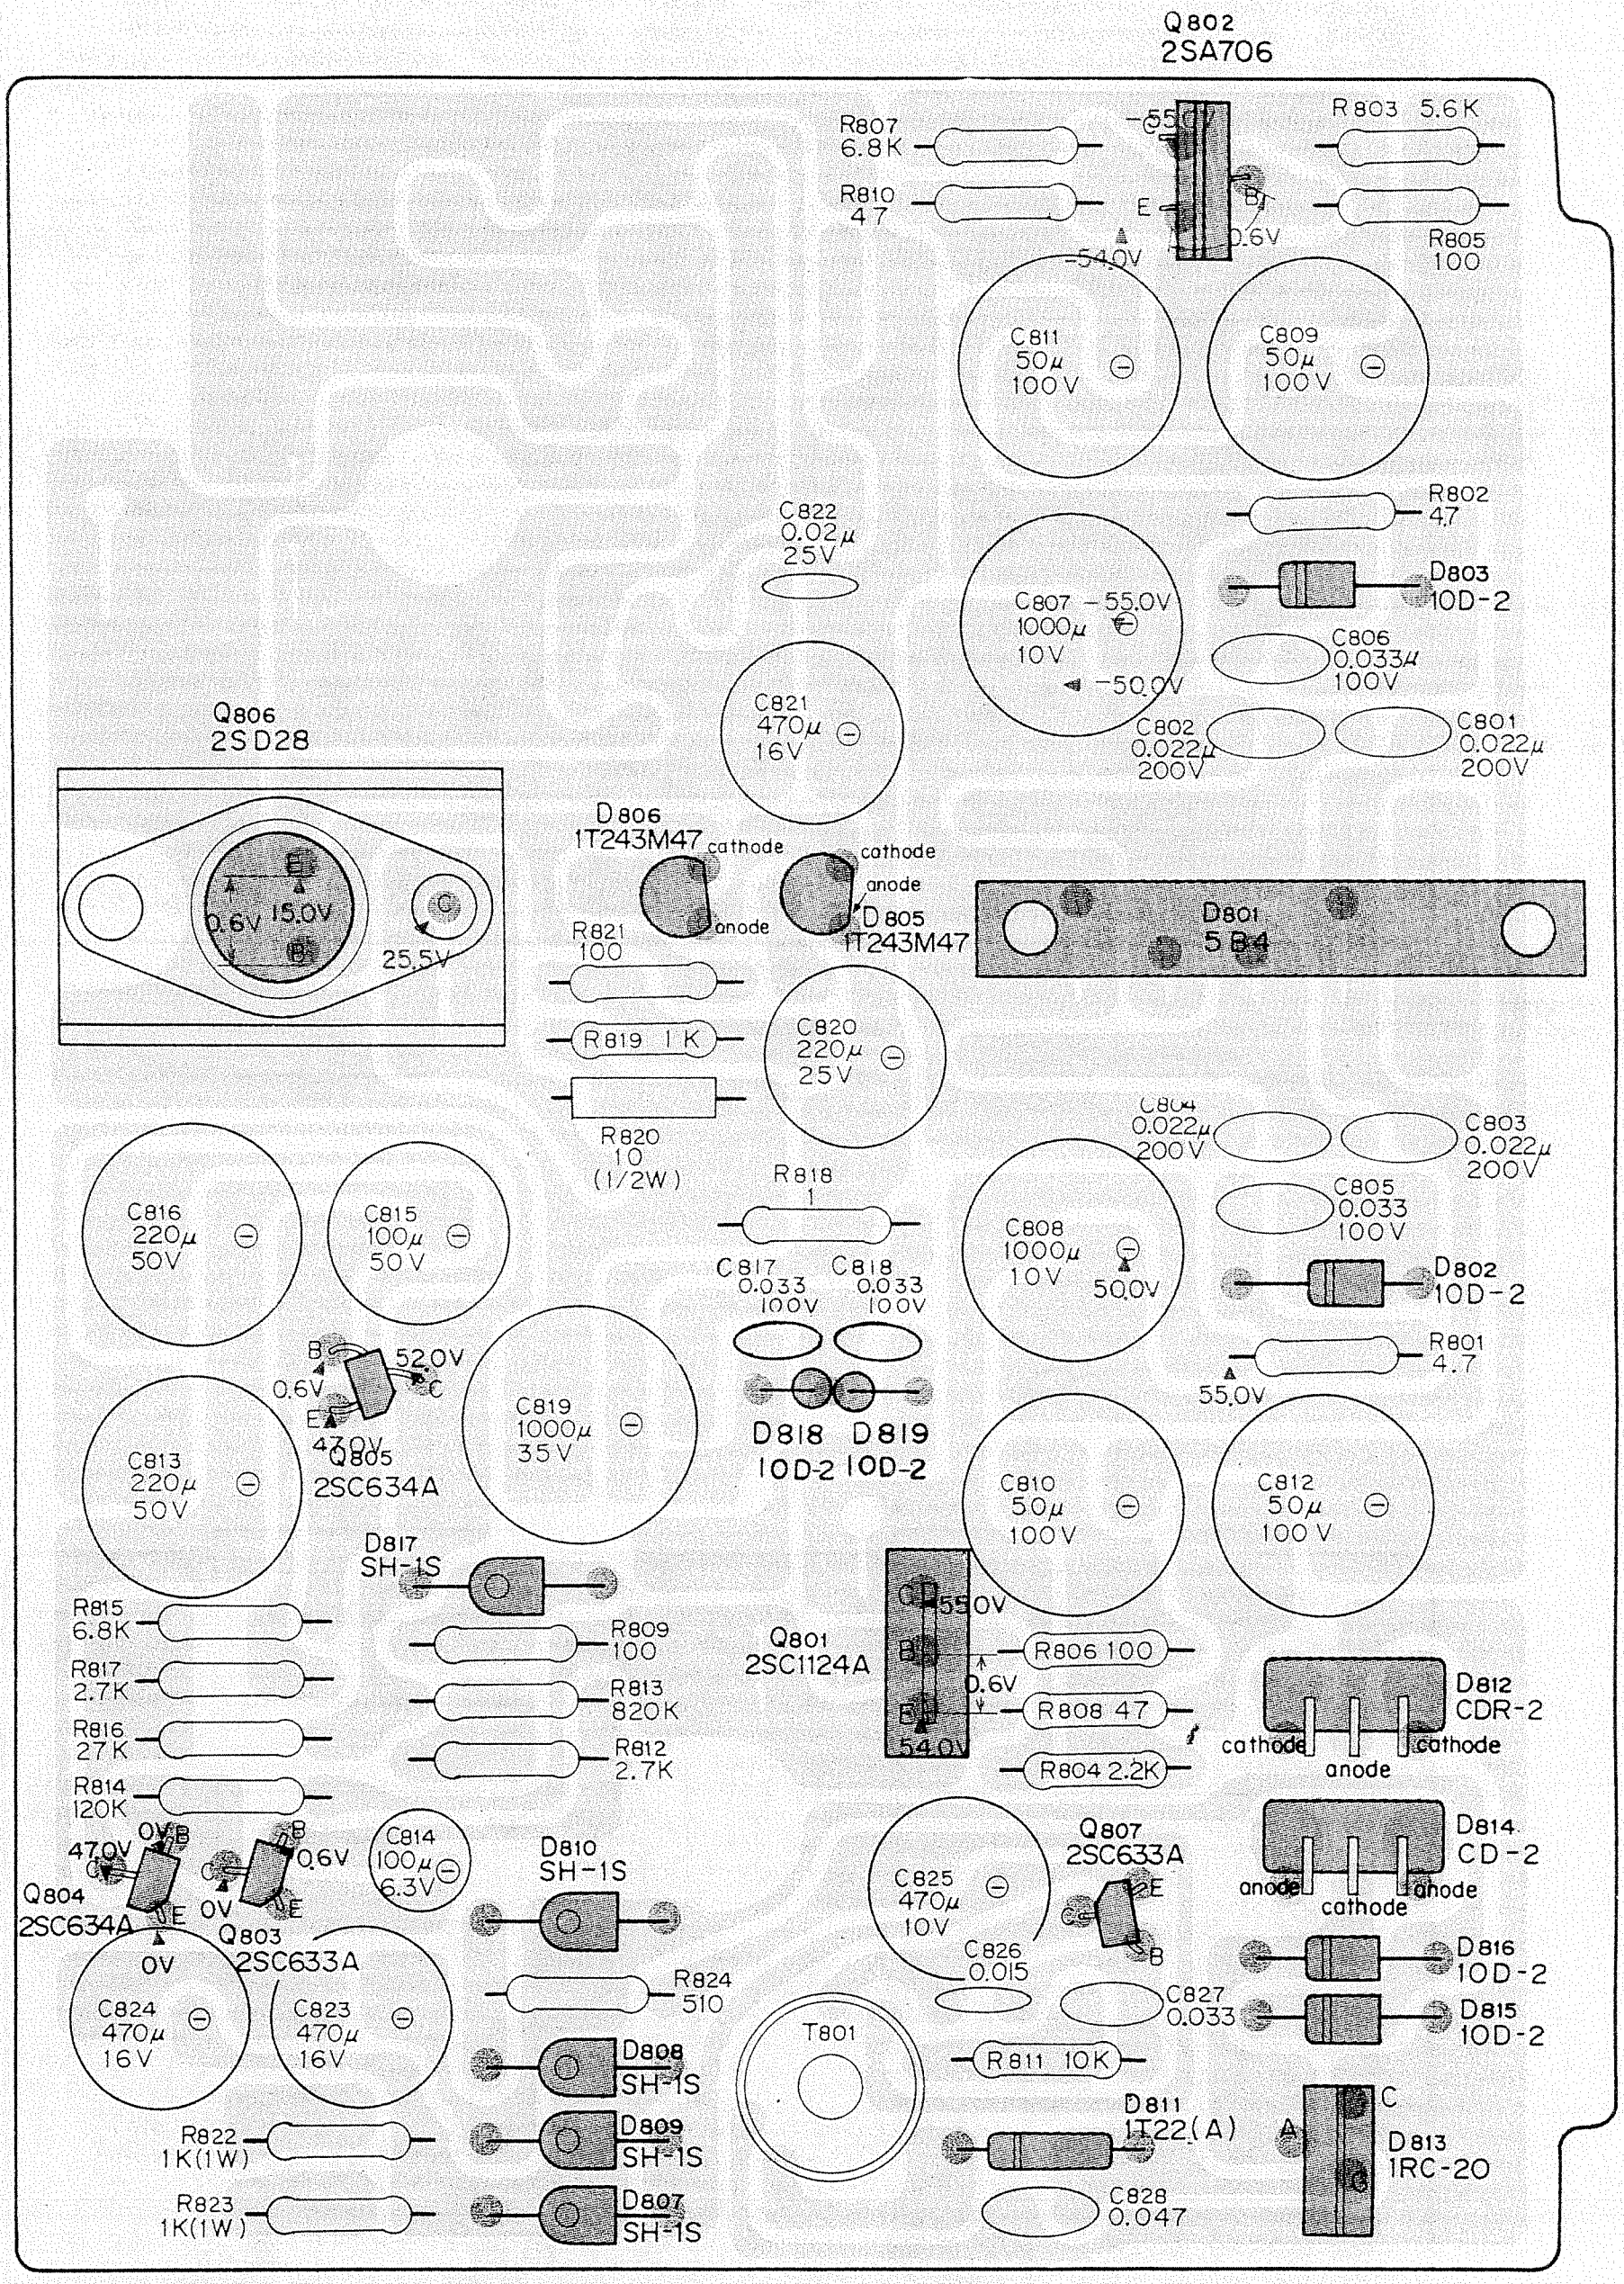
Q802
2SA706
R807
6.8K
R810
4.7
-55.0V
E
B
0.6V
-54.0V
R803 5.6K
R805
100
C811
50μ
100V
C809
50μ
100V
R802
4.7
C822
0.02μ
25V
C807 -55.0V
1000μ
10V
-50.0V
D803
10D-2
C806
0.033μ
100V
C802
0.022μ
200V
C801
0.022μ
200V
C821
470μ
16V
Q806
2SD28
E
0.6V
15.0V
B
C
25.5V
D806
1T243M47
cathode
anode
cathode
anode
D805
1T243M47
D801
5B4
R821
100
R819 1K
R820
10
(1/2W)
C820
220μ
25V
C804
0.022μ
200V
C803
0.022μ
200V
C805
0.033
100V
C816
220μ
50V
C815
100μ
50V
R818
1
C817
0.033
100V
C818
0.033
100V
C808
1000μ
10V
50.0V
D802
10D-2
R801
4.7
55.0V
B
52.0V
0.6V
C
E
47.0V
Q805
2SC634A
C813
220μ
50V
C819
1000μ
35V
D818
10D-2
D819
10D-2
C810
50μ
100V
C812
50μ
100V
D817
SH-1S
R815
6.8K
R817
2.7K
R816
27K
R814
120K
R809
100
R813
820K
R812
2.7K
Q801
2SC1124A
C
55.0V
B
0.6V
E
54.0V
R806 100
R808 47
R804 2.2K
D812
CDR-2
cathode
anode
cathode
D814
CD-2
anode
cathode
anode
47.0V
0V
B
C
E
Q804
2SC634A
0V
0.6V
C
B
0V
E
Q803
2SC633A
C814
100μ
6.3V
D810
SH-1S
C825
470μ
10V
Q807
2SC633A
E
B
C826
0.015
C827
0.033
D816
10D-2
D815
10D-2
C824
470μ
16V
C823
470μ
16V
R824
510
T801
R811 10K
D808
SH-1S
D809
SH-1S
D807
SH-1S
R822
1K(1W)
R823
1K(1W)
D811
1T22(A)
C828
0.047
A
C
D813
1RC-20

MOUNTING DIAGRAM – Tone Control Board –

– Conductor Side –

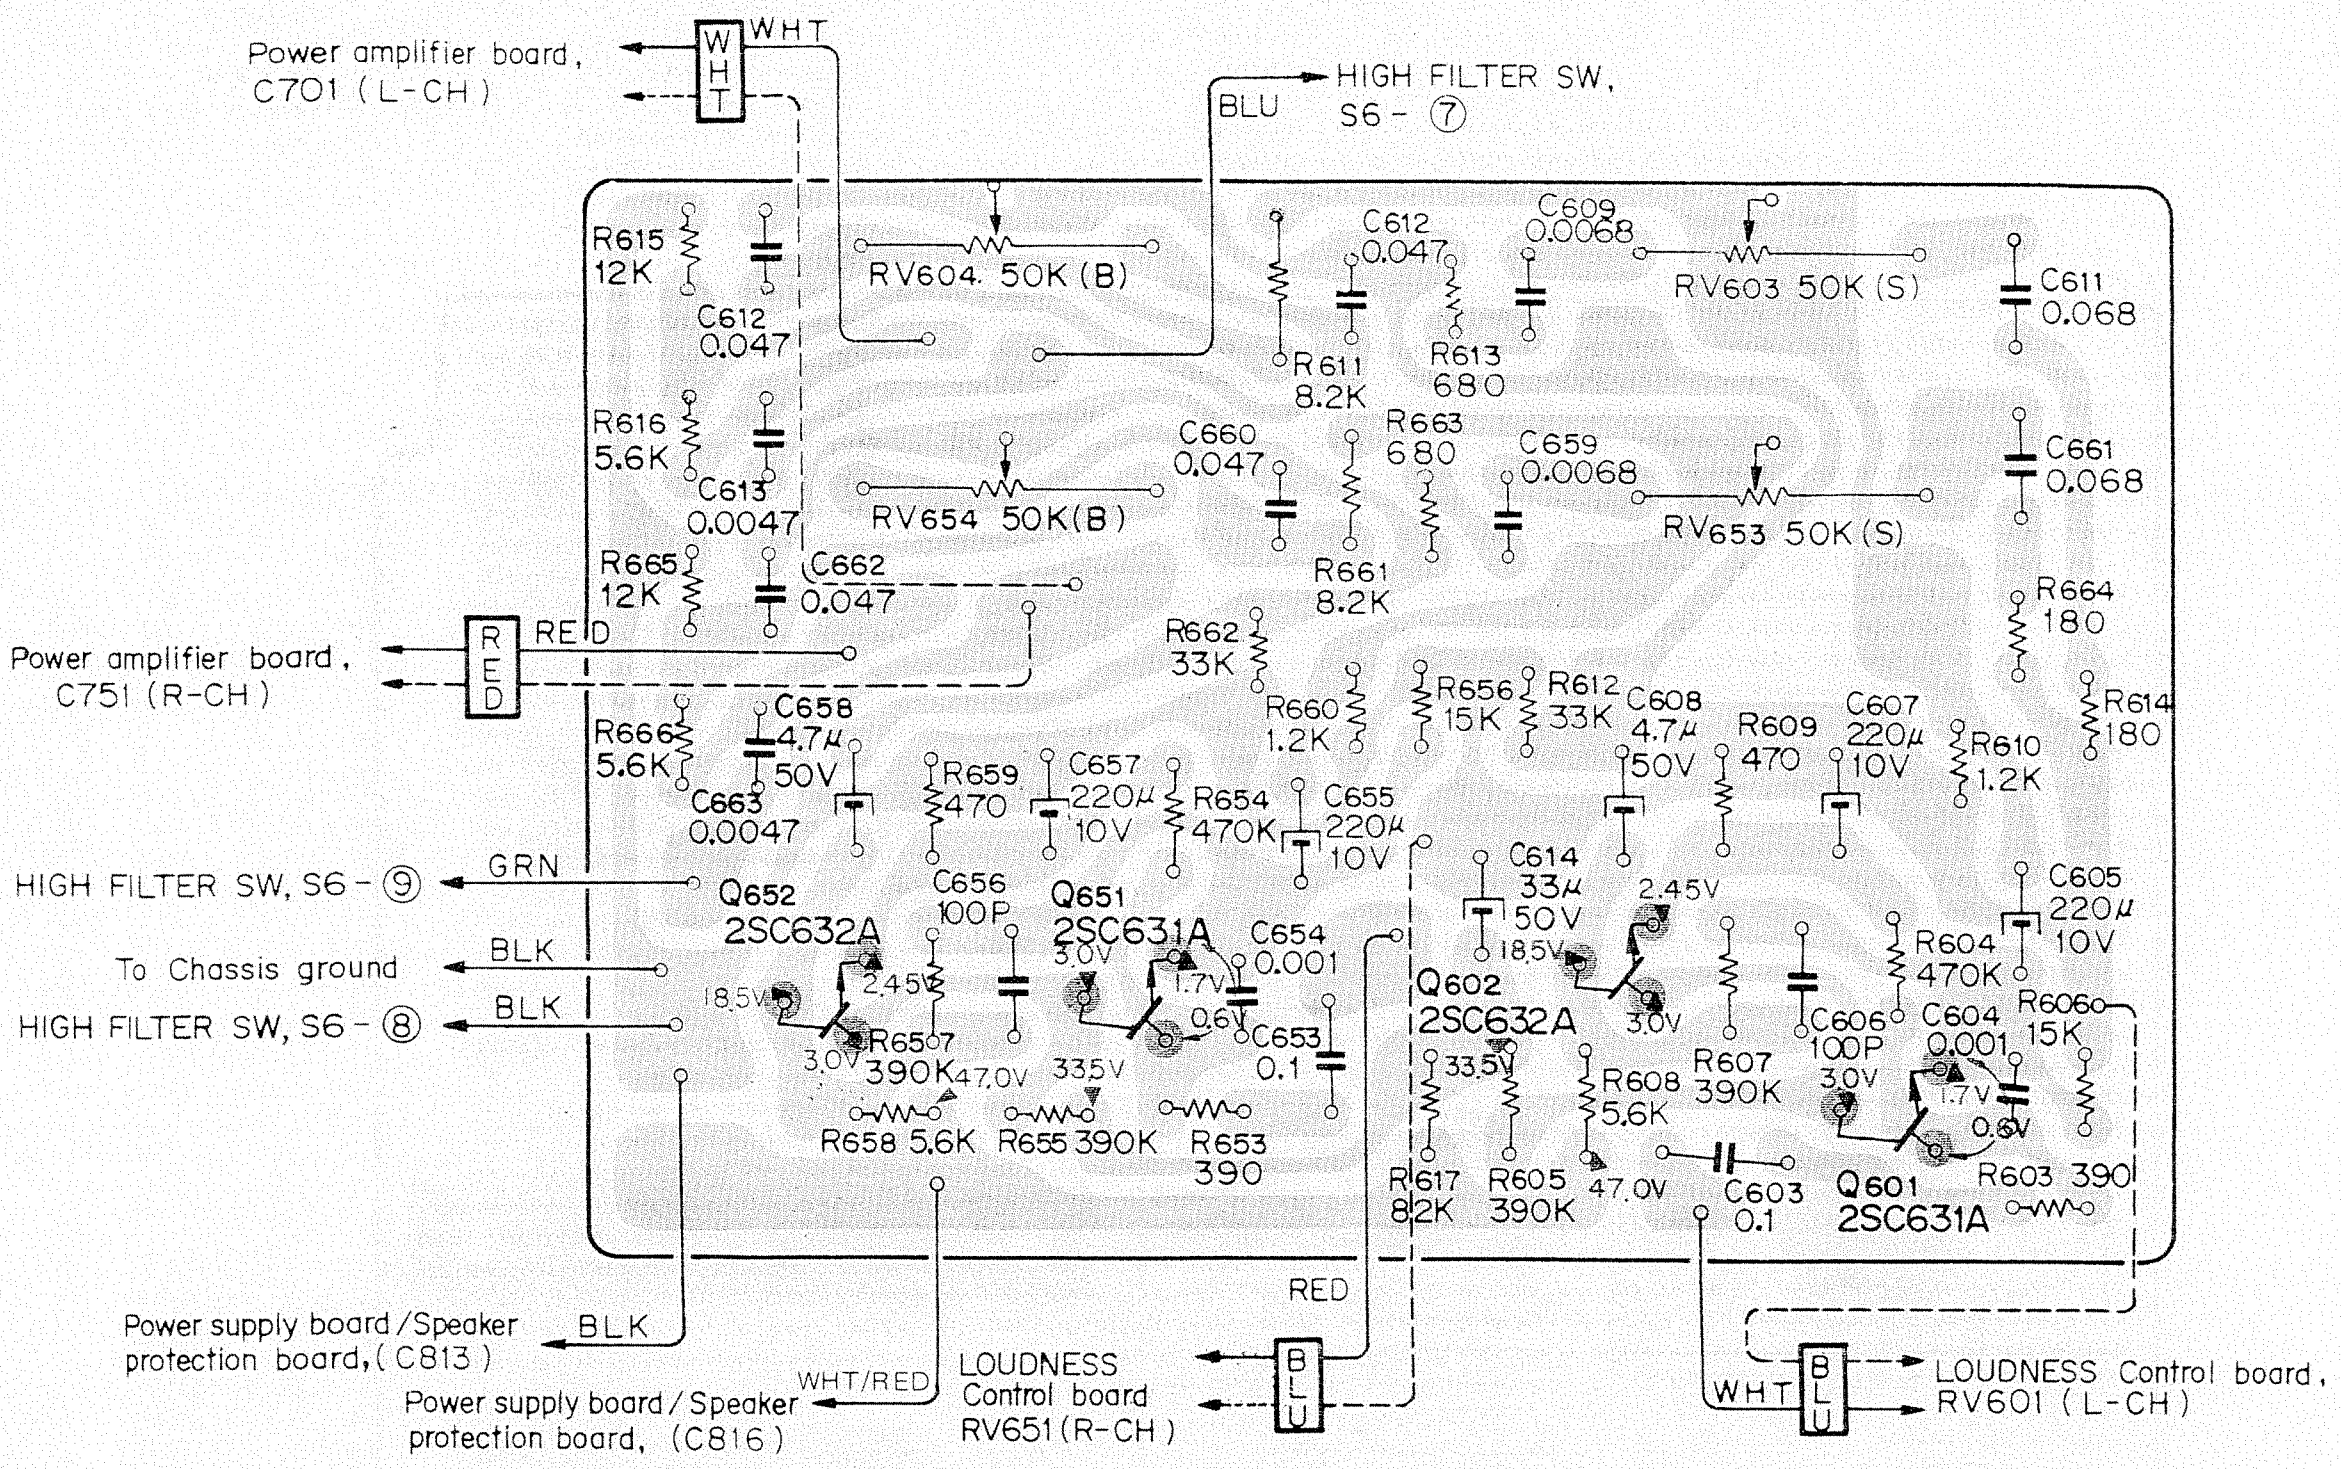
Power amplifier board, C701 (L-CH)
WHT
HIGH FILTER SW, S6-⑦
BLU
R615 12K
C612 0.047
RV604 50K (B)
R611 8.2K
C612 0.047
R613 680
C609 0.0068
RV603 50K (S)
C611 0.068
R616 5.6K
C613 0.0047
RV654 50K(B)
C660 0.047
R663 680
C659 0.0068
RV653 50K (S)
C661 0.068
R665 12K
C662 0.047
R661 8.2K
R664 180
Power amplifier board, C751 (R-CH)
RED
R662 33K
R660 1.2K
R656 15K
R612 33K
C608 4.7μ 50V
R609 470
C607 220μ 10V
R610 1.2K
R614 180
R666 5.6K
C658 4.7μ 50V
C663 0.0047
R659 470
C657 220μ 10V
R654 470K
C655 220μ 10V
C614 33μ 50V
C605 220μ 10V
HIGH FILTER SW, S6-⑨
GRN
Q652 2SC632A
C656 100P
Q651 2SC631A
C654 0.001
Q602 2SC632A
R604 470K
To Chassis ground
BLK
HIGH FILTER SW, S6-⑧
BLK
18.5V
2.45V
3.0V
1.7V
0.6V
R657 390K
C653 0.1
47.0V
33.5V
R608 5.6K
R607 390K
C606 100P
C604 0.001
R606 15K
R658 5.6K
R655 390K
R653 390
R617 8.2K
R605 390K
C603 0.1
Q601 2SC631A
R603 390
Power supply board/Speaker protection board, (C813)
BLK
RED
Power supply board/Speaker protection board, (C816)
WHT/RED
LOUDNESS Control board RV651 (R-CH)
BLU
WHT
LOUDNESS Control board, RV601 (L-CH)

– Component Side –

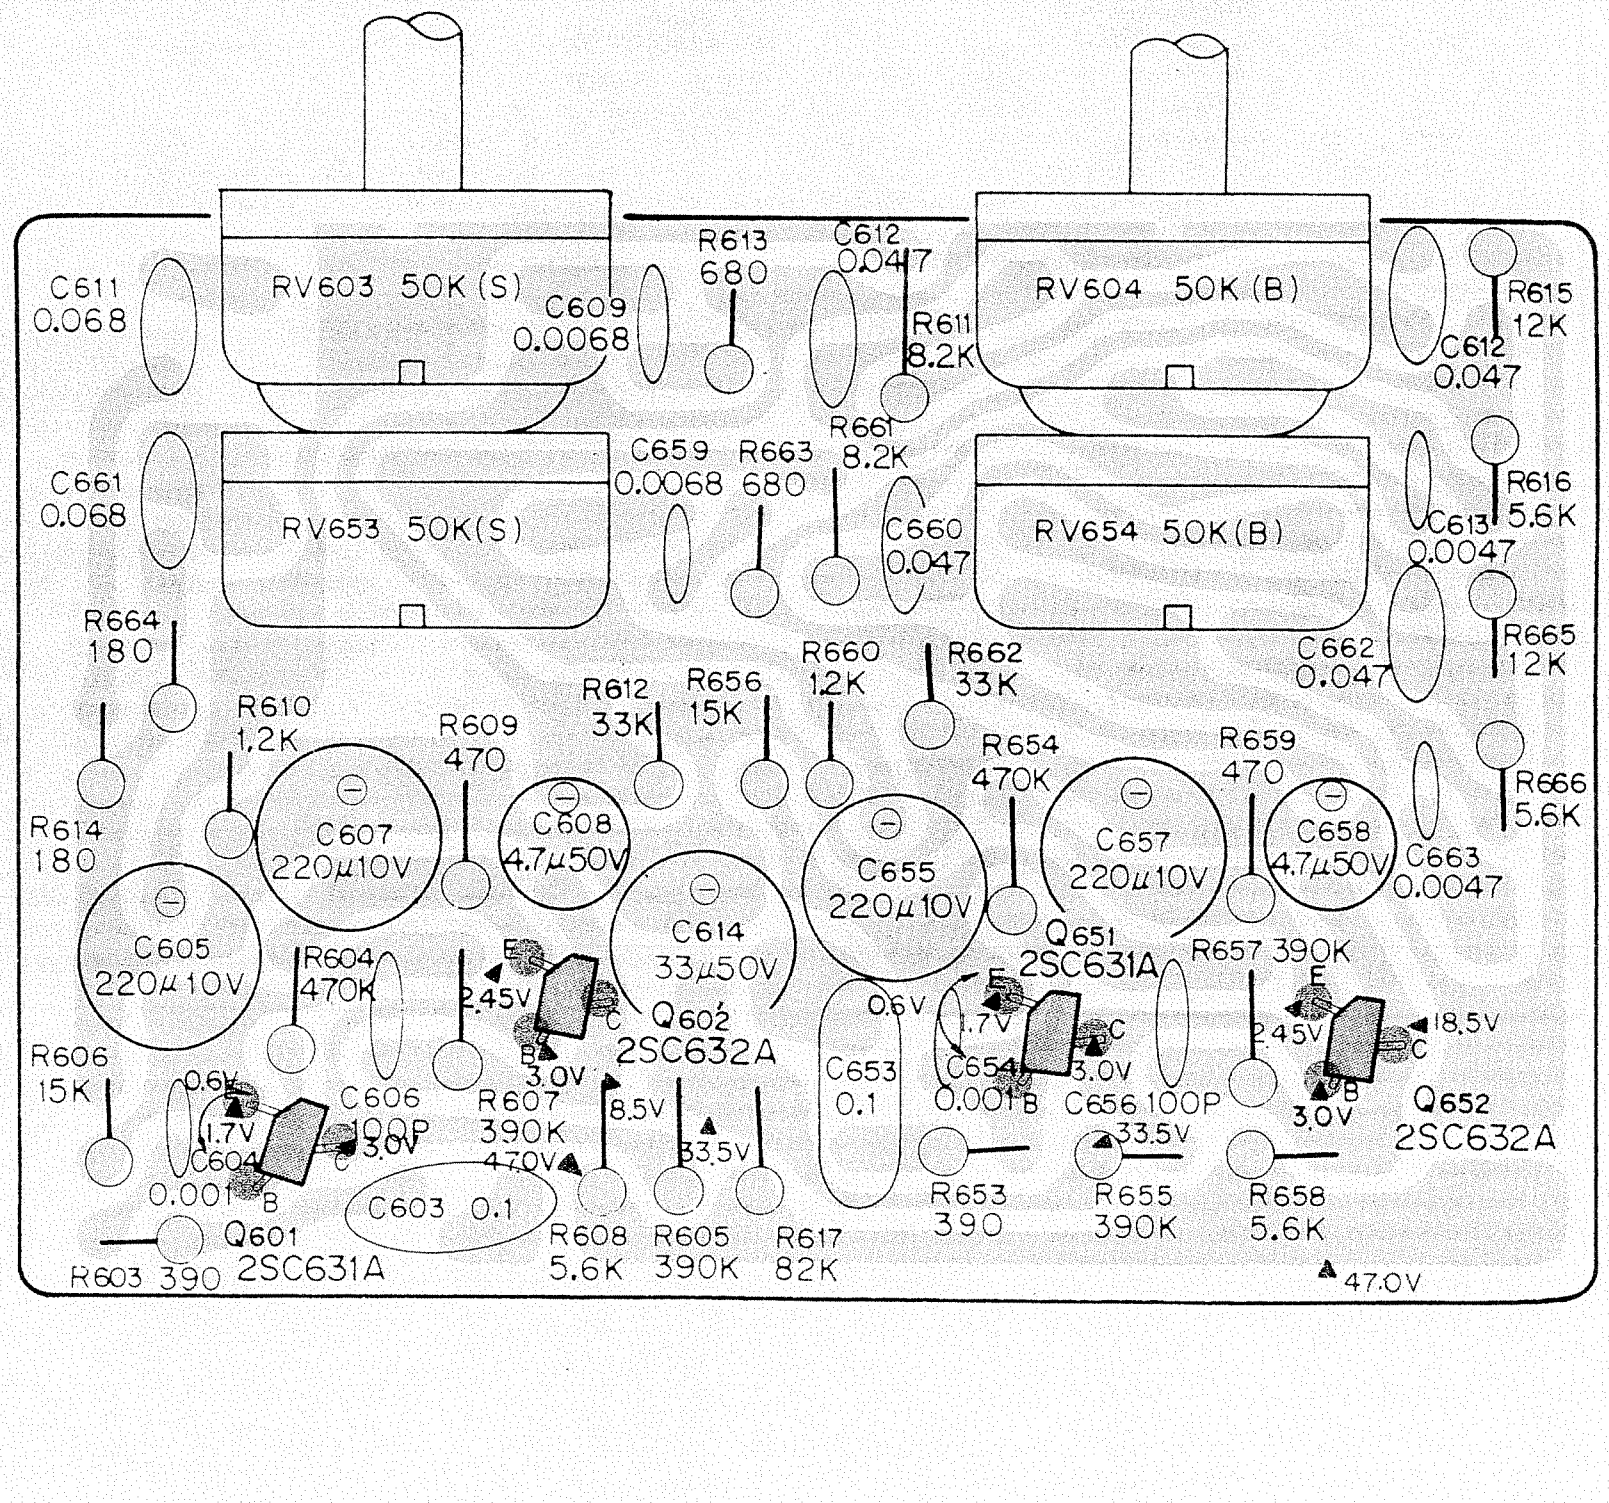
C611 0.068
RV603 50K (S)
C609 0.0068
R613 680
C612 0.047
R611 8.2K
RV604 50K (B)
R615 12K
C612 0.047
C661 0.068
RV653 50K(S)
C659 0.0068
R663 680
R661 8.2K
C660 0.047
RV654 50K(B)
C613 0.0047
R616 5.6K
R664 180
R610 1.2K
R609 470
R612 33K
R656 15K
R660 1.2K
R662 33K
C662 0.047
R665 12K
R614 180
C607 220μ10V
C608 4.7μ50V
R654 470K
C655 220μ10V
C657 220μ10V
R659 470
C658 4.7μ50V
C663 0.0047
R666 5.6K
C605 220μ10V
R604 470K
C614 33μ50V
Q602 2SC632A
Q651 2SC631A
R657 390K
2.45V
0.6V
1.7V
E
B
C
18.5V
R606 15K
C606 100P
R607 390K
3.0V
8.5V
C653 0.1
C654 0.001
C656 100P
Q652 2SC632A
C604 0.001
47.0V
33.5V
C603 0.1
R608 5.6K
R605 390K
R617 82K
R653 390
R655 390K
R658 5.6K
R603 390
Q601 2SC631A
47.0V

SCHEMATIC DIAGRAM – Tuner Section –

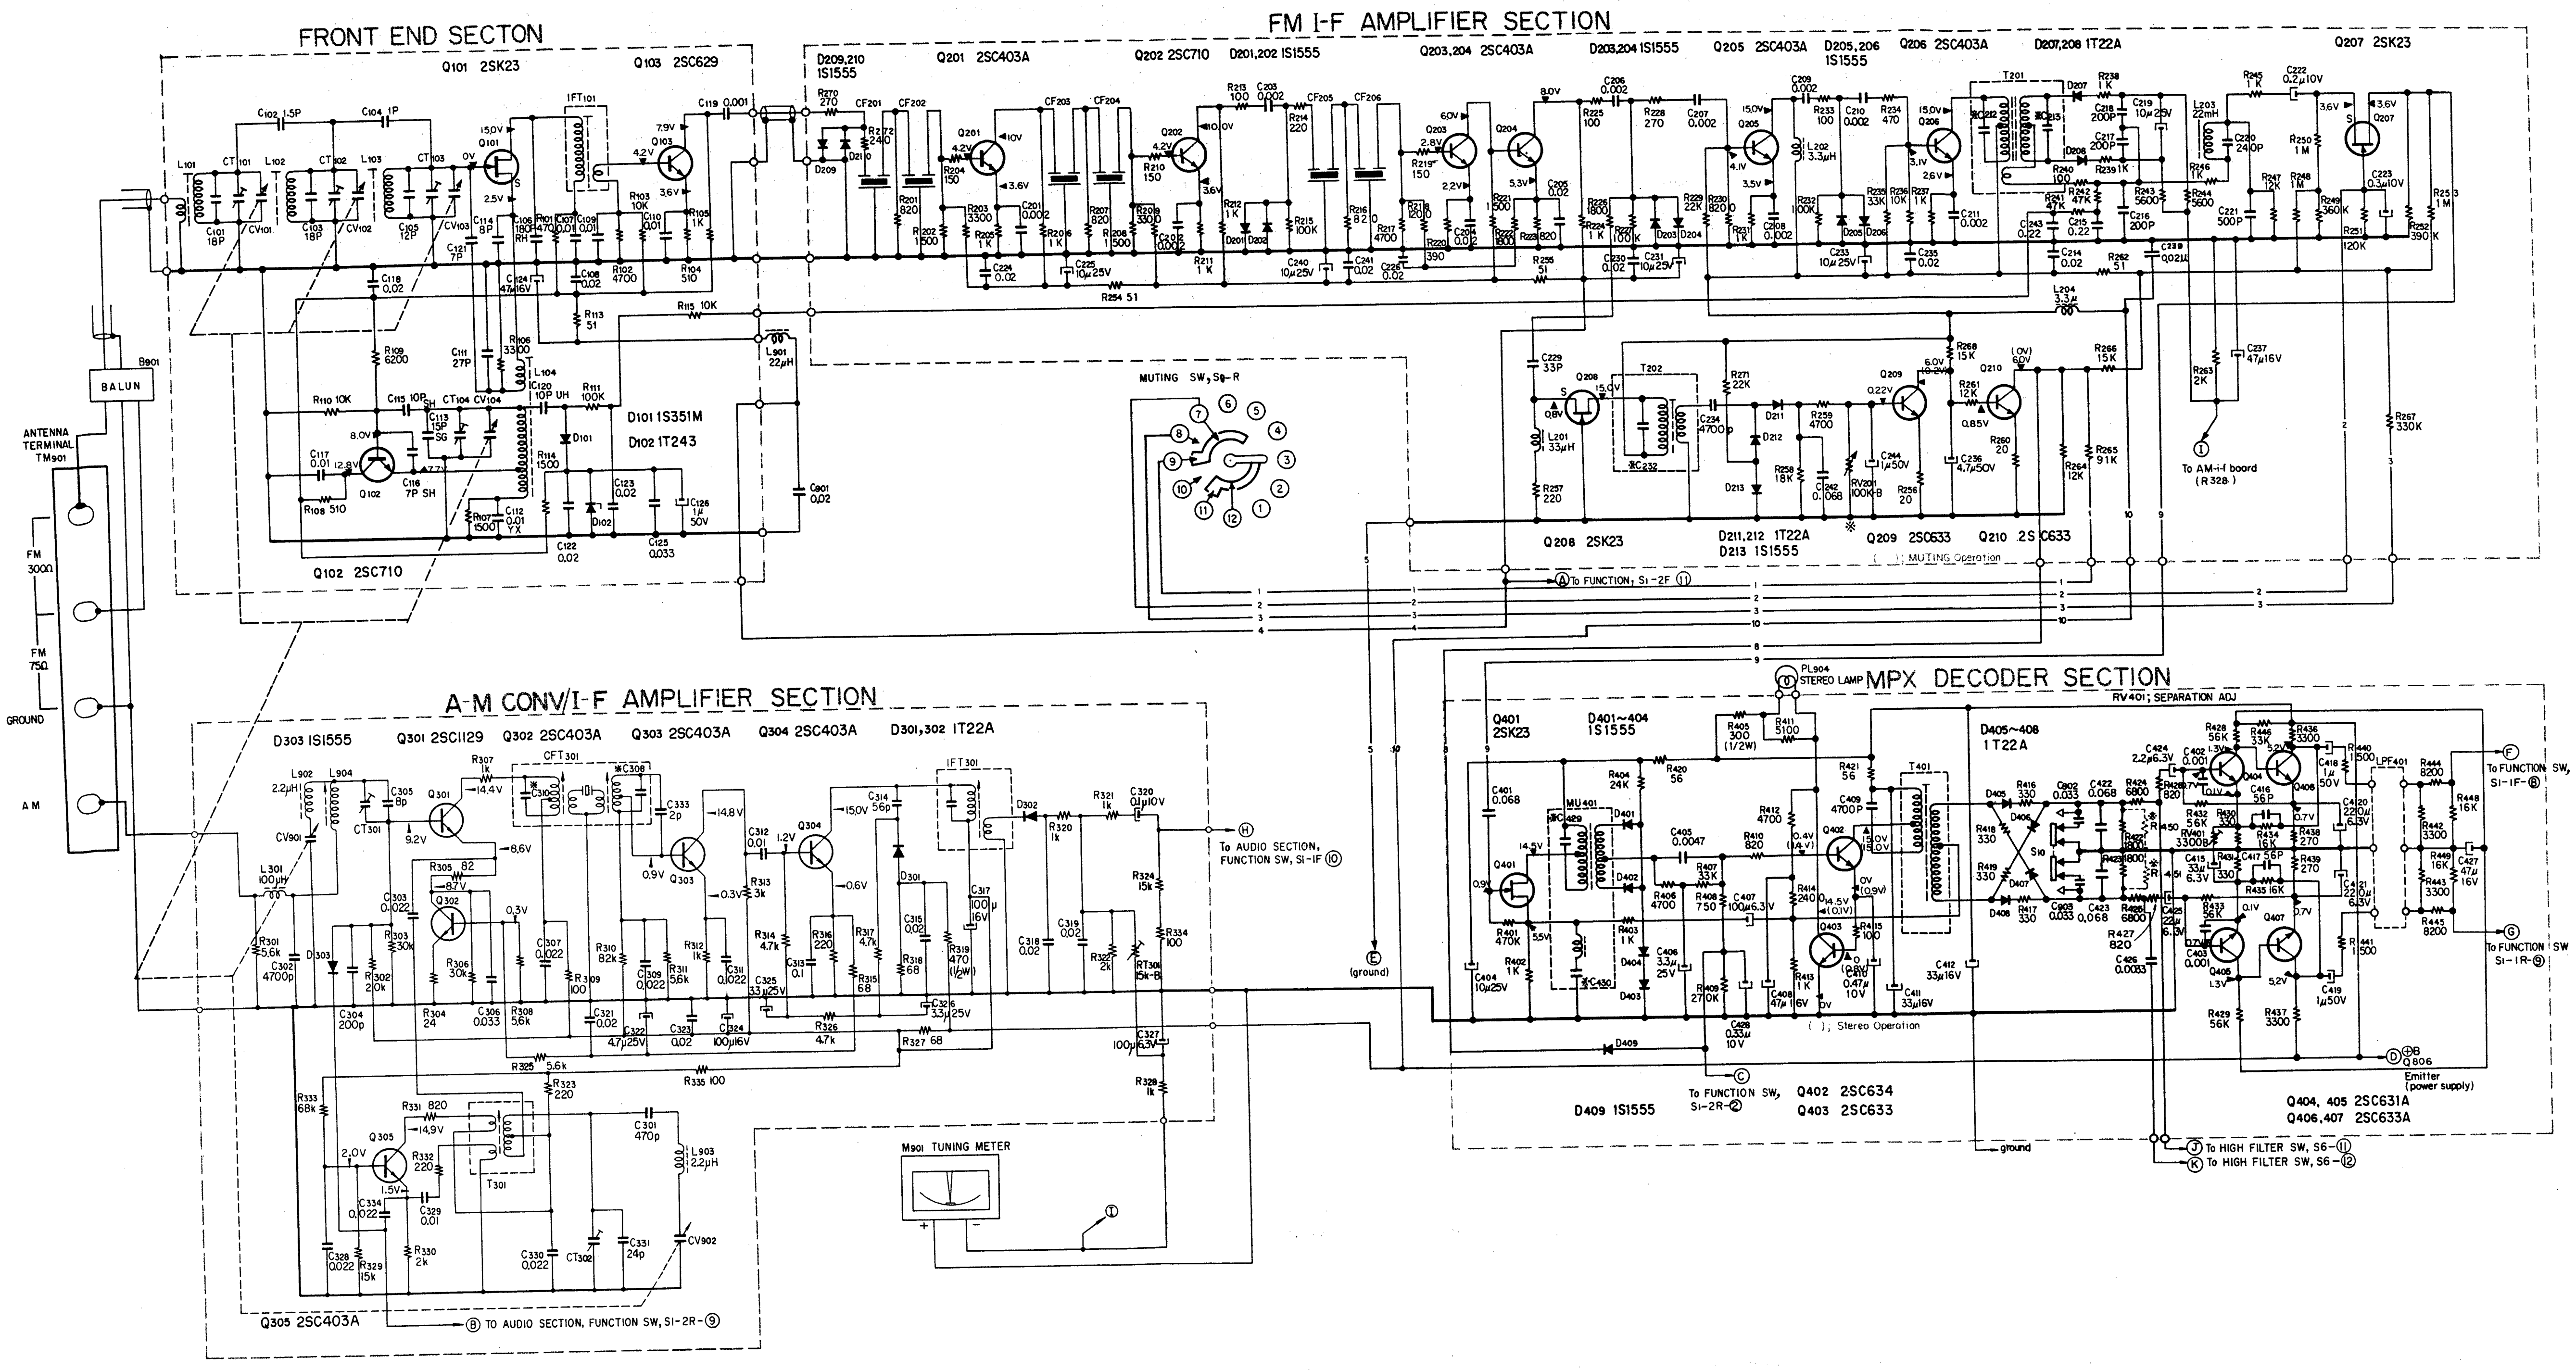
FRONT END SECTON
Q101 2SK23
Q103 2SC629
Q102 2SC710
D101 1S351M
D102 1T243
BALUN
ANTENNA TERMINAL TM901
FM 300Ω
FM 75Ω
GROUND
AM
FM I-F AMPLIFIER SECTION
D209,210 1S1555
Q201 2SC403A
Q202 2SC710
D201,202 1S1555
Q203,204 2SC403A
D203,204 1S1555
Q205 2SC403A
D205,206 1S1555
Q206 2SC403A
D207,208 1T22A
Q207 2SK23
MUTING SW, S9-R
To AM-i-f board (R328)
Q208 2SK23
D211,212 1T22A
D213 1S1555
Q209 2SC633
Q210 2SC633
[ ]: MUTING Operation
Ⓐ To FUNCTION, S1-2F ⑪
A-M CONV/I-F AMPLIFIER SECTION
D303 1S1555
Q301 2SC1129
Q302 2SC403A
Q303 2SC403A
Q304 2SC403A
D301,302 1T22A
Ⓗ To AUDIO SECTION, FUNCTION SW, S1-1F ⑩
Ⓔ (ground)
M901 TUNING METER
Q305 2SC403A
Ⓑ TO AUDIO SECTION, FUNCTION SW, S1-2R-⑨
Ⓓ PL904 STEREO LAMP
MPX DECODER SECTION
RV401; SEPARATION ADJ
Q401 2SK23
D401~404 1S1555
D405~408 1T22A
Ⓕ To FUNCTION SW, S1-1F-⑧
Ⓖ To FUNCTION SW S1-1R-⑧
( ); Stereo Operation
Ⓒ To FUNCTION SW, S1-2R-②
D409 1S1555
Q402 2SC634
Q403 2SC633
Q404, 405 2SC631A
Q406,407 2SC633A
Ⓓ Q806 Emitter (power supply)
Ⓙ To HIGH FILTER SW, S6-⑪
Ⓚ To HIGH FILTER SW, S6-⑫
ground

Ref. No.	Description	Position
S9	MUTING SW	ON
S10	DE-EMPHASIS SW	75 μsec

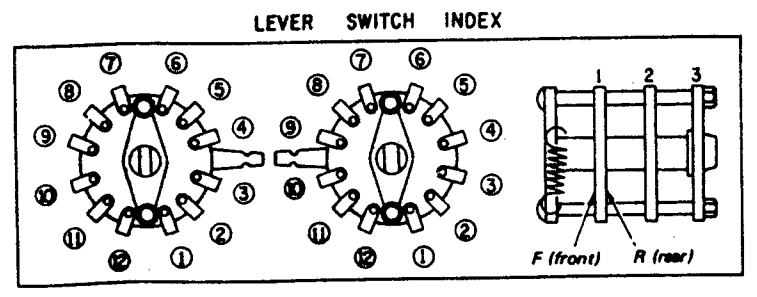
LEVER SWITCH INDEX
F (front)
R (rear)
1
2
3

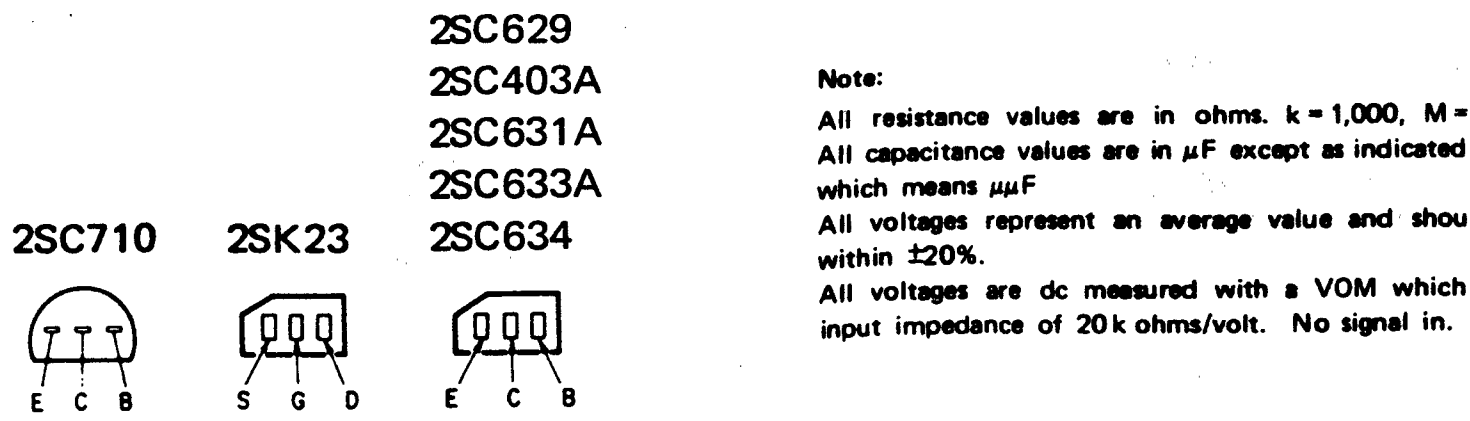
2SC629
2SC403A
2SC631A
2SC633A
2SC634
2SC710
2SK23
E C B
S G D
E C B

Note:

All resistance values are in ohms. k = 1,000, M = 1,000 k

All capacitance values are in μF except as indicated with p, which means μμF

All voltages represent an average value and should hold within ±20%.

All voltages are dc measured with a VOM which has an input impedance of 20 k ohms/volt. No signal in.

SONY

STR-6065

© 1971

SCHEMATIC DIAGRAM – Audio Section –

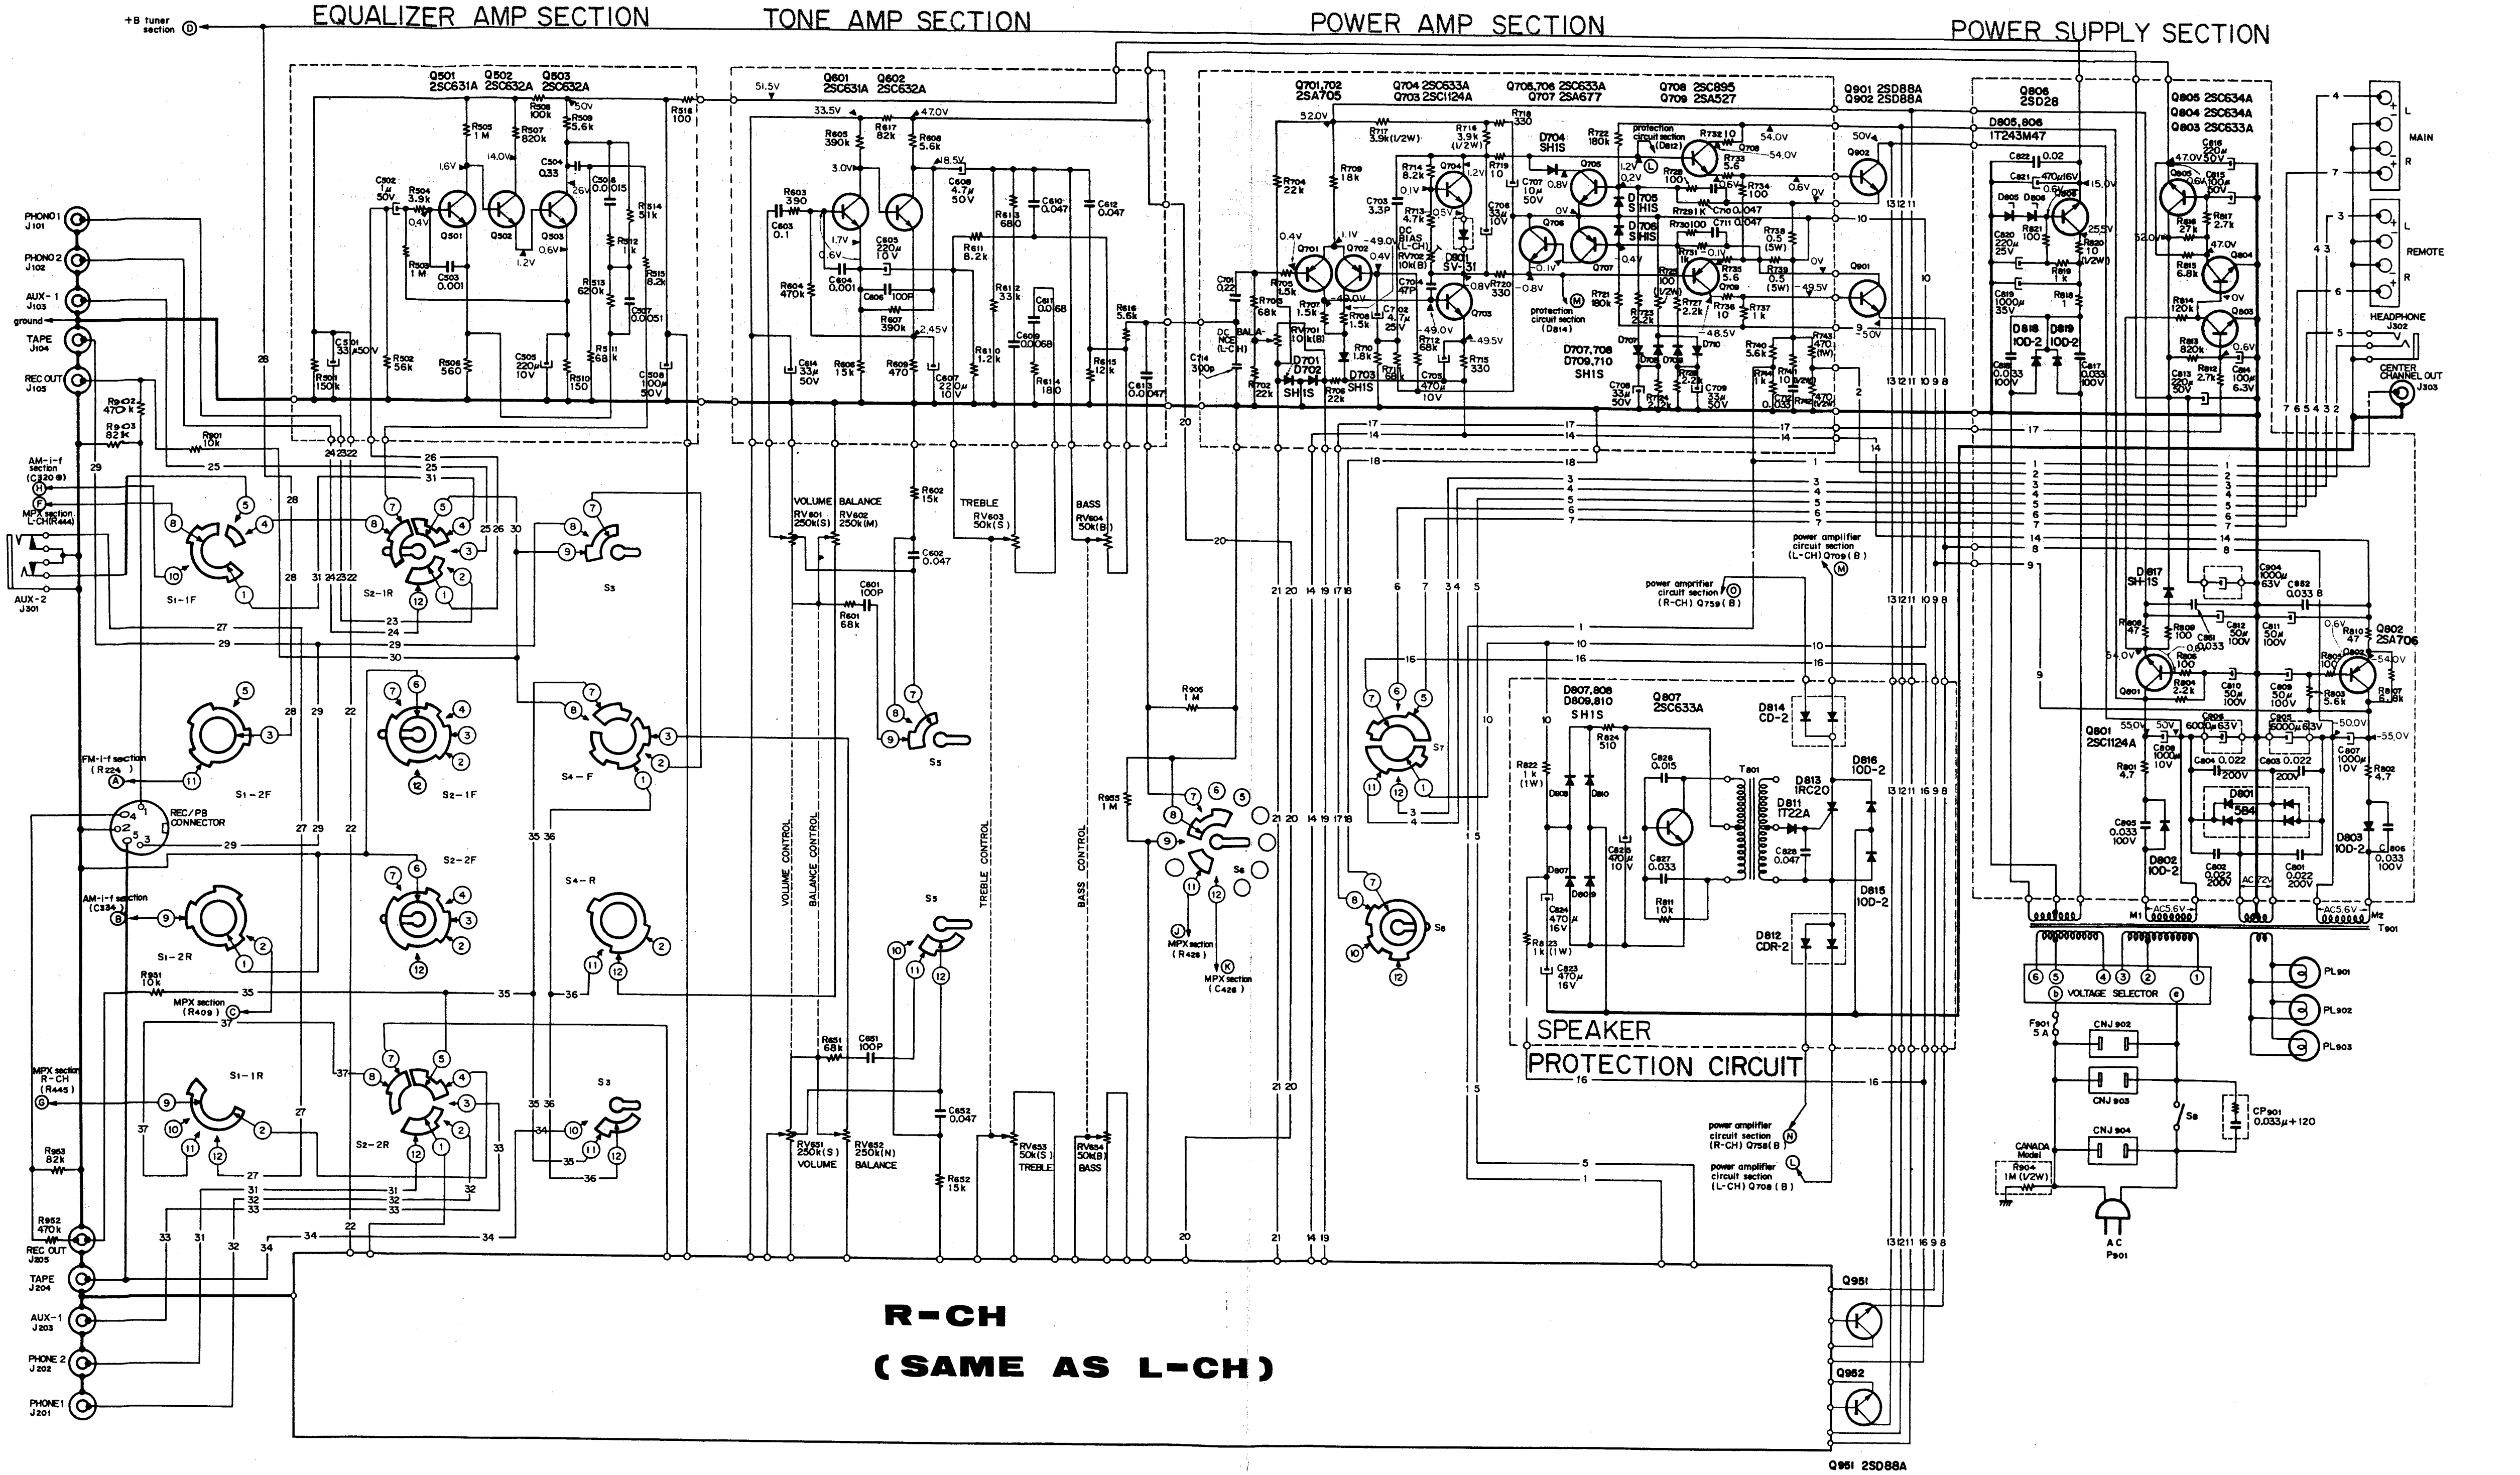
EQUALIZER AMP SECTION
TONE AMP SECTION
POWER AMP SECTION
POWER SUPPLY SECTION
+B tuner section
PHONO 1 J101
PHONO 2 J102
AUX-1 J103
TAPE J104
REC OUT J105
AUX-2 J301
REC/PB CONNECTOR
VOLUME CONTROL
BALANCE CONTROL
TREBLE CONTROL
BASS CONTROL
SPEAKER PROTECTION CIRCUIT
MAIN
REMOTE
HEADPHONE J302
CENTER CHANNEL OUT J303
VOLTAGE SELECTOR
CANADA Model
AC P901
R-CH (SAME AS L-CH)
Q951 2SD88A
Q952 2SD88A

Ref. No.	Description	Position
S1	FUNCTION (1) (FM AUTO STEREO - FM MONO - AM - PHONO-2 - AUX-2)	AUTO STEREO
S2	FUNCTION (2) SW (AUX-1 - FUNCTION (1) - PHONO-1)	FUNCTION (1)
S3	MONITOR SW (SOURCE - TAPE)	SOURCE
S4	MODE SW (REVERSE - STEREO - L+R - LEFT - RIGHT)	STEREO

Ref. No.	Description	Position
S5	LOUDNESS SW	ON
S6	HIGH FILTER	OFF
S7	SPEAKER SW (REMOTE - OFF - MAIN - BOTH)	BOTH
S8	POWER SW	OFF

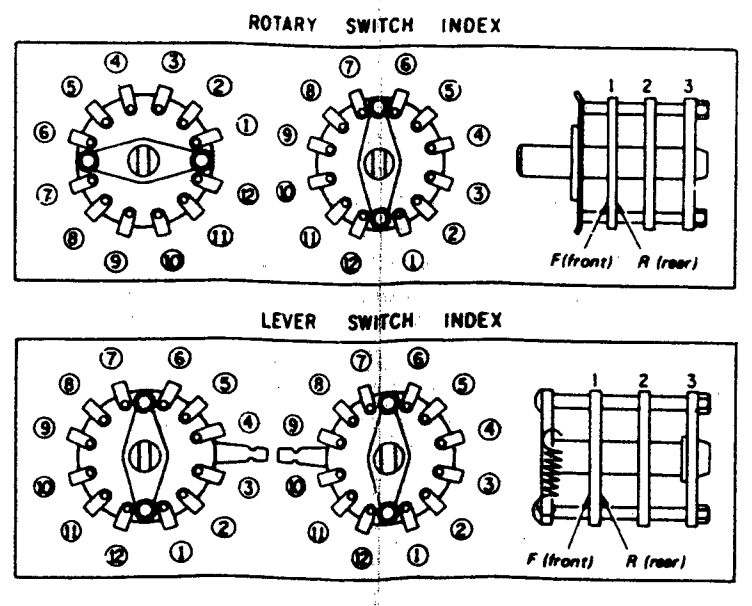
ROTARY SWITCH INDEX
LEVER SWITCH INDEX
F (front)
R (rear)

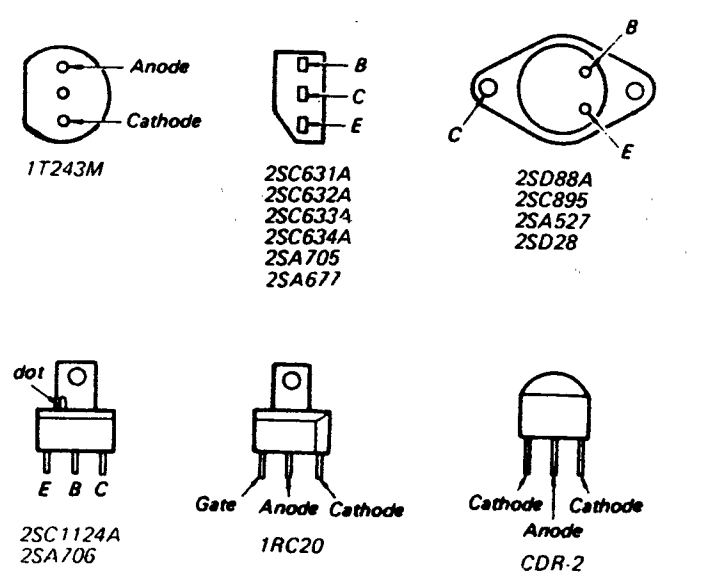
Anode
Cathode
1T243M
B
C
E
2SC631A
2SC632A
2SC633A
2SC634A
2SA705
2SA677
2SD88A
2SC895
2SA527
2SD28
dot
E B C
2SC1124A
2SA706
Gate
Anode
Cathode
1RC20
Cathode
Anode
Cathode
CDR-2

Note:
All resistance values are in ohms. k = 1,000, M = 1,000 k
All capacitance values are in µF except as indicated with p, which means µµF.
All voltages represent an average value and should hold within ±20%.
All voltages are dc measured with a VOM which has an input impedance of 20 k ohms/volt. No signal in.

SONY
STR-6065
© 1971

SECTION 6
EXPLODED VIEW

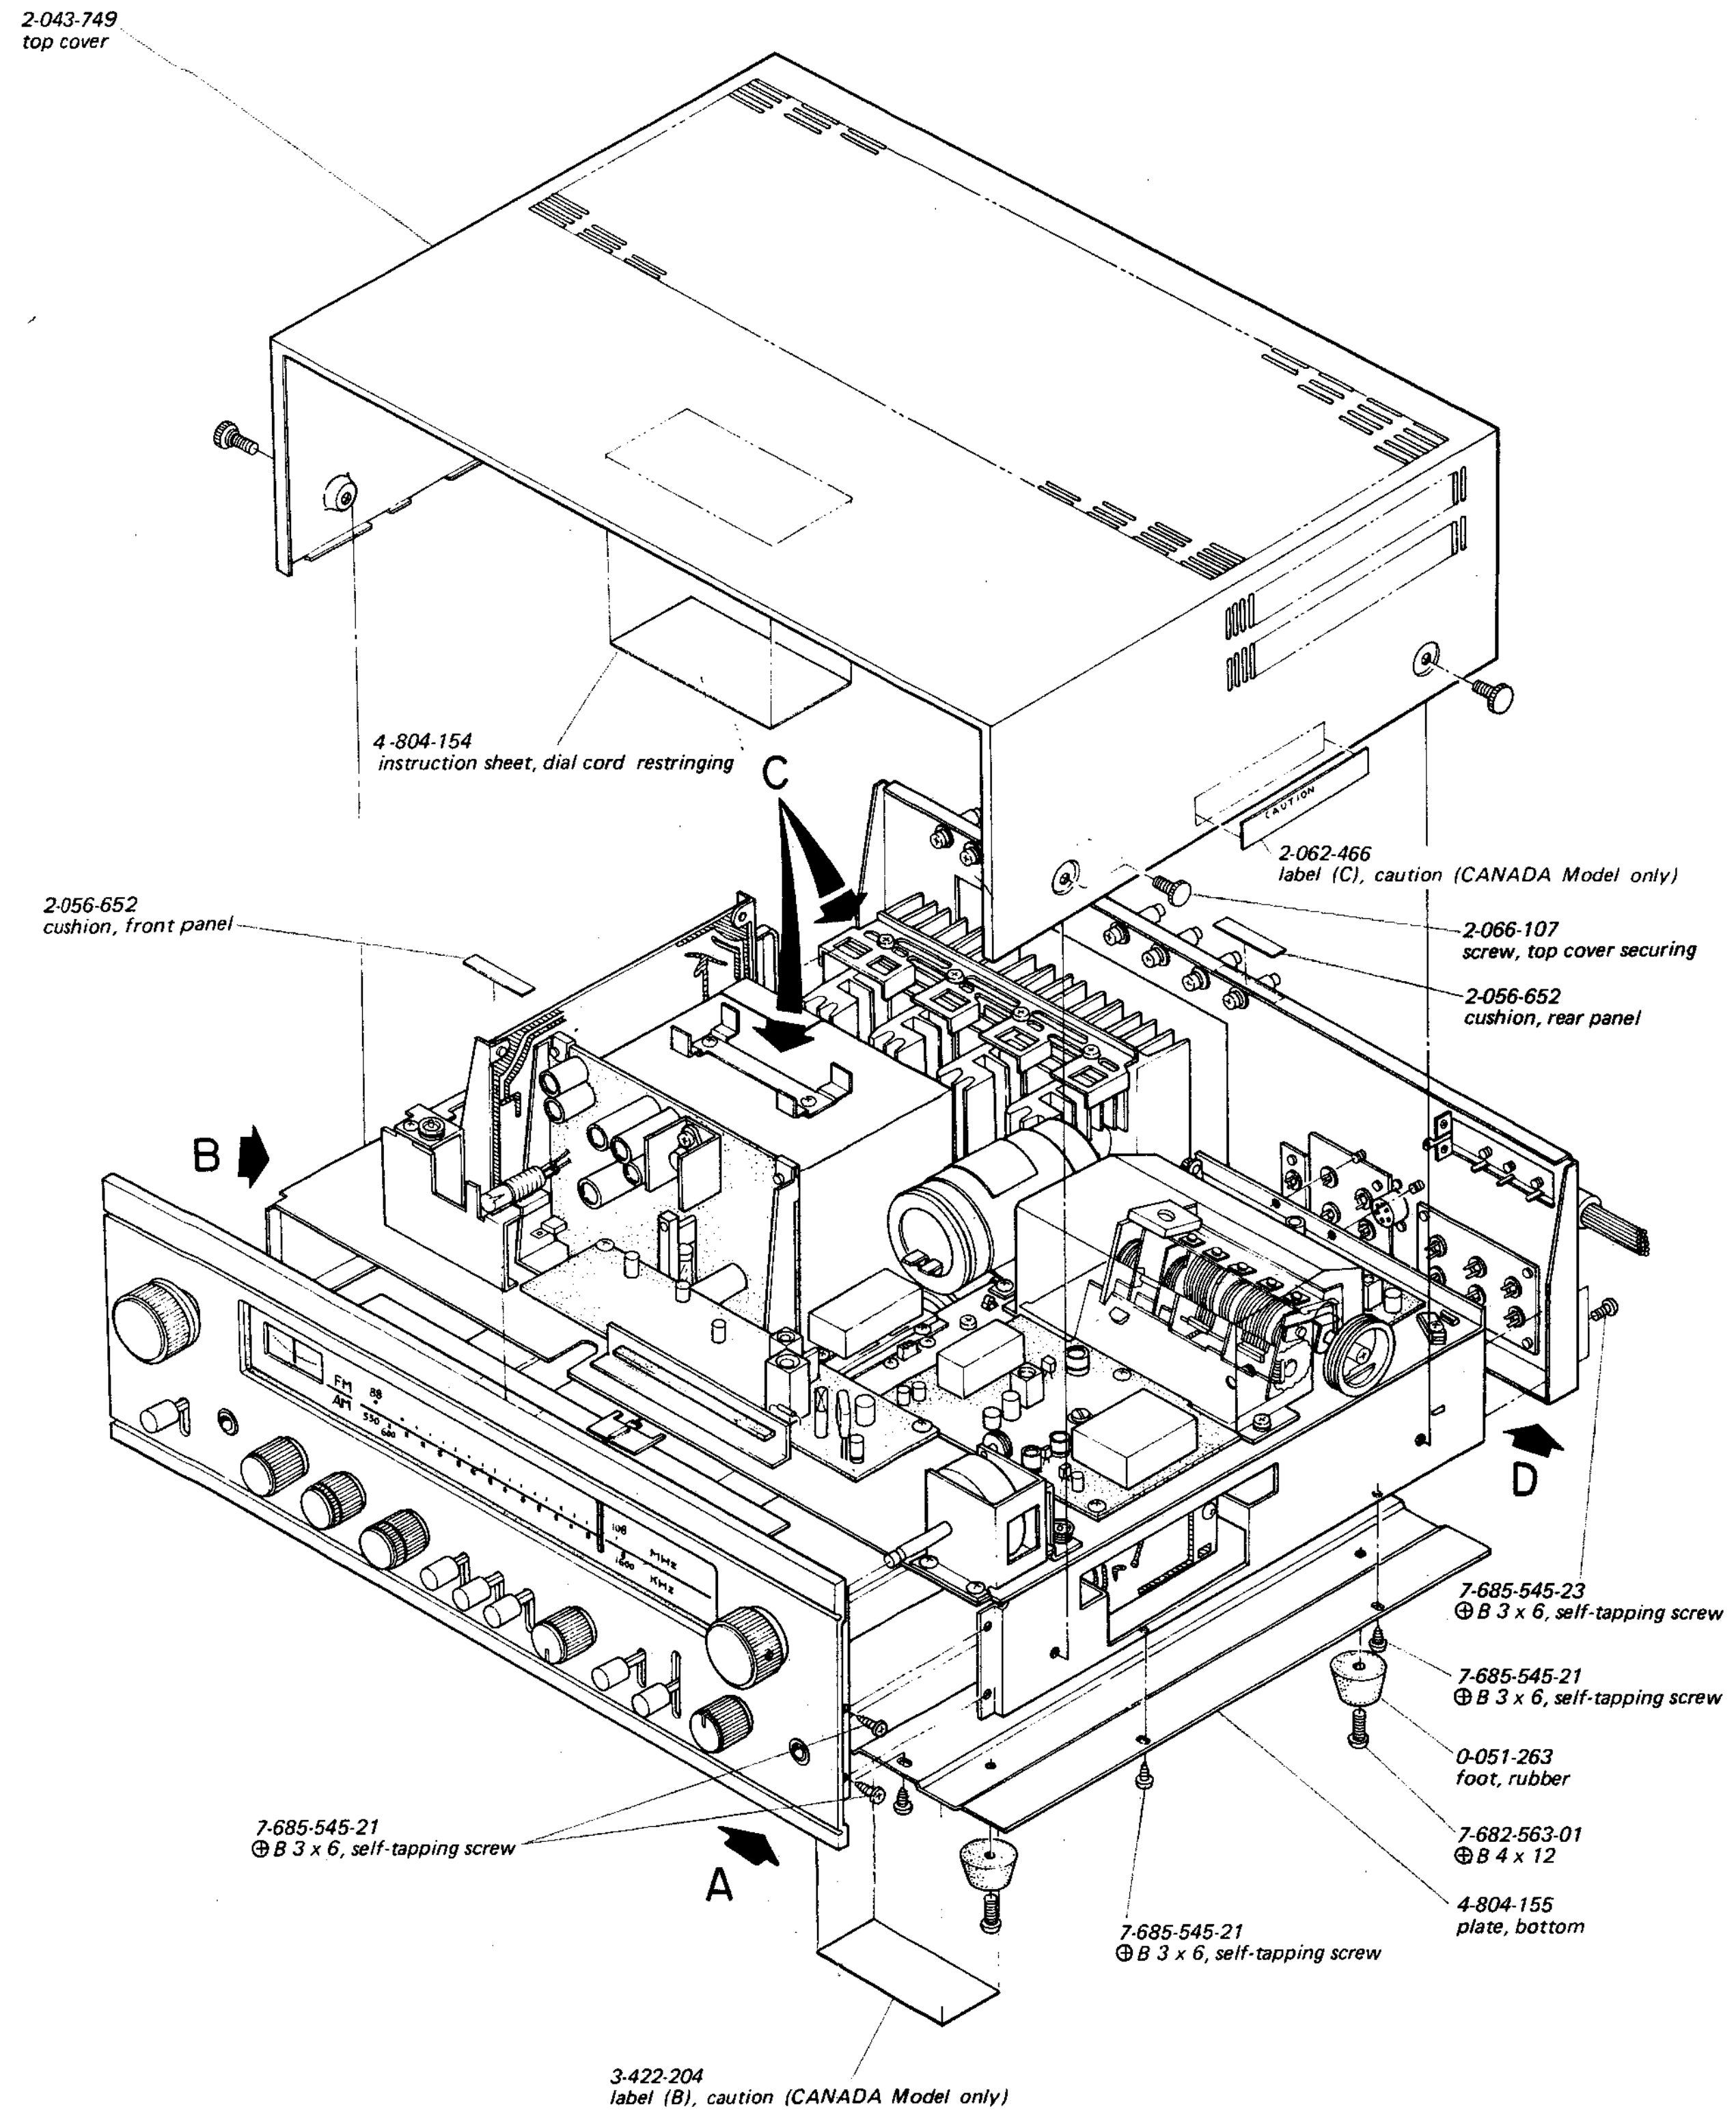
2-043-749
top cover
4-804-154
instruction sheet, dial cord restringing
C
2-062-466
label (C), caution (CANADA Model only)
CAUTION
2-056-652
cushion, front panel
2-066-107
screw, top cover securing
2-056-652
cushion, rear panel
B
FM
AM
D
7-685-545-23
⊕B 3 x 6, self-tapping screw
7-685-545-21
⊕B 3 x 6, self-tapping screw
0-051-263
foot, rubber
7-682-563-01
⊕B 4 x 12
4-804-155
plate, bottom
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-685-545-21
⊕B 3 x 6, self-tapping screw
A
3-422-204
label (B), caution (CANADA Model only)

EXPLODED VIEW

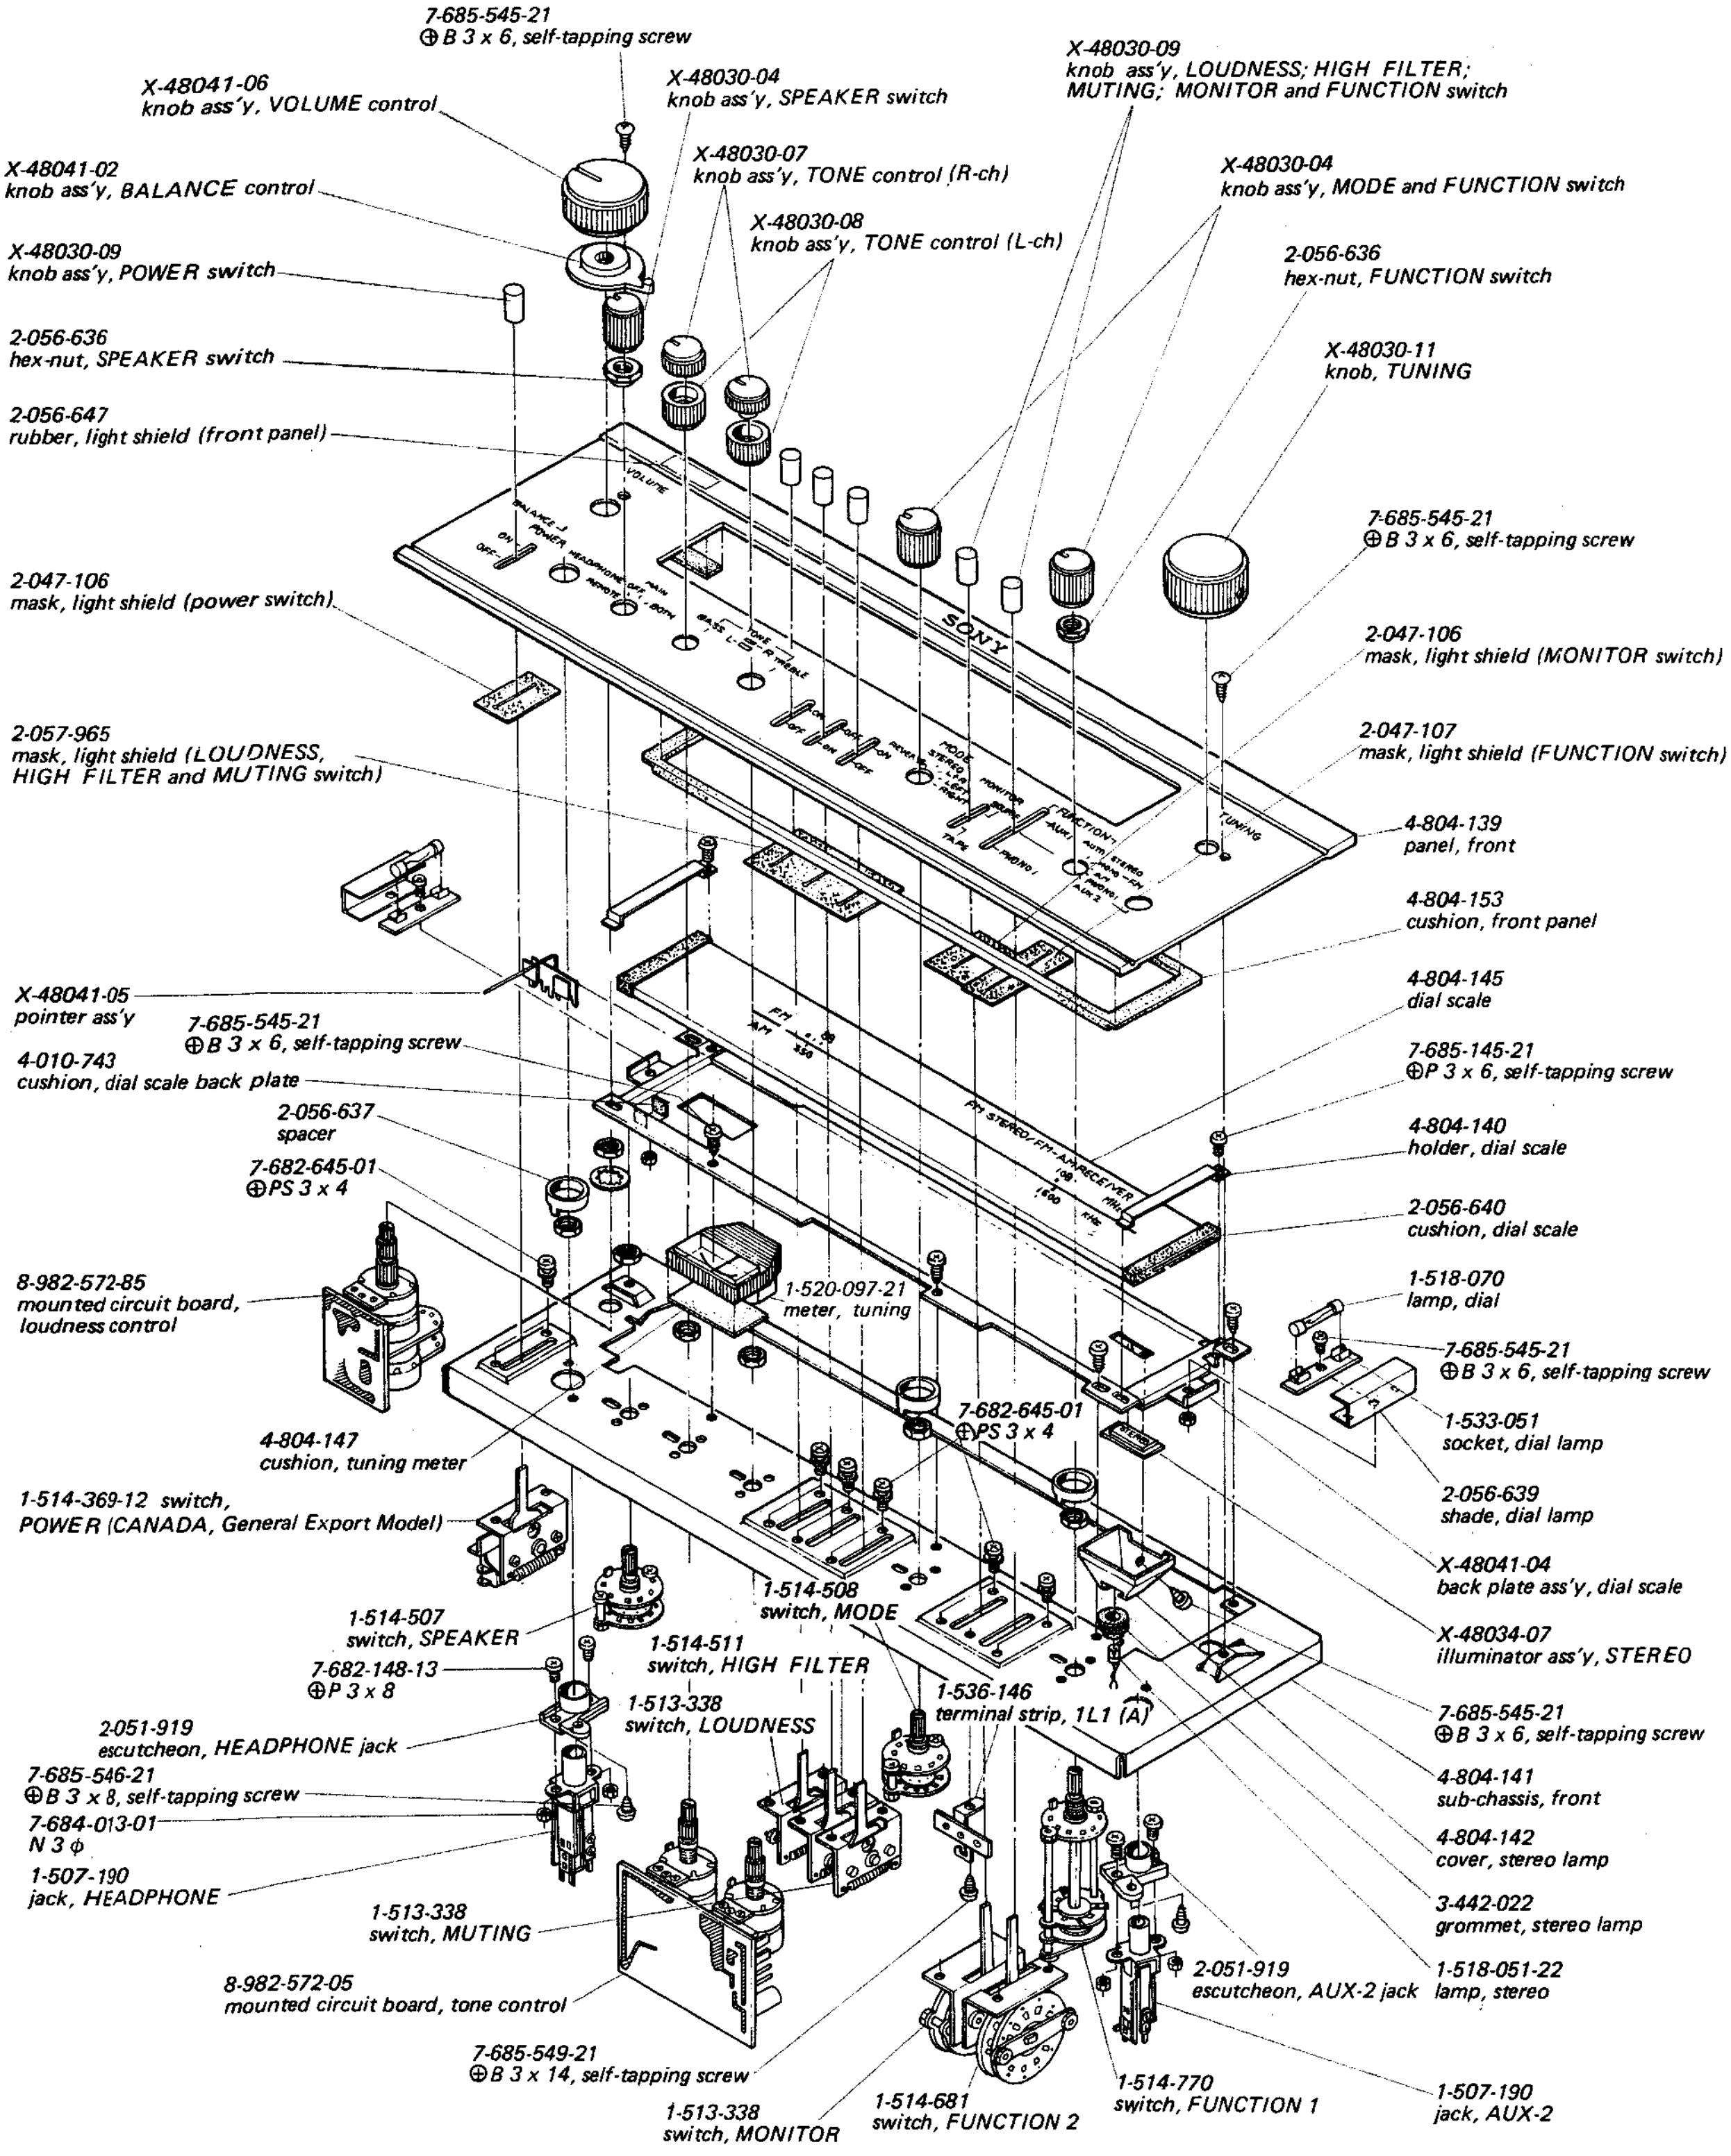
7-685-545-21
⊕B 3 x 6, self-tapping screw
X-48041-06
knob ass'y, VOLUME control
X-48030-04
knob ass'y, SPEAKER switch
X-48030-09
knob ass'y, LOUDNESS; HIGH FILTER;
MUTING; MONITOR and FUNCTION switch
X-48041-02
knob ass'y, BALANCE control
X-48030-07
knob ass'y, TONE control (R-ch)
X-48030-04
knob ass'y, MODE and FUNCTION switch
X-48030-08
knob ass'y, TONE control (L-ch)
X-48030-09
knob ass'y, POWER switch
2-056-636
hex-nut, FUNCTION switch
2-056-636
hex-nut, SPEAKER switch
X-48030-11
knob, TUNING
2-056-647
rubber, light shield (front panel)
7-685-545-21
⊕B 3 x 6, self-tapping screw
2-047-106
mask, light shield (power switch)
2-047-106
mask, light shield (MONITOR switch)
2-057-965
mask, light shield (LOUDNESS,
HIGH FILTER and MUTING switch)
2-047-107
mask, light shield (FUNCTION switch)
4-804-139
panel, front
4-804-153
cushion, front panel
X-48041-05
pointer ass'y
4-804-145
dial scale
7-685-545-21
⊕B 3 x 6, self-tapping screw
4-010-743
cushion, dial scale back plate
7-685-145-21
⊕P 3 x 6, self-tapping screw
2-056-637
spacer
4-804-140
holder, dial scale
7-682-645-01
⊕PS 3 x 4
2-056-640
cushion, dial scale
8-982-572-85
mounted circuit board,
loudness control
1-518-070
lamp, dial
1-520-097-21
meter, tuning
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-682-645-01
⊕PS 3 x 4
1-533-051
socket, dial lamp
4-804-147
cushion, tuning meter
2-056-639
shade, dial lamp
1-514-369-12 switch,
POWER (CANADA, General Export Model)
X-48041-04
back plate ass'y, dial scale
1-514-508
switch, MODE
X-48034-07
illuminator ass'y, STEREO
1-514-507
switch, SPEAKER
1-514-511
switch, HIGH FILTER
7-682-148-13
⊕P 3 x 8
1-536-146
terminal strip, 1L1 (A)
7-685-545-21
⊕B 3 x 6, self-tapping screw
1-513-338
switch, LOUDNESS
2-051-919
escutcheon, HEADPHONE jack
4-804-141
sub-chassis, front
7-685-546-21
⊕B 3 x 8, self-tapping screw
4-804-142
cover, stereo lamp
7-684-013-01
N 3 φ
1-507-190
jack, HEADPHONE
3-442-022
grommet, stereo lamp
1-513-338
switch, MUTING
2-051-919
escutcheon, AUX-2 jack
1-518-051-22
lamp, stereo
8-982-572-05
mounted circuit board, tone control
7-685-549-21
⊕B 3 x 14, self-tapping screw
1-514-770
switch, FUNCTION 1
1-507-190
jack, AUX-2
1-513-338
switch, MONITOR
1-514-681
switch, FUNCTION 2
SONY
VOLUME
BALANCE
POWER
ON
OFF
HEADPHONE
MAIN
REMOTE
BOTH
BASS
TONE
TREBLE
MODE
STEREO
MONITOR
FUNCTION
TAPE
PHONO
AUX
TUNING
FM
AM
FM STEREO/FM-AM RECEIVER

DETAIL "A"

EXPLODED VIEW

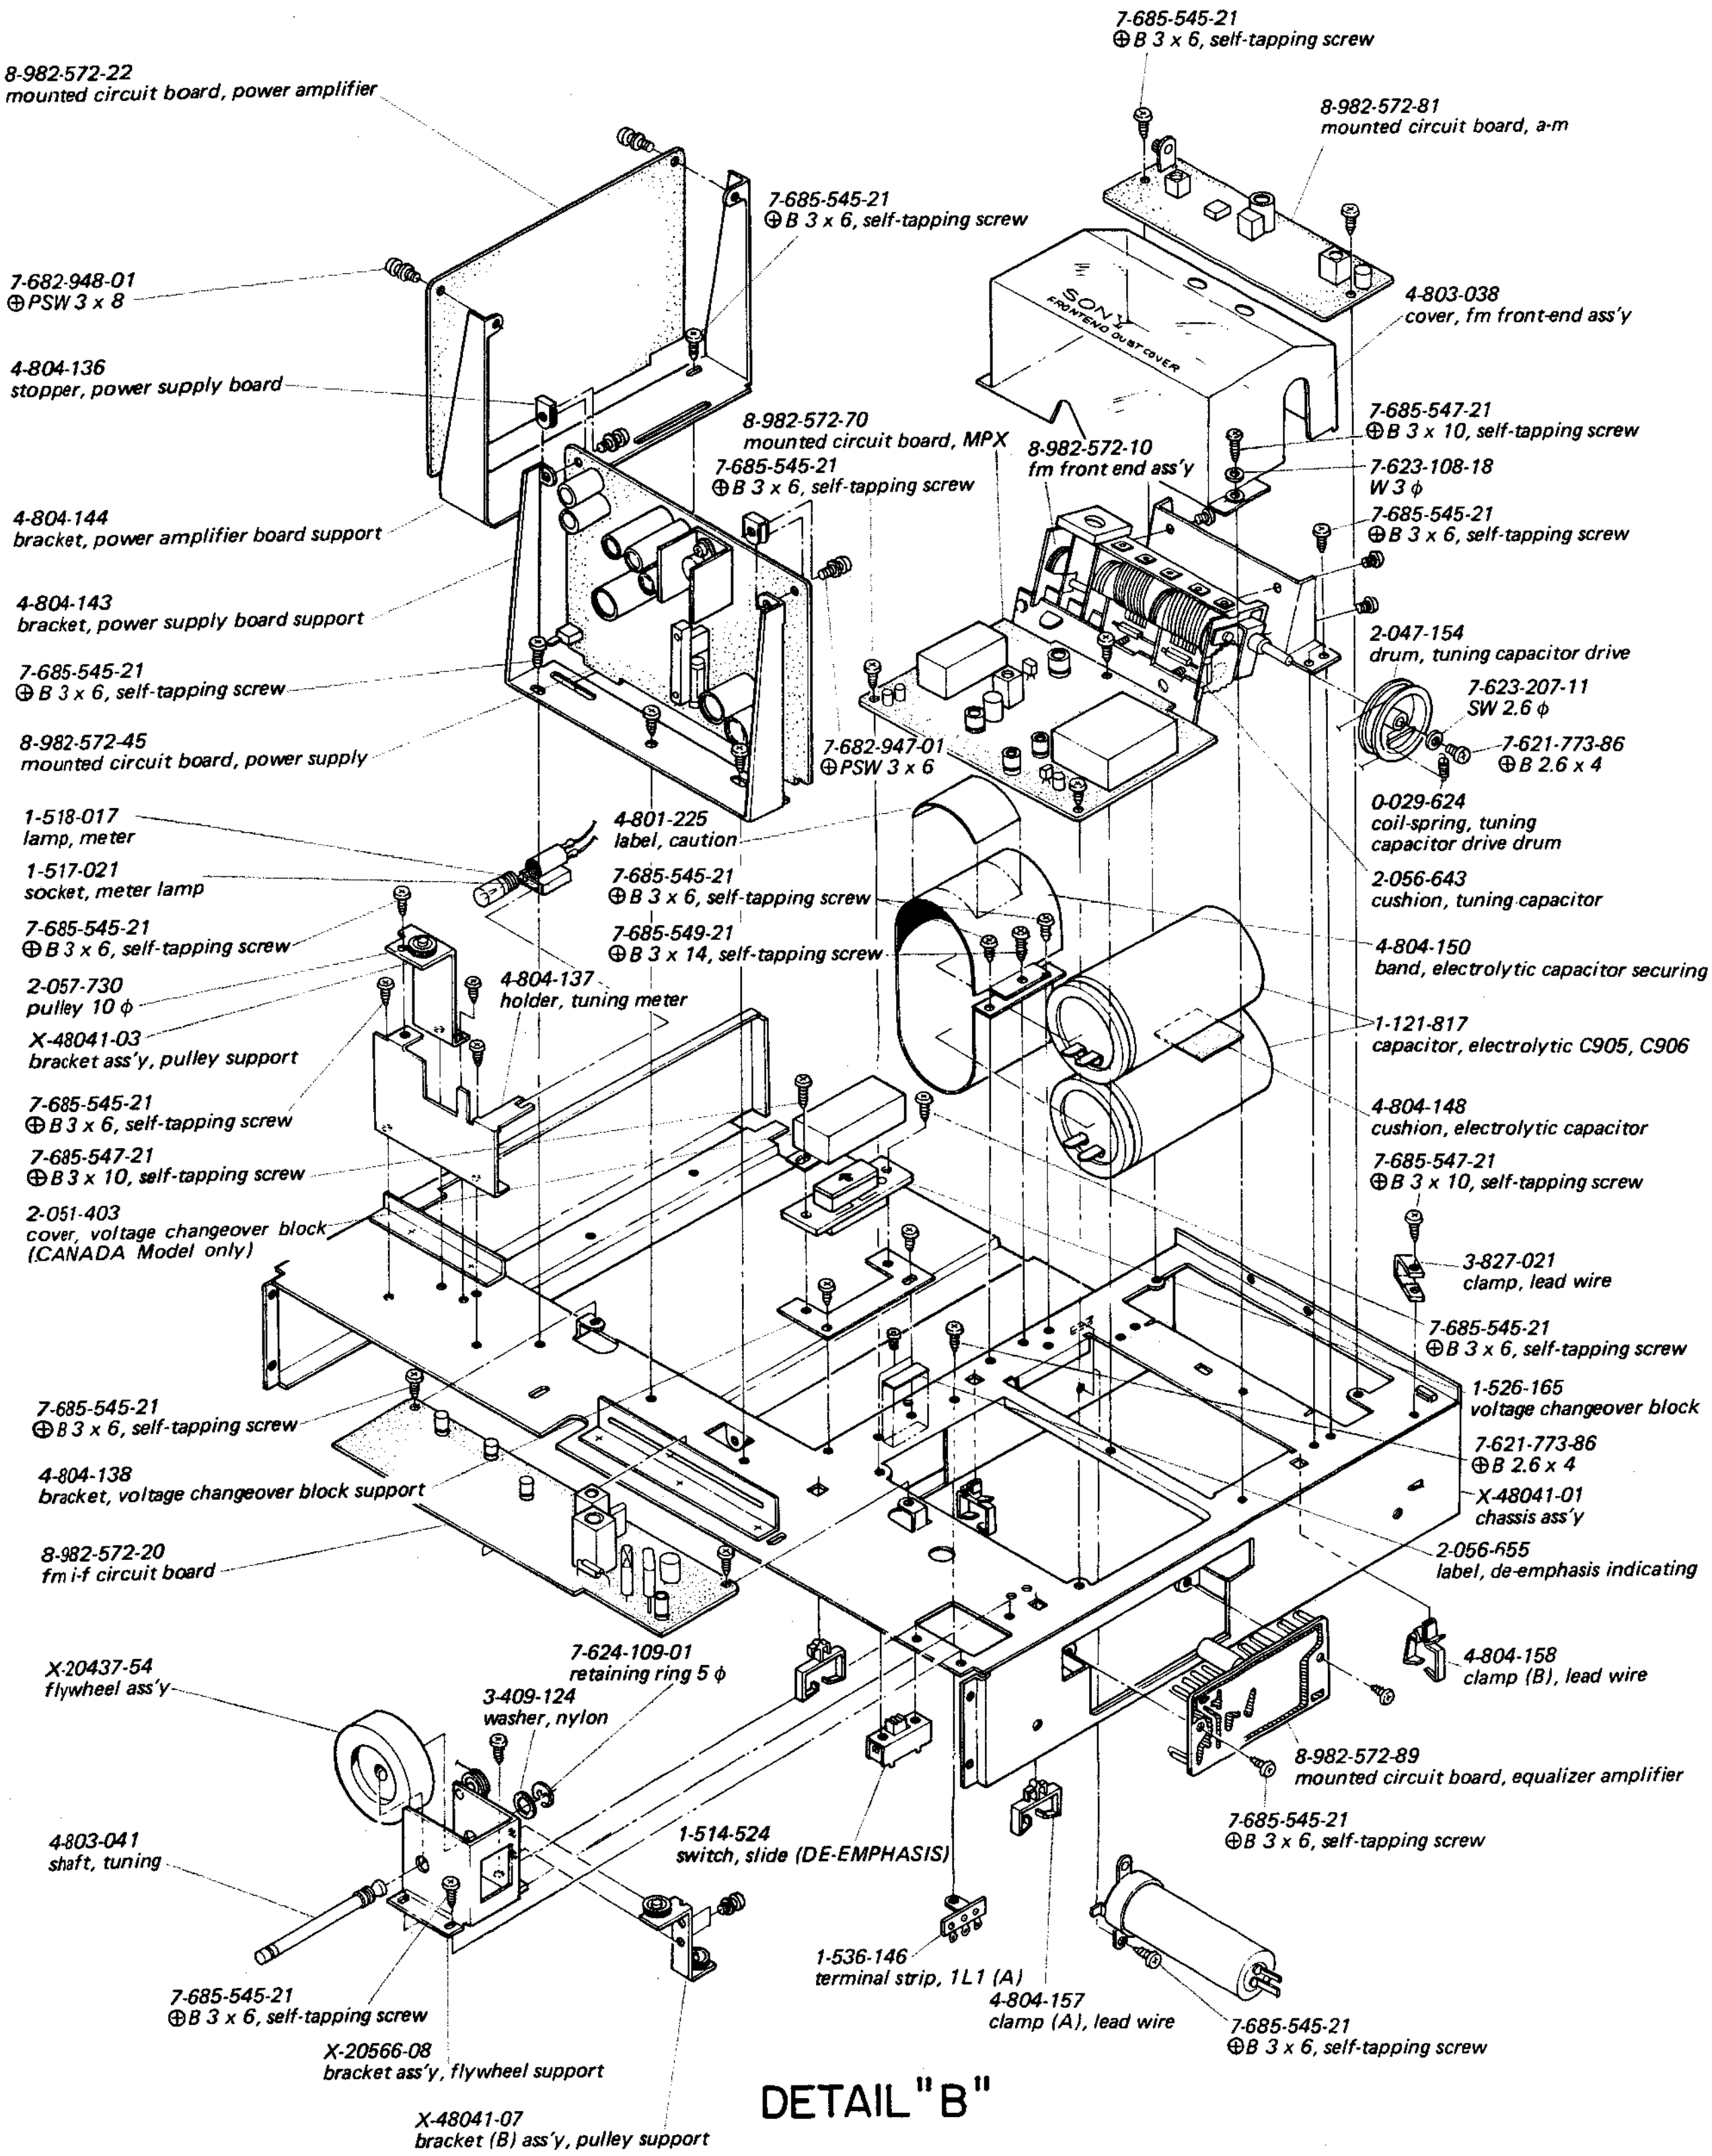
7-685-545-21
⊕B 3 x 6, self-tapping screw
8-982-572-22
mounted circuit board, power amplifier
8-982-572-81
mounted circuit board, a-m
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-682-948-01
⊕PSW 3 x 8
4-803-038
cover, fm front-end ass'y
SONY FRONTEND DUST COVER
4-804-136
stopper, power supply board
7-685-547-21
⊕B 3 x 10, self-tapping screw
8-982-572-70
mounted circuit board, MPX
8-982-572-10
fm front end ass'y
7-623-108-18
W 3 ϕ
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-685-545-21
⊕B 3 x 6, self-tapping screw
4-804-144
bracket, power amplifier board support
4-804-143
bracket, power supply board support
2-047-154
drum, tuning capacitor drive
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-623-207-11
SW 2.6 ϕ
8-982-572-45
mounted circuit board, power supply
7-682-947-01
⊕PSW 3 x 6
7-621-773-86
⊕B 2.6 x 4
0-029-624
coil-spring, tuning capacitor drive drum
1-518-017
lamp, meter
4-801-225
label, caution
1-517-021
socket, meter lamp
7-685-545-21
⊕B 3 x 6, self-tapping screw
2-056-643
cushion, tuning capacitor
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-685-549-21
⊕B 3 x 14, self-tapping screw
4-804-150
band, electrolytic capacitor securing
2-057-730
pulley 10 ϕ
4-804-137
holder, tuning meter
X-48041-03
bracket ass'y, pulley support
1-121-817
capacitor, electrolytic C905, C906
7-685-545-21
⊕B 3 x 6, self-tapping screw
4-804-148
cushion, electrolytic capacitor
7-685-547-21
⊕B 3 x 10, self-tapping screw
7-685-547-21
⊕B 3 x 10, self-tapping screw
2-051-403
cover, voltage changeover block (CANADA Model only)
3-827-021
clamp, lead wire
7-685-545-21
⊕B 3 x 6, self-tapping screw
1-526-165
voltage changeover block
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-621-773-86
⊕B 2.6 x 4
4-804-138
bracket, voltage changeover block support
X-48041-01
chassis ass'y
8-982-572-20
fm i-f circuit board
2-056-655
label, de-emphasis indicating
7-624-109-01
retaining ring 5 ϕ
4-804-158
clamp (B), lead wire
X-20437-54
flywheel ass'y
3-409-124
washer, nylon
8-982-572-89
mounted circuit board, equalizer amplifier
4-803-041
shaft, tuning
1-514-524
switch, slide (DE-EMPHASIS)
7-685-545-21
⊕B 3 x 6, self-tapping screw
1-536-146
terminal strip, 1L1 (A)
4-804-157
clamp (A), lead wire
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-685-545-21
⊕B 3 x 6, self-tapping screw
X-20566-08
bracket ass'y, flywheel support
DETAIL "B"
X-48041-07
bracket (B) ass'y, pulley support

EXPLODED VIEW

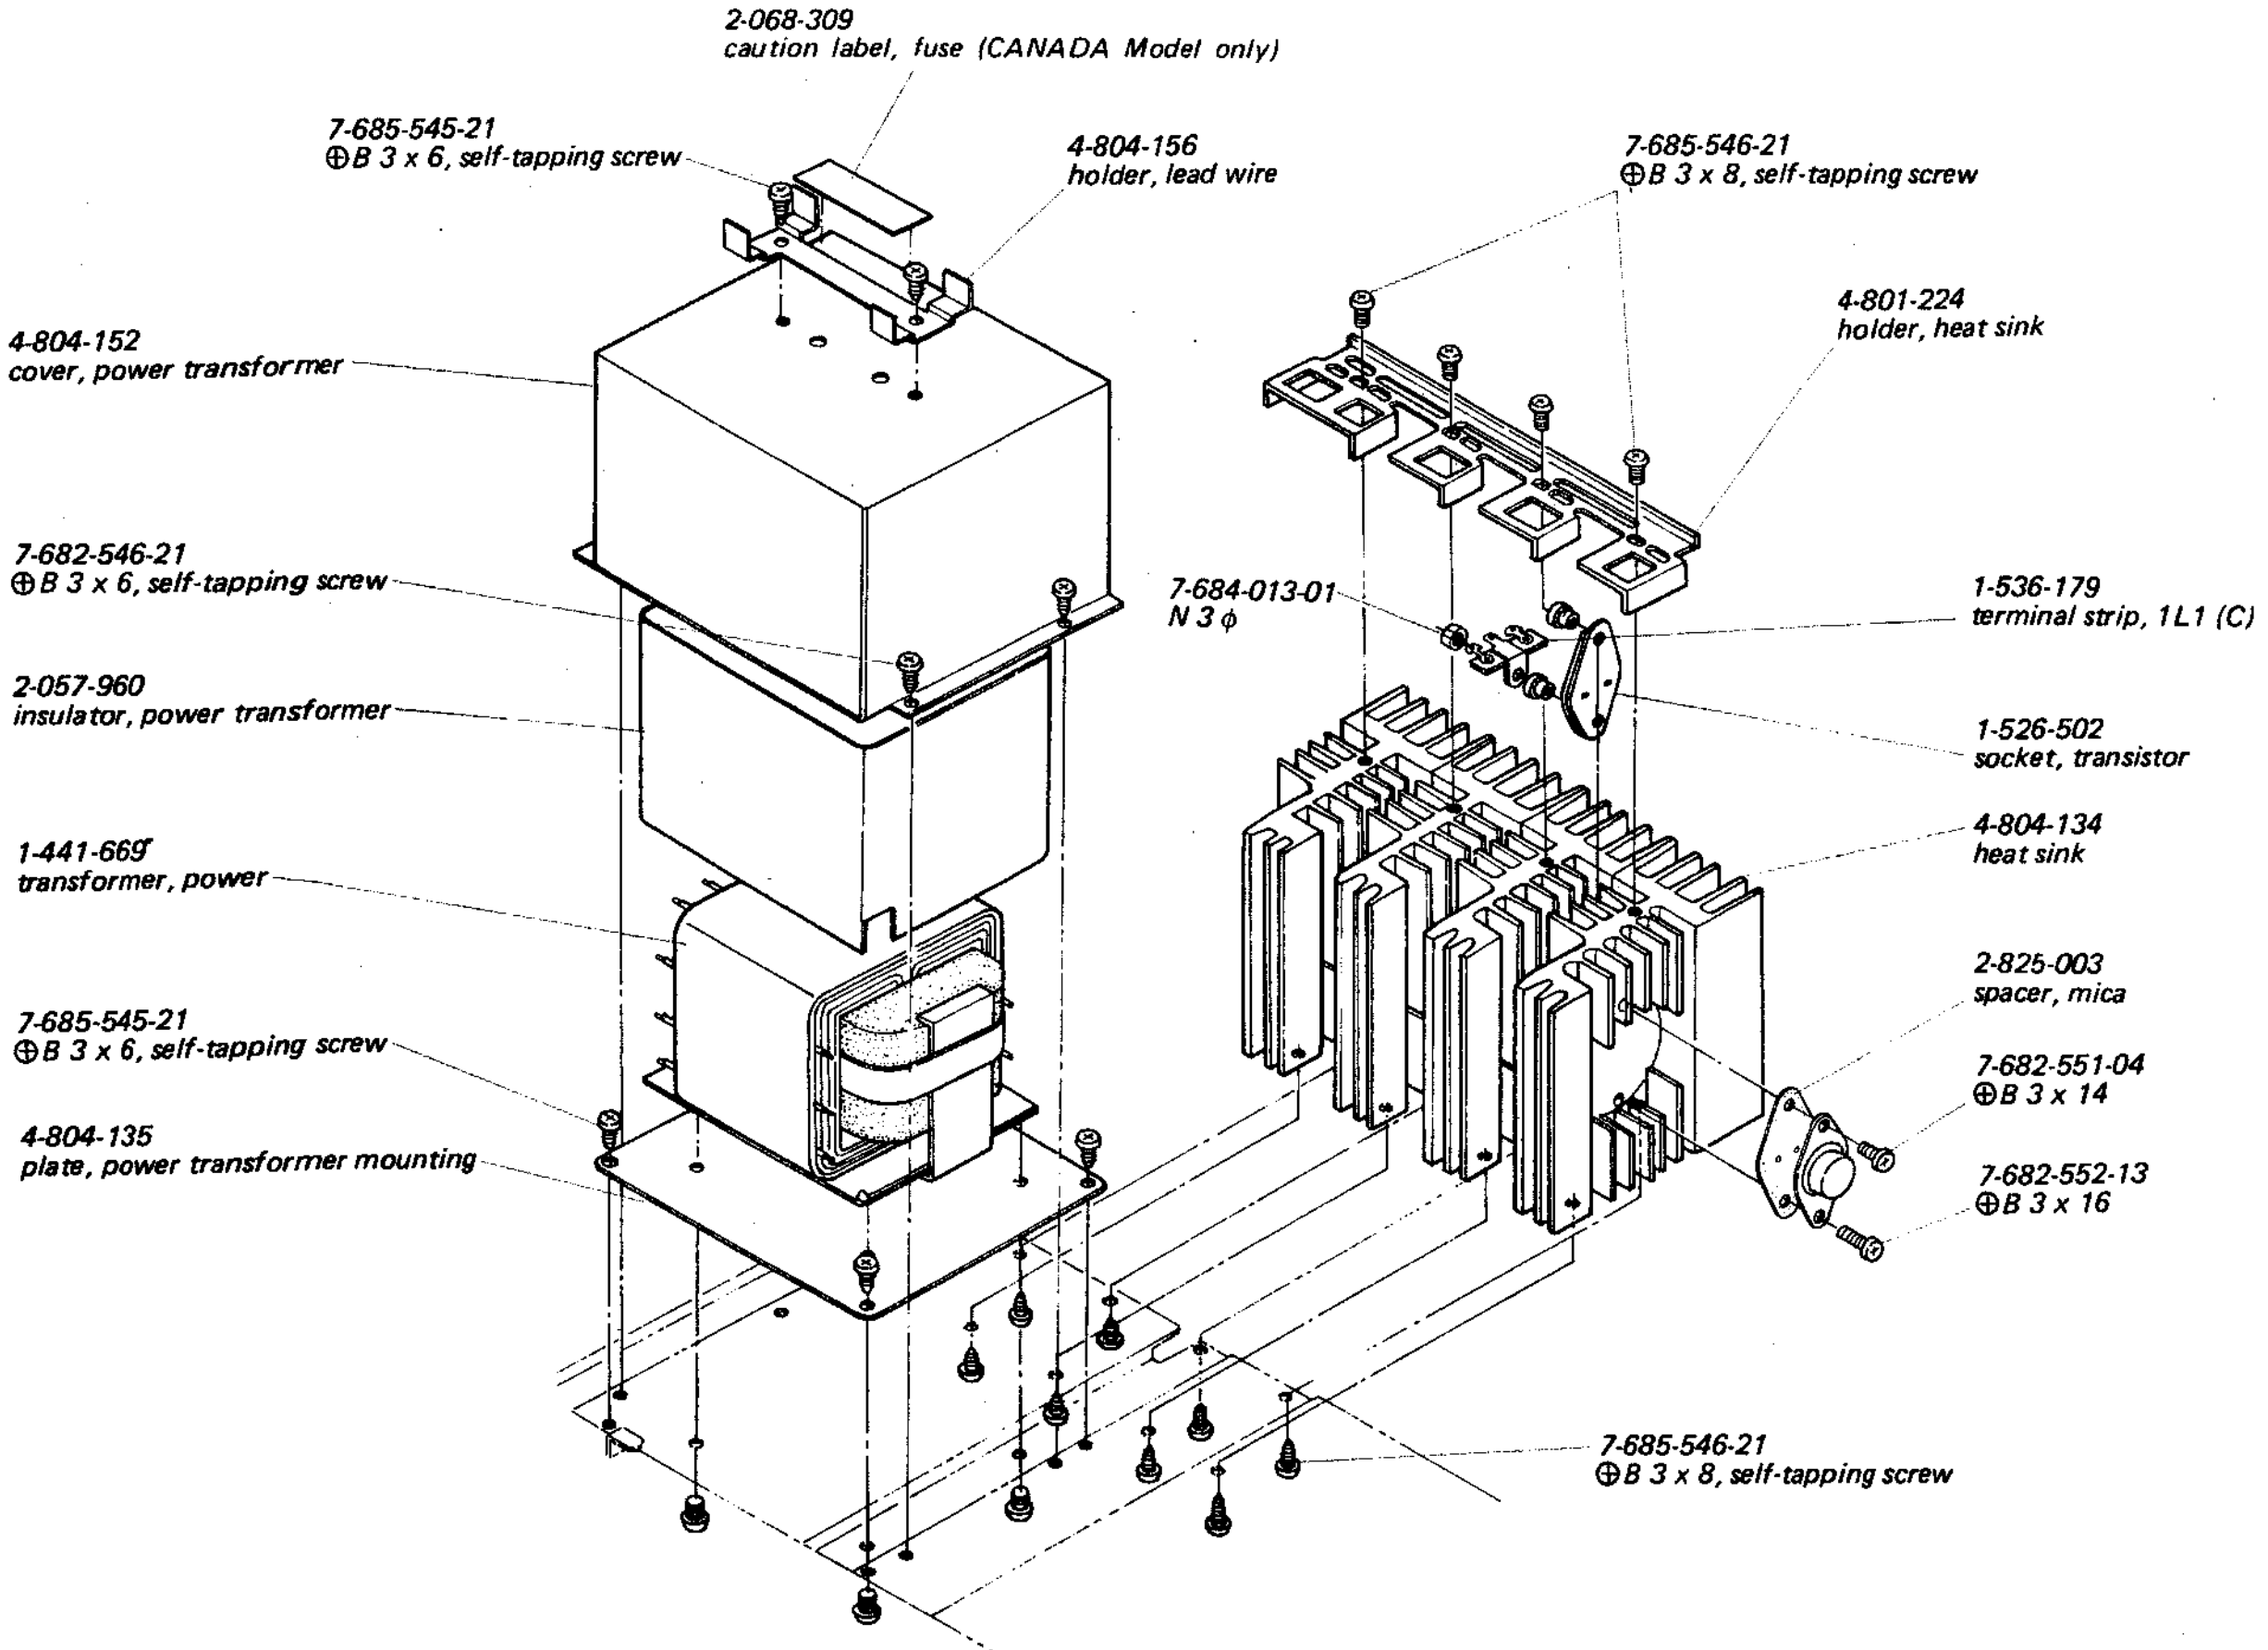
2-068-309
caution label, fuse (CANADA Model only)
7-685-545-21
⊕B 3 x 6, self-tapping screw
4-804-156
holder, lead wire
7-685-546-21
⊕B 3 x 8, self-tapping screw
4-801-224
holder, heat sink
4-804-152
cover, power transformer
7-682-546-21
⊕B 3 x 6, self-tapping screw
7-684-013-01
N 3 φ
1-536-179
terminal strip, 1L1 (C)
2-057-960
insulator, power transformer
1-526-502
socket, transistor
4-804-134
heat sink
1-441-669
transformer, power
2-825-003
spacer, mica
7-685-545-21
⊕B 3 x 6, self-tapping screw
7-682-551-04
⊕B 3 x 14
4-804-135
plate, power transformer mounting
7-682-552-13
⊕B 3 x 16
7-685-546-21
⊕B 3 x 8, self-tapping screw

DETAIL "C"

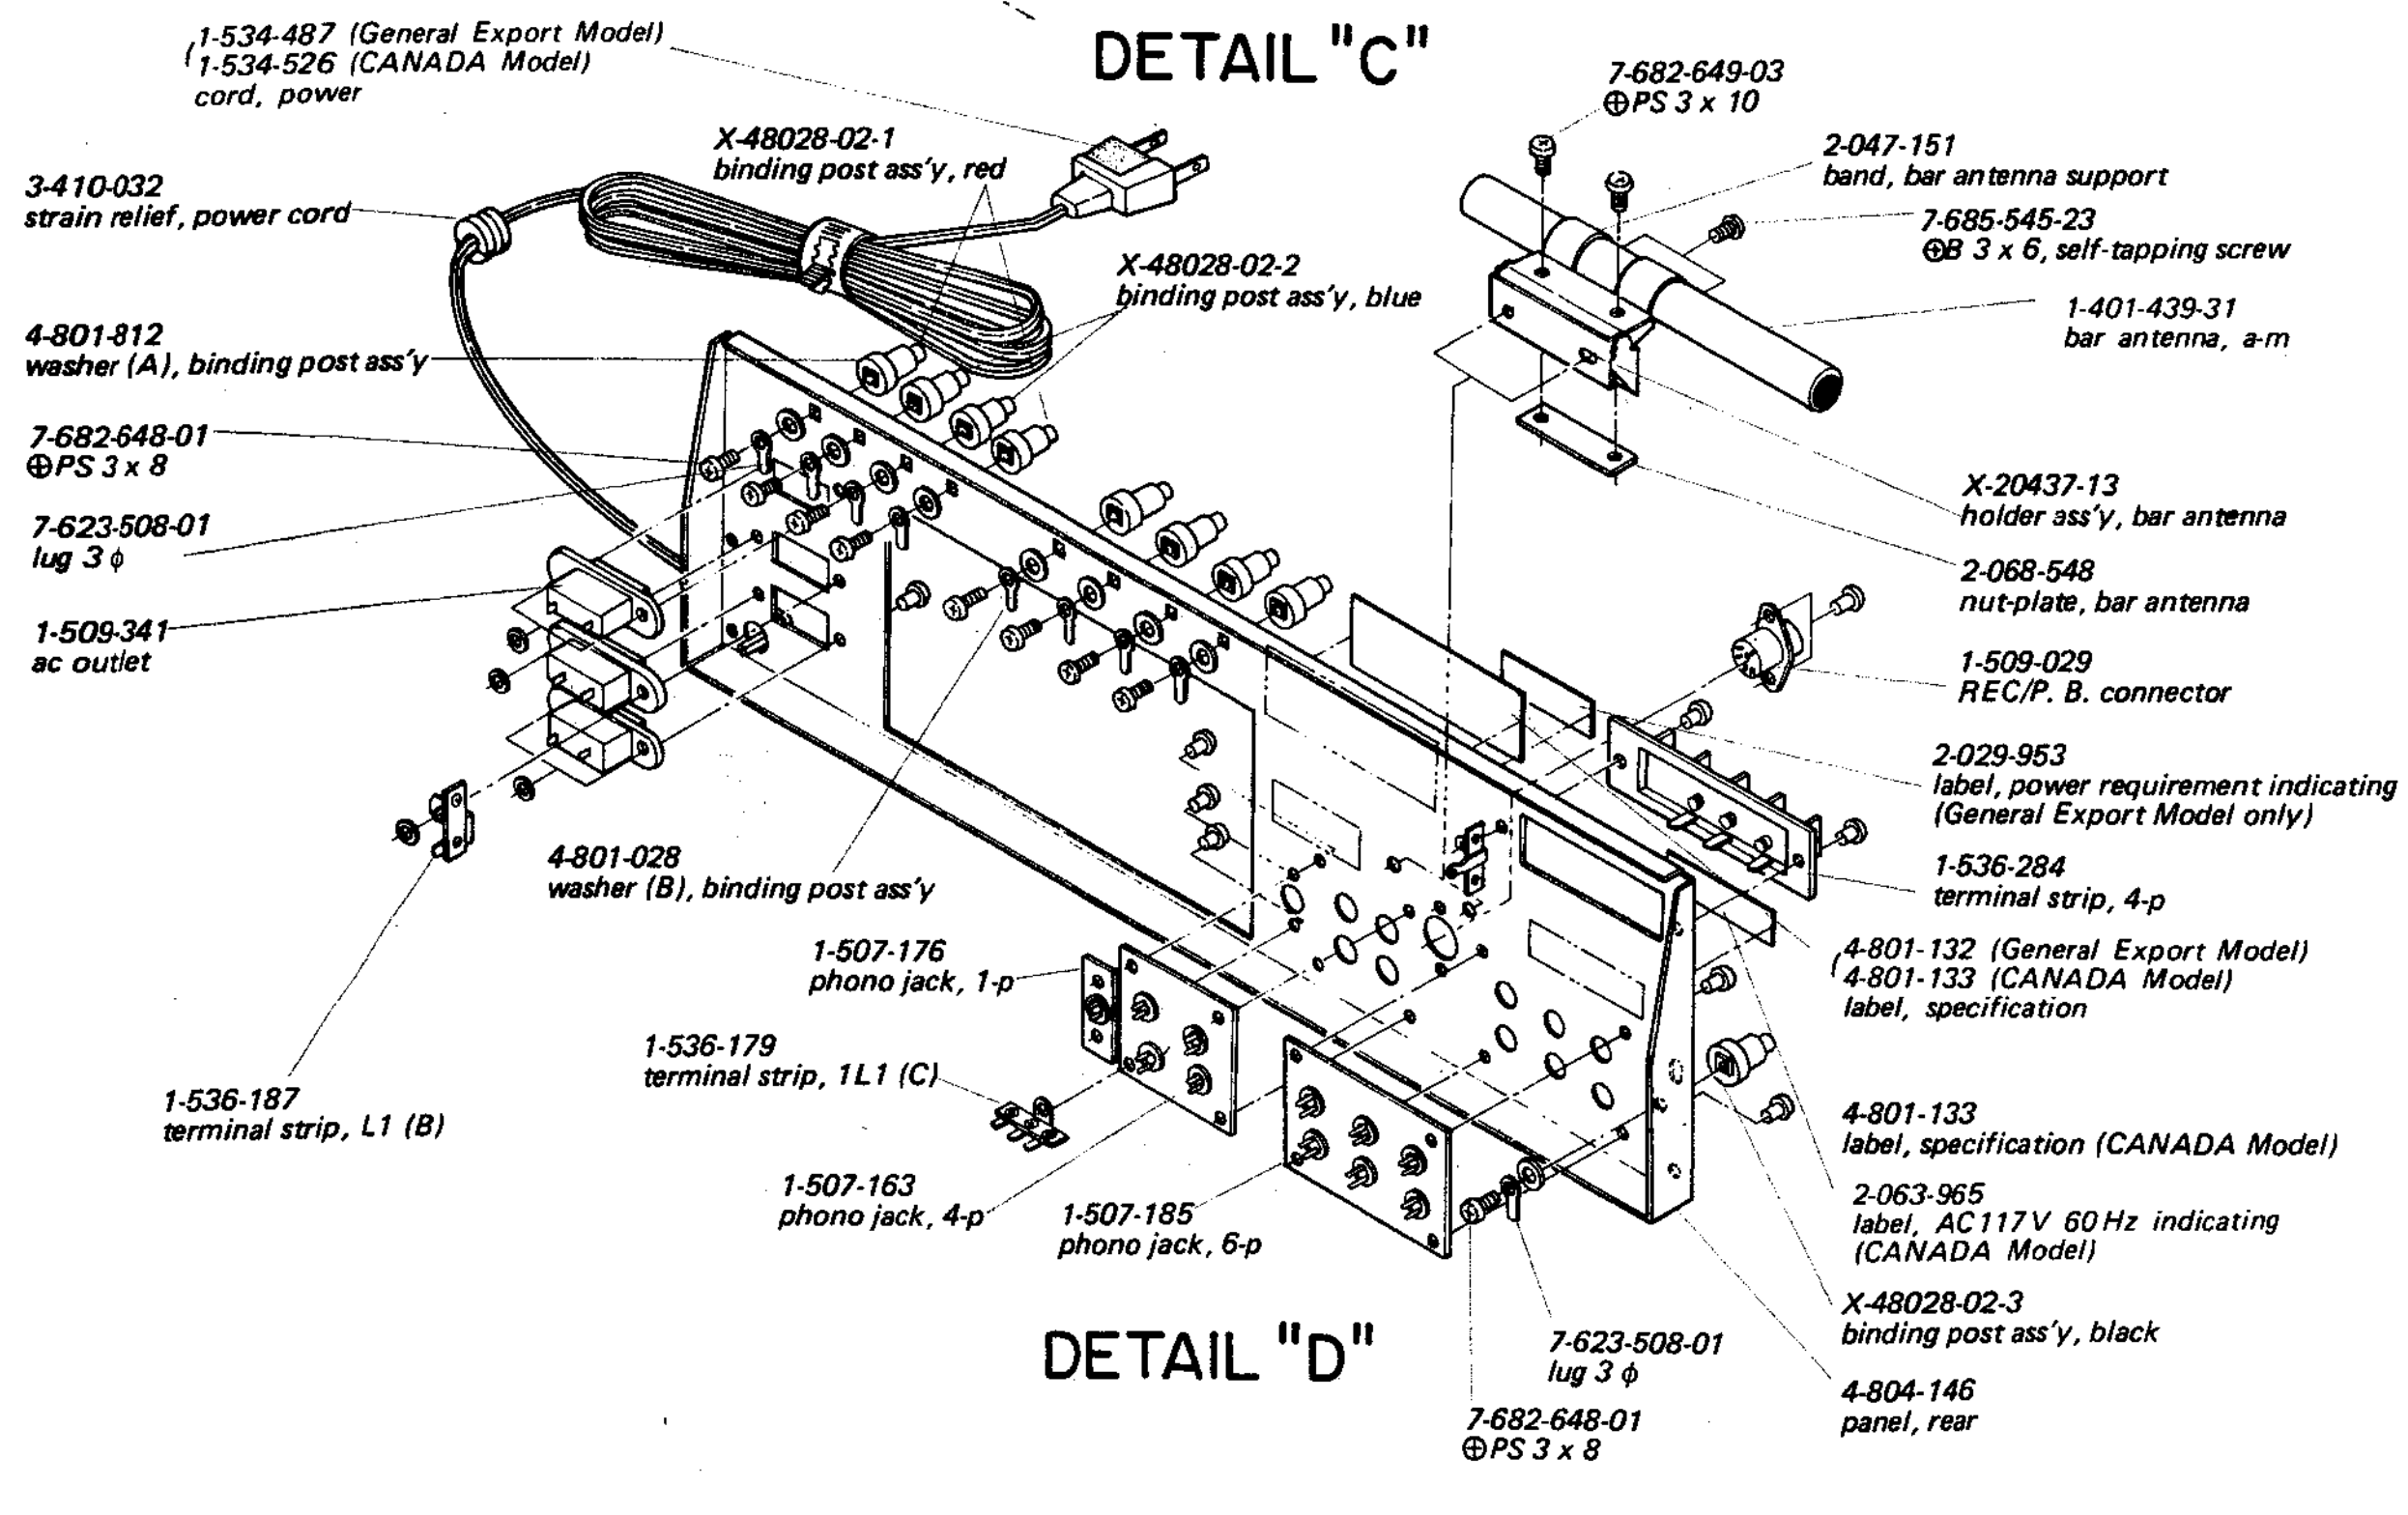
1-534-487 (General Export Model)
1-534-526 (CANADA Model)
cord, power
7-682-649-03
⊕PS 3 x 10
2-047-151
band, bar antenna support
X-48028-02-1
binding post ass'y, red
3-410-032
strain relief, power cord
7-685-545-23
⊕B 3 x 6, self-tapping screw
X-48028-02-2
binding post ass'y, blue
1-401-439-31
bar antenna, a-m
4-801-812
washer (A), binding post ass'y
7-682-648-01
⊕PS 3 x 8
X-20437-13
holder ass'y, bar antenna
7-623-508-01
lug 3 φ
2-068-548
nut-plate, bar antenna
1-509-341
ac outlet
1-509-029
REC/P. B. connector
2-029-953
label, power requirement indicating (General Export Model only)
1-536-284
terminal strip, 4-p
4-801-028
washer (B), binding post ass'y
4-801-132 (General Export Model)
4-801-133 (CANADA Model)
label, specification
1-507-176
phono jack, 1-p
1-536-179
terminal strip, 1L1 (C)
1-536-187
terminal strip, L1 (B)
4-801-133
label, specification (CANADA Model)
1-507-163
phono jack, 4-p
1-507-185
phono jack, 6-p
2-063-965
label, AC117V 60Hz indicating (CANADA Model)
X-48028-02-3
binding post ass'y, black
7-623-508-01
lug 3 φ
4-804-146
panel, rear
7-682-648-01
⊕PS 3 x 8

DETAIL "D"

SECTION 7
ELECTRICAL PARTS LIST

Ref. No.	*Part No.*	*Description*
	MOUNTED CIRCUIT BOARDS	
	8-982-572-05	tone control circuit board
	8-982-572-85	loudness control circuit board
	8-982-572-22	power amplifier circuit board
	8-982-572-45	power supply circuit board
	8-982-572-89	equalizer amplifier circuit board
	8-982-572-70	MPX circuit board
	8-982-572-81	a-m circuit board
	8-982-572-20	fm i-f circuit board
	8-982-572-10	fm front-end ass'y, FAF-013BW
	SEMICONDUCTORS	
D101		diode, 1S351
D102		diode, 1T243
D201		diode, 1S1555
D202		diode, 1S1555
D203		diode, 1S1555
D204		diode, 1S1555
D205		diode, 1S1555
D206		diode, 1S1555
D207		diode, 1T22A
D208		diode, 1T22A
D209		diode, 1S1555
D210		diode, 1S1555
D211		diode, 1T22A
D212		diode, 1T22A
D213		diode, 1S1555
D301		diode, 1T22A
D302		diode, 1T22A
D303		diode, 1S1555
D401		diode, 1S1555
D402		diode, 1S1555
D403		diode, 1S1555
D404		diode, 1S1555
D405		diode, 1T22A
D406		diode, 1T22A
D407		diode, 1T22A
D408		diode, 1T22A
D409		diode, 1S1555
D701(D751)		diode, SH1S
D702(D752)		diode, SH1S
D703(D753)		diode, SH1S
D704(D754)		diode, SH1S
D705(D755)		diode, SH1S
D706(D756)		diode, SH1S
D707(D757)		diode, SH1S
D708(D758)		diode, SH1S
D709(D759)		diode, SH1S
D710(D760)		diode, SH1S
D801		diode, 5B4
D802		diode, 10D2
D803		diode, 10D2
D805		diode, 1T243M
D806		diode, 1T243M
D807		diode, SH1S
D808		diode, SH1S

Ref. No.	*Part No.*	*Description*
D809		diode, SH1S
D810		diode, SH1S
D811		diode, 1T22A
D812		diode, CDR2
D813		SCR, 1RC20
D814		diode, CD2
D815		diode, 10D2
D816		diode, 10D2
D817		diode, SH1S
D818(D819)		diode, 10D2
D901(D951)		diode, SV-31
Q101		FET, 2SK23
Q102		transistor, 2SC710
Q103		transistor, 2SC629
Q201		transistor, 2SC403A
Q202		transistor, 2SC710
Q203		transistor, 2SC403A
Q204		transistor, 2SC403A
Q205		transistor, 2SC403A
Q206		transistor, 2SC403A
Q207		FET, 2SK23
Q208		FET, 2SK23
Q209		transistor, 2SC633A
Q210		transistor, 2SC633A
Q301		transistor, 2SC403A
Q302		FET, 2SK23
Q303		transistor, 2SC403A
Q304		transistor, 2SC403A
Q305		transistor, 2SC403A
Q401		FET, 2SK23
Q402		transistor, 2SC633A
Q403		transistor, 2SC633A
Q404		transistor, 2SC631A
Q405		transistor, 2SC631A
Q406		transistor, 2SC633A
Q407		transistor, 2SC633A
Q501(Q551)		transistor, 2SC631A
Q502(Q552)		transistor, 2SC632A
Q503(Q553)		transistor, 2SC632A
Q601(Q651)		transistor, 2SC631A
Q602(Q652)		transistor, 2SC632A
Q701(Q751)		transistor, 2SA705
Q702(Q752)		transistor, 2SA705
Q703(Q753)		transistor, 2SC1124A
Q704(Q754)		transistor, 2SC633A
Q705(Q755)		transistor, 2SC633A
Q706(Q756)		transistor, 2SC633A
Q707(Q757)		transistor, 2SA677
Q708(Q758)		transistor, 2SC895
Q709(Q759)		transistor, 2SA527
Q801		transistor, 2SC1124A
Q802		transistor, 2SA706

Ref. No.	Part No.	Description
Q803		transistor, 2SC633A
Q804		transistor, 2SC634A
Q805		transistor, 2SC634A
Q806		transistor, 2SD28
Q807		transistor, 2SC633A
Q901(Q951)		transistor, 2SD88A
Q902(Q952)		transistor, 2SD88A

TRANSFORMERS, COILS AND INDUCTORS

Ref. No.	Part No.	Description
CFT301	1-403-150	CFT, 455 kHz
B101	1-417-014	balun
IFT101	1-403-295	IFT, fm 10.7 MHz
IFT301	1-403-149	IFT, a-m 455 kHz
L101	1-401-351	coil, fm antenna
L102	1-425-446	coil, fm rf
L103	1-425-446	coil, fm rf
L104	1-405-377	coil, fm osc
L201	1-407-163	inductor, micro 33 μH
L202	1-407-184	inductor, micro 3.3 μH
L203	1-407-408	inductor, micro 22 mH
L204	1-407-184	inductor, micro 3.3 μH
L301	1-407-169	inductor, micro 100 μH
L901	1-407-161	inductor, micro 22 μH
L902	1-407-182	inductor, micro 2.2 μH
L903	1-407-182	inductor, micro 2.2 μH
L904	1-401-439-31	bar antenna, a-m
MU401	1-425-548	MPX unit
T201	1-403-291	transformer, discriminator 10.7 MHz
T202	1-403-299	IFT, fm 10.7 MHz
T301	1-405-459	coil, a-m osc
T401	1-425-260	transformer, switching 38 kHz
T801	1-433-132	transformer, osc.
T901	1-441-669	transformer, power

CAPACITORS

All capacitance values are in μF except as indicated with p, which means μμF.

Ref. No.	Part No.	Description			
C101	1-101-862	18p	±5%	50V	ceramic
C102	1-101-938	1.5p	±10%	500V	ceramic
C103	1-101-862	18p	±5%	50V	ceramic
C104	1-101-937	1p	±10%	500V	ceramic
C105	1-101-961	12p	±5%	50V	ceramic
C106	1-102-985	180p	±5%	50V	ceramic
C107	1-101-072	0.01	$\pm^{80}_{20}\%$	25V	ceramic
C108	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C109	1-101-072	0.01	$\pm^{80}_{20}\%$	25V	ceramic
C110	1-101-072	0.01	$\pm^{80}_{20}\%$	25V	ceramic
C111	1-101-869	27p	±5%	50V	ceramic
C112	1-102-077	0.01	±20%	50V	ceramic
C113	1-101-873	15p	±5%	50V	ceramic
C114	1-101-958	8p	±0.5p	50V	ceramic
C115	1-101-978	10p	±5%	50V	ceramic
C116	1-102-875	7p	±5%	50V	ceramic
C117	1-101-072	0.01	$\pm^{80}_{20}\%$	25V	ceramic
C118	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C119	1-101-918	0.001	$\pm^{80}_{20}\%$	25V	ceramic
C120	1-101-978	10p	±5%	50V	ceramic
C121	1-101-957	7p	±0.5p	50V	ceramic
C122	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C123	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C124	1-121-353	47	$\pm^{100}_{10}\%$	16V	electrolytic
C125	1-105-679-12	0.033	±10%	50V	mylar
C126	1-121-391	1	$\pm^{150}_{10}\%$	50V	electrolytic
C201	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C202	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C203	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C204	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C205	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C206	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C207	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C208	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C209	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C210	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C211	1-101-919	0.002	$\pm^{80}_{20}\%$	25V	ceramic
C212 C213		included in T201			
C214	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C215	1-105-689-12	0.22	±10%	50V	mylar
C216	1-101-030	200p	±5%	50V	ceramic
C217	1-101-030	200p	±5%	50V	ceramic
C218	1-101-030	200p	±5%	50V	ceramic
C219	1-121-398	10	$\pm^{100}_{10}\%$	25V	electrolytic
C220	1-107-140	240p	±10%	50V	silvered mica
C221	1-101-424	500p	±20%	250V	ceramic
C222	1-127-020	0.22	±20%	10V	solid, aluminium
C223	1-127-021	0.33	±20%	10V	solid, aluminium
C224	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C225	1-121-398	10	$\pm^{100}_{10}\%$	25V	electrolytic
C226	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C229	1-101-872	33p	±5%	50V	ceramic
C230	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C231	1-121-398	10	$\pm^{100}_{10}\%$	25V	electrolytic
C232		included in T202			
C233	1-121-398	10	$\pm^{100}_{10}\%$	25V	electrolytic
C234	1-101-922	4,700p	$\pm^{80}_{20}\%$	50V	ceramic
C235	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C236	1-121-396	4.7	$\pm^{150}_{10}\%$	50V	electrolytic
C237	1-121-409	47	$\pm^{100}_{10}\%$	16V	electrolytic
C239	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C240	1-121-398	10	$\pm^{100}_{10}\%$	25V	electrolytic
C241	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C242	1-105-683-12	0.068	±10%	50V	mylar
C243	1-105-689-12	0.22	±10%	50V	mylar
C244	1-121-391	1	$\pm^{150}_{10}\%$	50V	electrolytic
C301	1-103-617	470p	±5%	50V	styrol
C302	1-105-829-12	0.047	±20%	50V	mylar
C303	1-105-837-12	0.022	±20%	50V	mylar
C304	1-102-977	200p	±5%	50V	ceramic
C305	1-102-945	8p	±5%	50V	ceramic
C306	1-105-679-12	0.033	±20%	50V	mylar
C307	1-105-837-12	0.022	±20%	50V	mylar
C308		included in CFT 301			
C309	1-105-837-12	0.022	±20%	50V	mylar
C310		included in CFT 301			
C311	1-105-837-12	0.022	±20%	50V	mylar
C312	1-105-673-12	0.01	±20%	50V	mylar

Ref. No.	*Part No.*	*Description*			
C313	1-105-685-12	0.1	±20%	50V	mylar
C314	1-101-884	56p	±5%	50V	ceramic
C315	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C316		included in IFT 301			
C317	1-121-415	100	$\pm^{100}_{10}\%$	16V	electrolytic
C318	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C319	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C320	1-127-019	0.1	±20%	10V	solid, aluminium
C321	1-102-073	0.02	$\pm^{80}_{20}\%$	50V	ceramic
C322	1-121-395	4.7	$\pm^{100}_{10}\%$	25V	electrolytic
C323	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C324	1-121-415	100	$\pm^{100}_{10}\%$	16V	electrolytic
C325	1-121-456	3.3	$\pm^{100}_{10}\%$	25V	electrolytic
C326	1-121-456	3.3	$\pm^{100}_{10}\%$	25V	electrolytic
C327	1-121-413	100	$\pm^{100}_{10}\%$	6.3V	electrolytic
C328	1-105-837-12	0.022	±20%	50V	mylar
C329	1-105-673-12	0.01	±20%	50V	mylar
C330	1-105-837-12	0.022	±20%	50V	mylar
C331	1-102-960	24p	±5%	50V	ceramic
C332		– deleted –			
C333	1-102-935	2p	±0.25pF	50V	ceramic
C334	1-105-837-12	0.022	±20%	50V	mylar
C401	1-105-683-12	0.068	±10%	50V	mylar
C402	1-105-661-12	0.001	±10%	50V	mylar
C403	1-105-661-12	0.001	±10%	50V	mylar
C404	1-121-398	10	$\pm^{100}_{10}\%$	25V	electrolytic
C405	1-105-669-12	0.0047	±10%	50V	mylar
C406	1-121-344	3.3	$\pm^{150}_{10}\%$	25V	electrolytic
C407	1-121-413	100	$\pm^{100}_{10}\%$	6.3V	electrolytic
C408	1-121-409	47	$\pm^{100}_{10}\%$	16V	electrolytic
C409	1-103-575	4,700p	±5%	50V	styrol
C410	1-127-022	0.47	±20%	10V	solid, aluminium
C411	1-121-403	33	$\pm^{100}_{10}\%$	16V	electrolytic
C412	1-121-403	33	$\pm^{100}_{10}\%$	16V	electrolytic
C415	1-121-402	33	$\pm^{100}_{10}\%$	6.3V	electrolytic
C416	1-101-884	56p	±5%	50V	ceramic
C417	1-101-884	56p	±5%	50V	ceramic
C418	1-121-391	1	$\pm^{150}_{10}\%$	50V	electrolytic
C419	1-121-391	1	$\pm^{150}_{10}\%$	50V	electrolytic
C420	1-121-419	220	$\pm^{100}_{10}\%$	6.3V	electrolytic
C421	1-121-419	220	$\pm^{100}_{10}\%$	6.3V	electrolytic
C422	1-105-683-12	0.068	±10%	50V	mylar
C423	1-105-683-12	0.068	±10%	50V	mylar
C424	1-127-013	2.2	±20%	6.3V	solid, aluminium
C425	1-127-013	2.2	±20%	6.3V	solid aluminium
C426	1-105-667-12	0.0033	±10%	50V	mylar
C427	1-121-409	47	$\pm^{100}_{10}\%$	16V	electrolytic
C428	1-127-021	0.33	±20%	10V	solid, aluminium)
C501	1-121-405	33	$\pm^{100}_{10}\%$	50V	electrolytic
C502(C552)	1-121-391	1	$\pm^{150}_{10}\%$	50V	electrolytic
C503(C553)	1-105-661-12	0.001	±10%	50V	mylar
C504(C554)	1-105-691-12	0.33	±10%	50V	mylar
C505(C555)	1-121-420	220	$\pm^{100}_{10}\%$	10V	electrolytic
C506(C556)	1-106-005-12	0.0015	±5%	50V	mylar
C507(C557)	1-106-018-12	0.0051	±5%	50V	mylar
C508	1-121-417	100	$\pm^{100}_{10}\%$	50V	electrolytic
C601(C651)	1-107-085	100p	±5%	50V	silvered mica
C602(C652)	1-105-681-12	0.047	±10%	50V	mylar
C603(C653)	1-105-685-12	0.1	±10%	50V	mylar
C604(C654)	1-105-661-12	0.001	±10%	50V	mylar
C605(C655)	1-121-420	220	$\pm^{100}_{10}\%$	10V	electrolytic
C606(C656)	1-107-131	100p	±10%	50V	silvered mica
C607(C657)	1-121-420	220	$\pm^{100}_{10}\%$	10V	electrolytic
C608(C658)	1-121-396	4.7	$\pm^{150}_{10}\%$	50V	electrolytic
C609(C659)	1-105-671-12	0.0068	±10%	50V	mylar
C610(C660)	1-105-681-12	0.047	±10%	50V	mylar
C611(C661)	1-105-683-12	0.068	±10%	50V	mylar
C612(C662)	1-105-681-12	0.047	±10%	50V	mylar
C613(C663)	1-105-669-12	0.0047	±10%	50V	mylar
C614	1-121-405	33	$\pm^{100}_{10}\%$	50V	electrolytic
C701(C751)	1-105-689-12	0.22	±10%	50V	mylar
C702(C752)	1-121-395	4.7	$\pm^{150}_{10}\%$	25V	electrolytic
C703(C753)	1-107-044	3.3p	±0.5p	500V	silvered mica
C704(C754)	1-107-015	47p	±10%	500V	silvered mica
C705(C755)	1-121-425	470	$\pm^{100}_{10}\%$	10V	electrolytic
C706(C756)	1-121-402	33	$\pm^{100}_{10}\%$	10V	electrolytic
C707(C757)	1-121-738	10	$\pm^{100}_{10}\%$	50V	electrolytic
C708(C758)	1-121-405	33	$\pm^{100}_{10}\%$	50V	electrolytic
C709(C759)	1-121-405	33	$\pm^{100}_{10}\%$	50V	electrolytic
C710(C760)	1-105-681-12	0.047	±10%	50V	mylar
C711(C761)	1-105-681-12	0.047	±10%	50V	mylar
C712(C762)	1-105-679-12	0.033	±10%	50V	mylar
C714	1-107-096	300p	±5%	50V	silvered, mica
C801	1-105-757-12	0.022	±10%	200V	mylar
C802	1-105-757-12	0.022	±10%	200V	mylar
C803	1-105-757-12	0.022	±10%	200V	mylar
C804	1-105-757-12	0.022	±10%	200V	mylar
C805	1-105-719-12	0.033	±10%	100V	mylar
C806	1-105-719-12	0.033	±10%	100V	mylar
C807	1-121-736	1,000	$\pm^{100}_{10}\%$	10V	electrolytic
C808	1-121-736	1,000	$\pm^{100}_{10}\%$	10V	electrolytic
C809	1-121-559	50	$\pm^{100}_{10}\%$	100V	electrolytic
C810	1-121-559	50	$\pm^{100}_{10}\%$	100V	electrolytic
C811	1-121-559	50	$\pm^{100}_{10}\%$	100V	electrolytic
C812	1-121-559	50	$\pm^{100}_{10}\%$	100V	electrolytic
C813	1-121-423	220	$\pm^{100}_{10}\%$	50V	electrolytic
C814	1-121-413	100	$\pm^{100}_{10}\%$	6.3V	electrolytic
C815	1-121-417	100	$\pm^{100}_{10}\%$	50V	electrolytic
C816	1-121-423	220	$\pm^{100}_{10}\%$	50V	electrolytic
C817	1-105-719-12	0.033	±10%	100V	mylar
C818	1-105-719-12	0.033	±10%	100V	mylar
C819	1-121-388	1,000	$\pm^{100}_{10}\%$	35V	electrolytic
C820	1-121-422	220	$\pm^{100}_{10}\%$	25V	electrolytic
C821	1-121-426	470	$\pm^{100}_{10}\%$	16V	electrolytic
C822	1-101-073	0.02	$\pm^{80}_{20}\%$	25V	ceramic
C823	1-121-426	470	$\pm^{100}_{10}\%$	16V	electrolytic
C824	1-121-426	470	$\pm^{100}_{10}\%$	16V	electrolytic
C825	1-121-425	470	$\pm^{100}_{10}\%$	10V	electrolytic
C826	1-105-675-12	0.015	±10%	50V	mylar
C827	1-105-679-12	0.033	±10%	50V	mylar
C828	1-105-681-12	0.047	±10%	50V	mylar
C851	1-105-719-12	0.033	±10%	50V	mylar
C852	1-105-719-12	0.033	±10%	50V	mylar

Ref. No.	Part No.	Description
C901	1-101-073	0.02 $\pm^{80}_{20}\%$ 25V ceramic
C902	1-105-679-12	0.033 ±10% 50V mylar
C903	1-105-679-12	0.033 ±10% 50V mylar
C904	1-121-330	1,000 $\pm^{100}_{10}\%$ 63V electrolytic
C905	1-121-817	6,000 $\pm^{100}_{10}\%$ 63V electrolytic
C906	1-121-817	6,000 $\pm^{100}_{10}\%$ 63V electrolytic
CT301 CT302	1-141-095	capacitor, trimmer
CV101, 102 CV103, 104 CV901, 902	1-151-193	capacitor, tuning

RESISTORS

All resistance values are in ohms, ±5%, ¼W and carbon type unless otherwise indicated.

Ref. No.	Part No.	Description
R101	1-244-665	470
R102	1-244-689	4.7 k
R103	1-244-697	10 k
R104	1-244-666	510
R105	1-244-673	1 k
R106	1-244-685	3.3 k
R107	1-244-677	1.5 k
R108	1-244-666	510
R109	1-244-692	6.2 k
R110	1-244-697	10 k
R111	1-244-721	100 k
R113	1-244-642	51
R114	1-244-677	1.5 k
R115	1-244-697	10 k
R201	1-244-671	820
R202	1-244-677	1.5 k
R203	1-244-685	3.3 k
R204	1-244-653	150
R205	1-244-673	1 k
R206	1-244-673	1 k
R207	1-244-671	820
R208	1-244-677	1.5 k
R209	1-244-685	3.3 k
R210	1-244-653	150
R211	1-244-673	1 k
R212	1-244-673	1 k
R213	1-244-649	100
R214	1-244-657	220
R215	1-244-721	100 k
R216	1-244-671	820
R217	1-244-689	4.7 k
R218	1-244-675	1.2 k
R219	1-244-653	150
R220	1-244-663	390
R221	1-244-677	1.5 k
R222	1-244-679	1.8 k
R223	1-244-671	820
R224	1-244-673	1 k
R225	1-244-649	100
R226	1-244-679	1.8 k
R227	1-244-721	100 k
R228	1-244-659	270
R229	1-244-705	22 k
R230	1-244-695	8.2 k
R231	1-244-673	1 k
R232	1-244-721	100 k
R233	1-244-649	100
R234	1-244-665	470
R235	1-244-709	33 k
R236	1-244-697	10 k
R237	1-244-673	1 k
R238	1-244-673	1 k
R239	1-244-673	1 k
R240	1-244-649	100
R241	1-244-713	47 k
R242	1-244-713	47 k
R243	1-244-691	5.6 k
R244	1-244-691	5.6 k
R245	1-244-673	1 k
R246	1-244-673	1 k
R247	1-244-699	12 k
R248	1-244-745	1 M
R249	1-244-734	360 k
R250	1-244-745	1 M
R251	1-244-723	120 k
R252	1-244-735	390 k
R253	1-244-745	1 M
R254	1-244-642	51
R255	1-244-642	51
R256	1-244-632	20
R257	1-244-657	220
R258	1-244-703	18 k
R259	1-244-689	4.7 k
R260	1-244-632	20
R261	1-244-699	12 k
R262	1-244-642	51
R263	1-244-680	2 k
R264	1-244-699	12 k
R265	1-244-720	91 k
R266	1-244-701	15 k
R267	1-244-733	330 k
R268	1-244-701	15 k
R270	1-244-659	270
R271	1-244-705	22 k
R272	1-244-658	240
R301	1-244-691	5.6 k
R302	1-244-704	20 k
R303	1-244-708	30 k
R304	1-244-634	24
R305	1-244-647	82
R306	1-244-708	30 k
R307	1-244-673	1 k
R308	1-244-691	5.6 k
R309	1-244-649	100
R310	1-244-719	82 k
R311	1-244-691	5.6 k
R312	1-244-673	1 k
R313	1-244-684	3 k
R314	1-244-689	4.7 k
R315	1-244-645	68
R316	1-244-657	220
R317	1-244-689	4.7 k
R318	1-244-645	68

SCHEMATIC DIAGRAM
TUNER SECTION

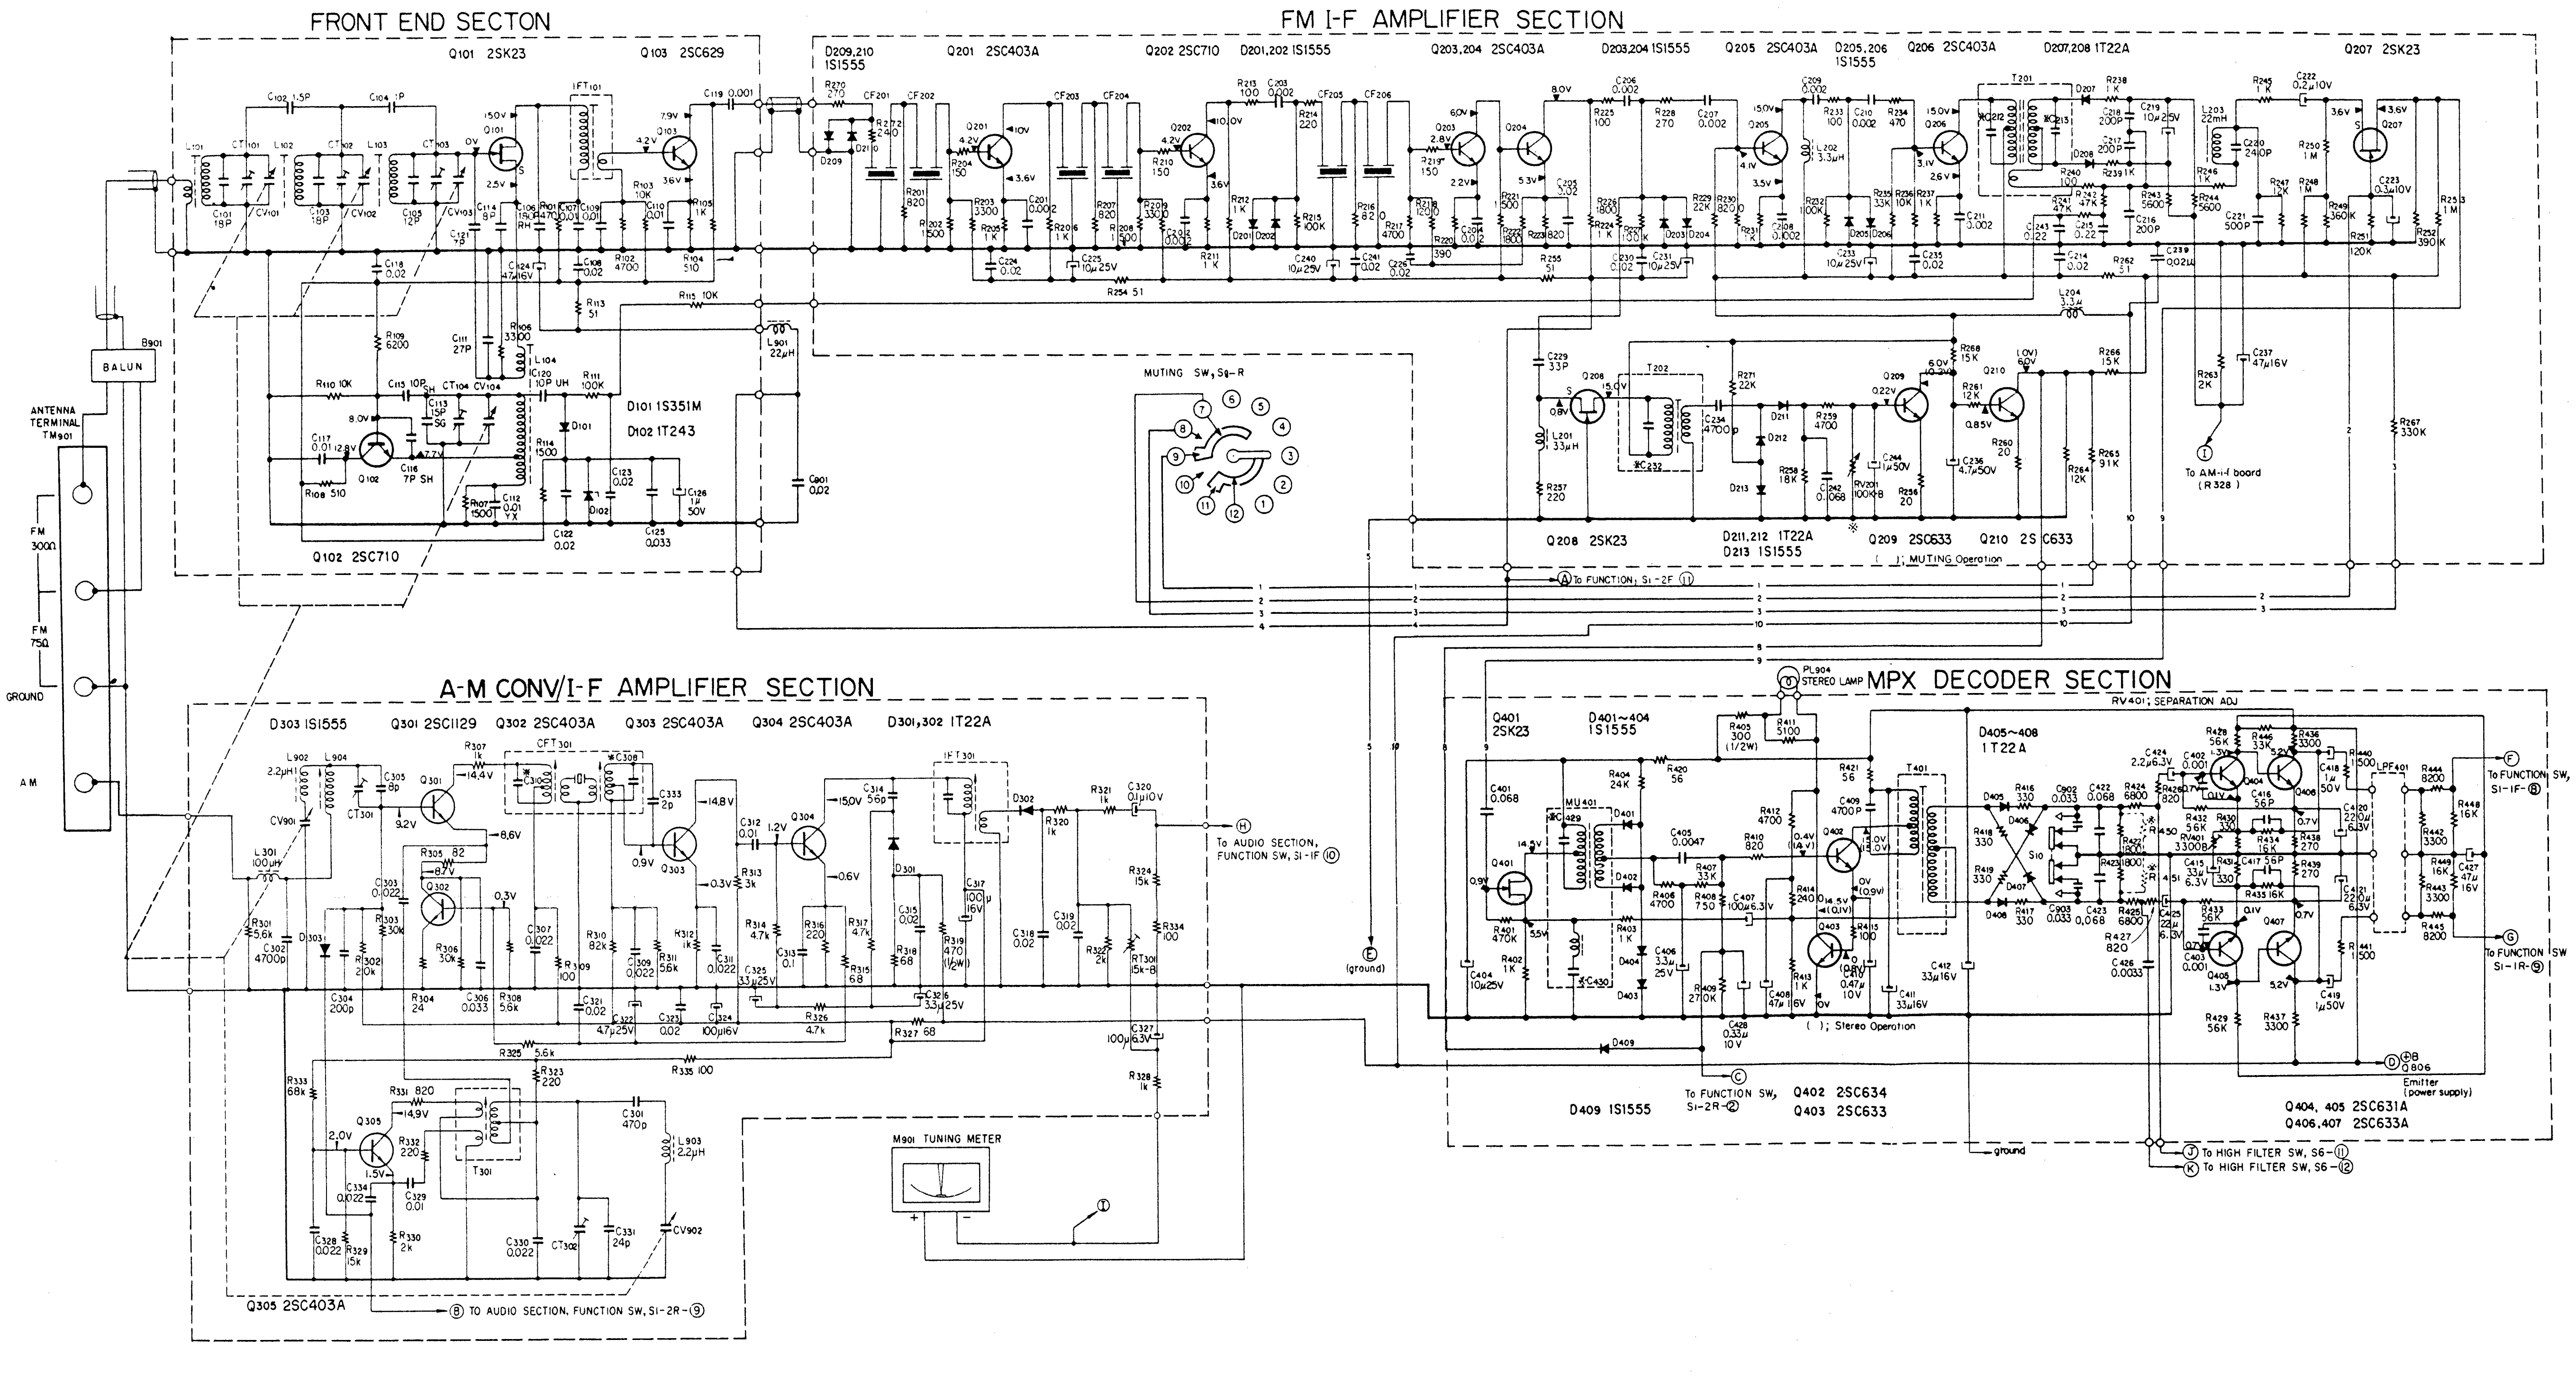
FRONT END SECTON
Q101 2SK23
Q103 2SC629
Q102 2SC710
D101 1S351M
D102 1T243
IFT101
BALUN
B901
ANTENNA TERMINAL TM901
FM 300Ω
FM 75Ω
GROUND
AM
FM I-F AMPLIFIER SECTION
D209,210 1S1555
Q201 2SC403A
Q202 2SC710
D201,202 1S1555
Q203,204 2SC403A
D203,204 1S1555
Q205 2SC403A
D205,206 1S1555
Q206 2SC403A
D207,208 1T22A
Q207 2SK23
T201
T202
Q208 2SK23
D211,212 1T22A
D213 1S1555
Q209 2SC633
Q210 2SC633
( ); MUTING Operation
To AM-IF board (R328)
MUTING SW, S9-R
Ⓐ To FUNCTION, S1-2F ⑪
A-M CONV/I-F AMPLIFIER SECTION
D303 1S1555
Q301 2SC1129
Q302 2SC403A
Q303 2SC403A
Q304 2SC403A
D301,302 1T22A
CFT301
IFT301
T301
Q305 2SC403A
Ⓗ To AUDIO SECTION, FUNCTION SW, S1-1F ⑩
Ⓑ TO AUDIO SECTION, FUNCTION SW, S1-2R-⑨
M901 TUNING METER
Ⓔ (ground)
MPX DECODER SECTION
Ⓓ PL904 STEREO LAMP
RV401; SEPARATION ADJ
Q401 2SK23
D401~404 1S1555
D405~408 1T22A
MU401
T401
LPF401
( ); Stereo Operation
Ⓕ To FUNCTION SW, S1-1F-⑧
Ⓖ To FUNCTION SW S1-1R-⑨
Ⓒ To FUNCTION SW, S1-2R-⑦
D409 1S1555
Q402 2SC634
Q403 2SC633
Q404, 405 2SC631A
Q406,407 2SC633A
Ⓓ +B 0.806 Emitter (power supply)
ground
Ⓙ To HIGH FILTER SW, S6-⑪
Ⓚ To HIGH FILTER SW, S6-⑫

Ref. No.	Description	Position
S9	MUTING SW	ON
S10	DE-EMPHASIS SW	75 μsec

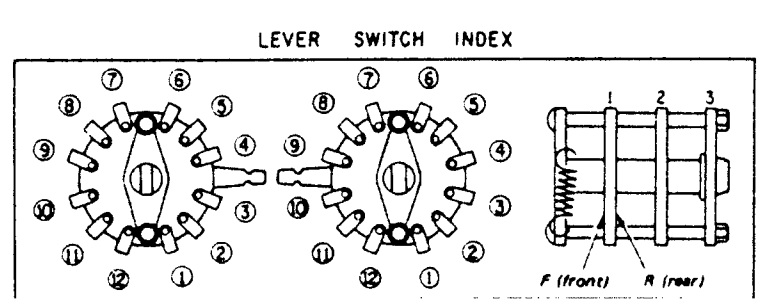
LEVER SWITCH INDEX
⑦
⑥
⑤
④
③
②
①
⑫
⑪
⑩
⑨
⑧
1
2
3
F (front)
R (rear)

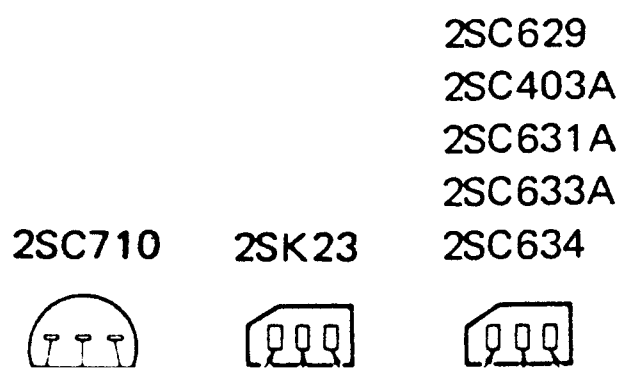
2SC629
2SC403A
2SC631A
2SC633A
2SC634
2SC710
2SK23

Note:

All resistance values are in ohms. k = 1,000, M = 1,000 k

All capacitance values are in μF except as indicated with p, which means μμF

All voltages represent an average value and should hold within ±20%.

All voltages are dc measured with a VOM which has an input impedance of 20 k ohms/volt. No signal in.

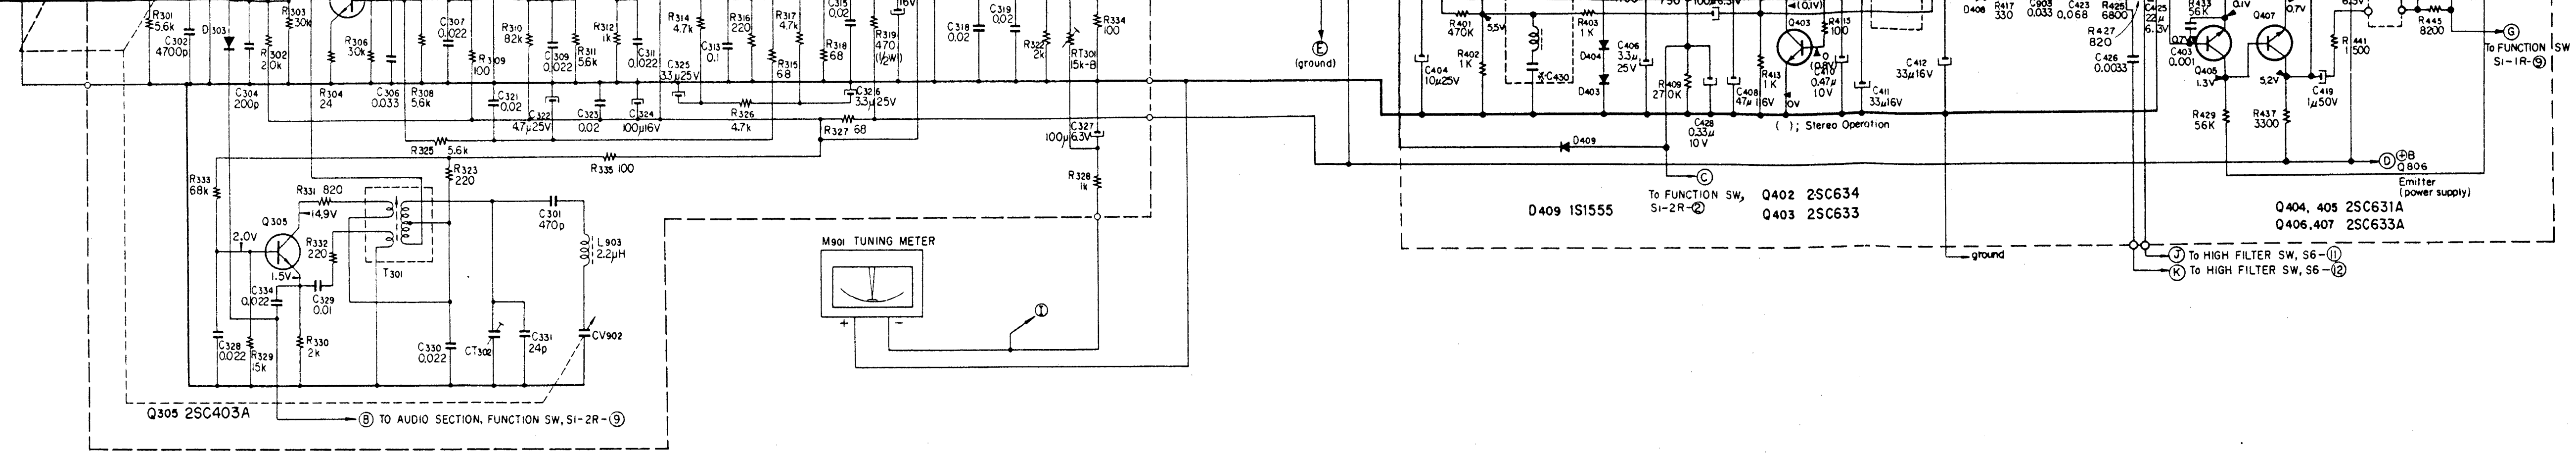
Q305 2SC403A
Ⓑ TO AUDIO SECTION, FUNCTION SW, S1-2R-⑨
M901 TUNING METER
T301
CV902
Ⓔ (ground)
( ); Stereo Operation
D409 1S1555
To FUNCTION SW, S1-2R-②
Q402 2SC634
Q403 2SC633
Q404, 405 2SC631A
Q406,407 2SC633A
ground
Ⓙ To HIGH FILTER SW, S6-⑪
Ⓚ To HIGH FILTER SW, S6-⑫
Ⓓ Ⓑ Q806 Emitter (power supply)
Ⓖ To FUNCTION SW S1-1R-⑤

Ref. No.	Description	Position
S9	MUTING SW	ON
S10	DE-EMPHASIS SW	75 μsec

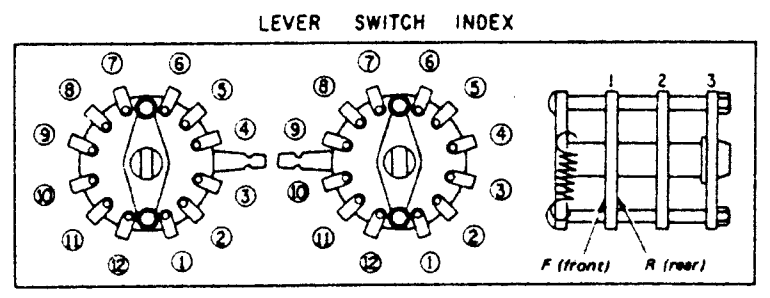
LEVER SWITCH INDEX
F (front)
R (rear)

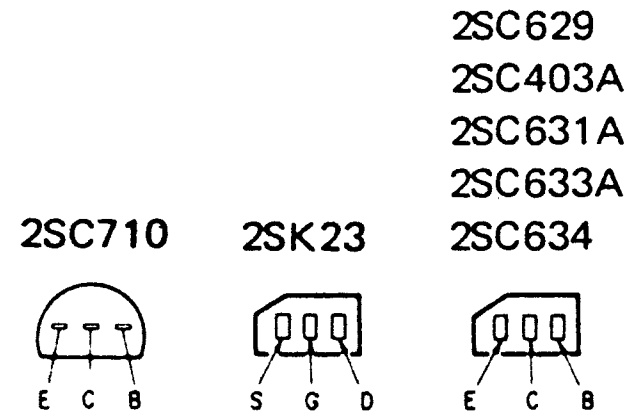
2SC629
2SC403A
2SC631A
2SC633A
2SC634
2SC710
2SK23
E C B
S G D
E C B

Note:

All resistance values are in ohms. k = 1,000, M = 1,000k

All capacitance values are in μF except as indicated with p, which means μμF

All voltages represent an average value and should hold within ±20%.

All voltages are dc measured with a VOM which has an input impedance of 20k ohms/volt. No signal in.

SCHEMATIC DIAGRAM

AUDIO SECTION

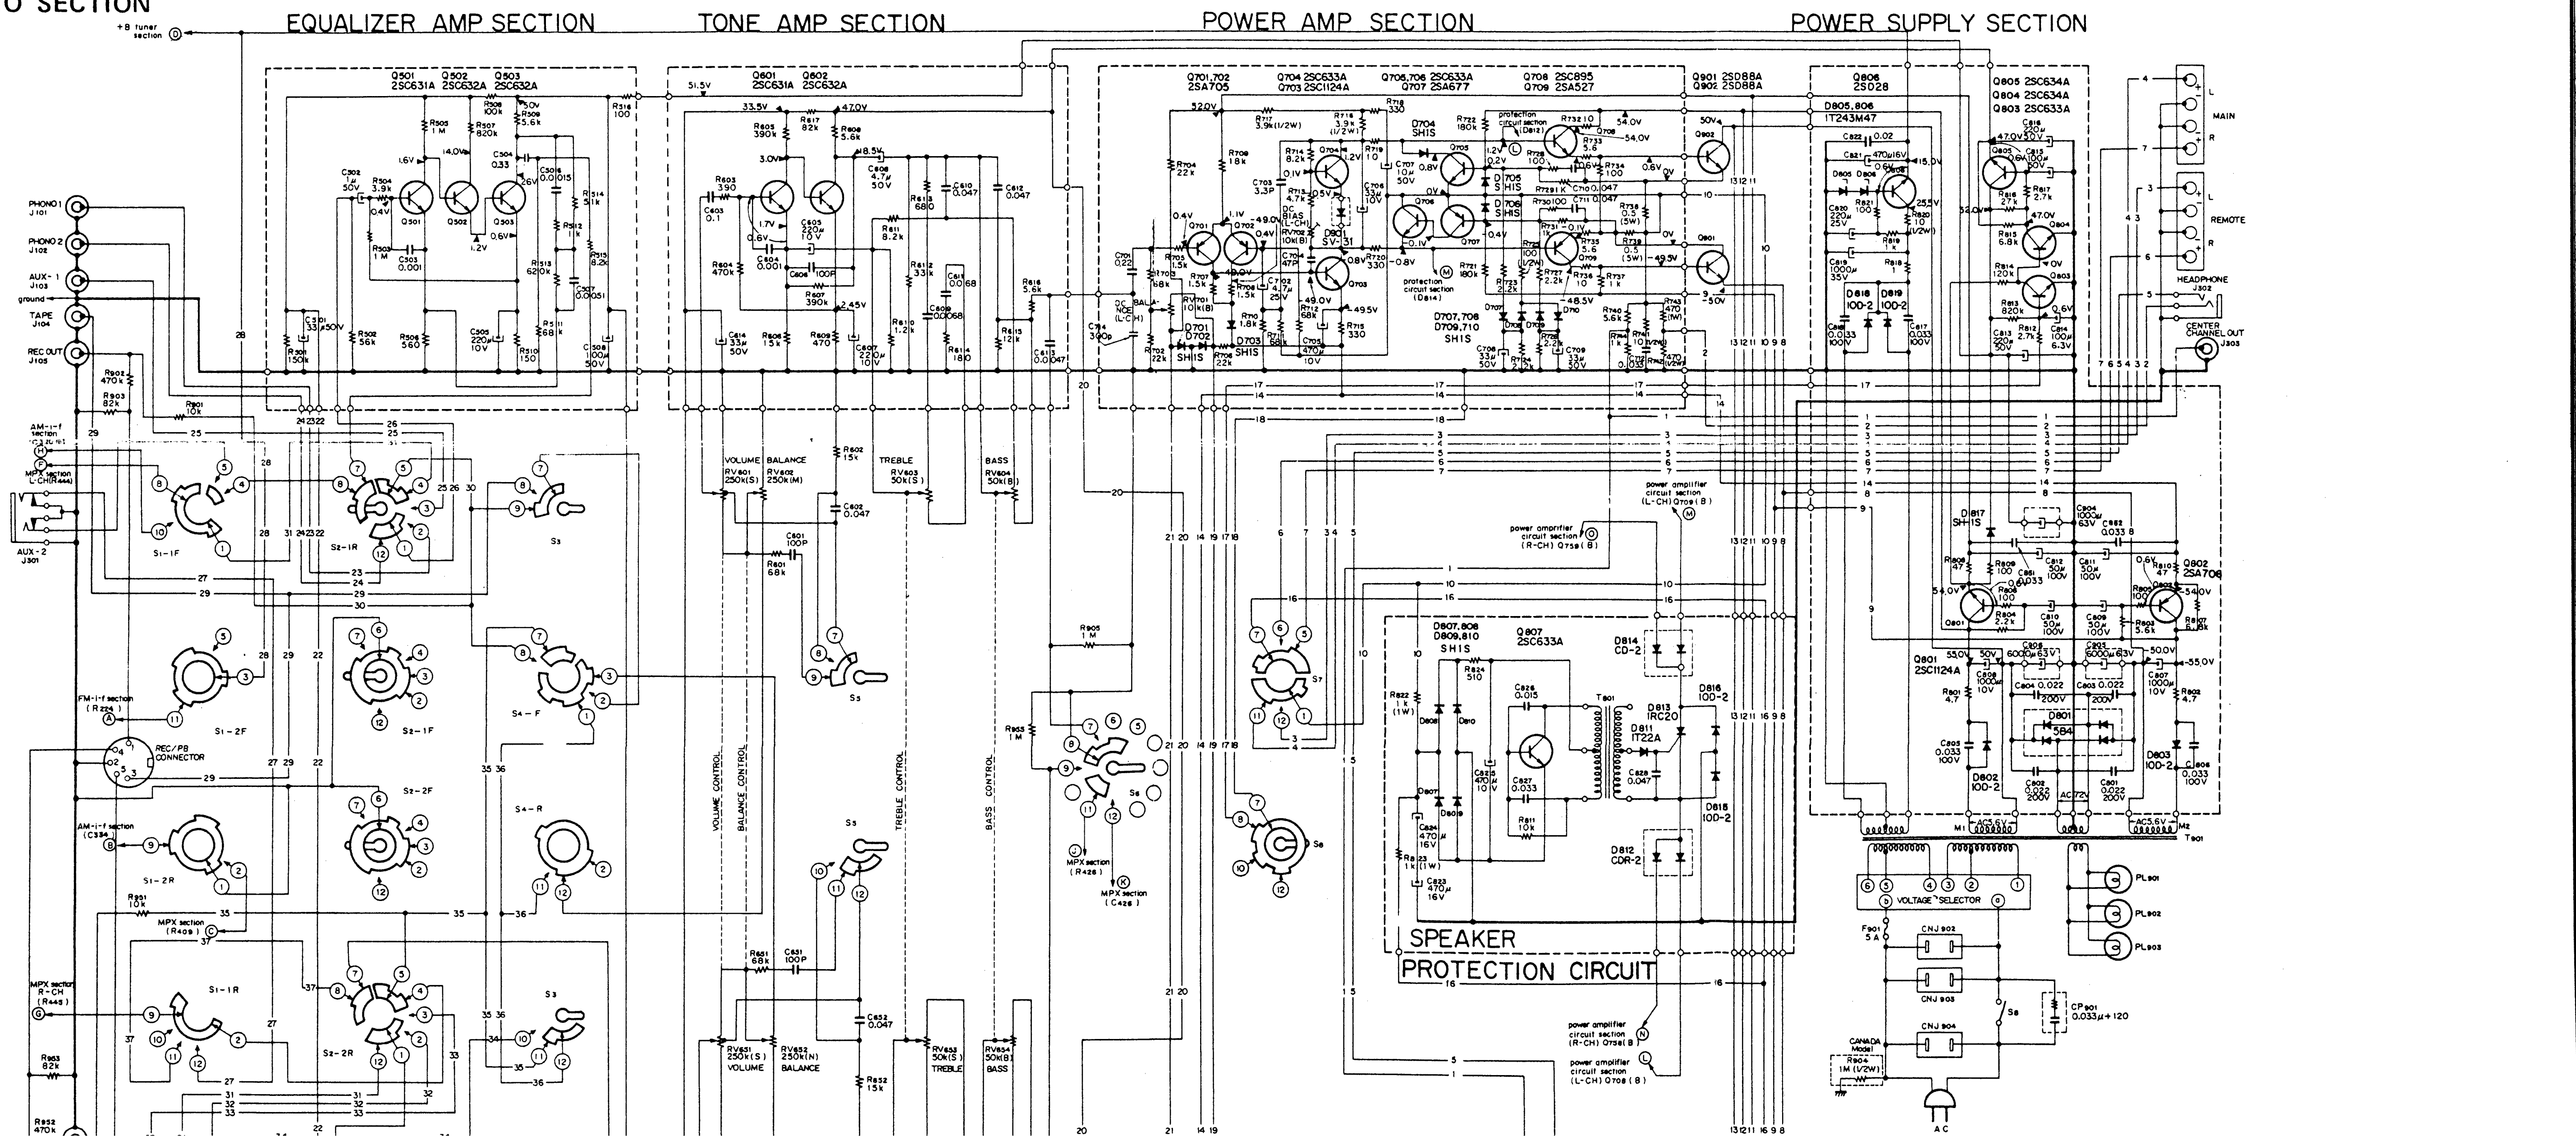
EQUALIZER AMP SECTION
TONE AMP SECTION
POWER AMP SECTION
POWER SUPPLY SECTION
+B tuner section
Q501 2SC631A
Q502 2SC632A
Q503 2SC632A
Q601 2SC631A
Q602 2SC632A
Q701,702 2SA705
Q704 2SC633A
Q703 2SC1124A
Q705,706 2SC633A
Q707 2SA677
Q708 2SC895
Q709 2SA527
Q901 2SD88A
Q902 2SD88A
Q806 2SD28
D805,806 1T243M47
Q805 2SC634A
Q804 2SC634A
Q803 2SC633A
PHONO 1 J101
PHONO 2 J102
AUX-1 J103
ground
TAPE J104
REC OUT J105
AUX-2 J301
REC/PB CONNECTOR
VOLUME
BALANCE
TREBLE
BASS
VOLUME CONTROL
BALANCE CONTROL
TREBLE CONTROL
BASS CONTROL
MAIN
REMOTE
HEADPHONE J302
CENTER CHANNEL OUT J303
SPEAKER PROTECTION CIRCUIT
Q807 2SC633A
Q801 2SC1124A
Q802 2SA706
VOLTAGE SELECTOR
PL901
PL902
PL903
CANADA Model
AC
T801
T901

SCHEMATIC DIAGRAM
AUDIO SECTION

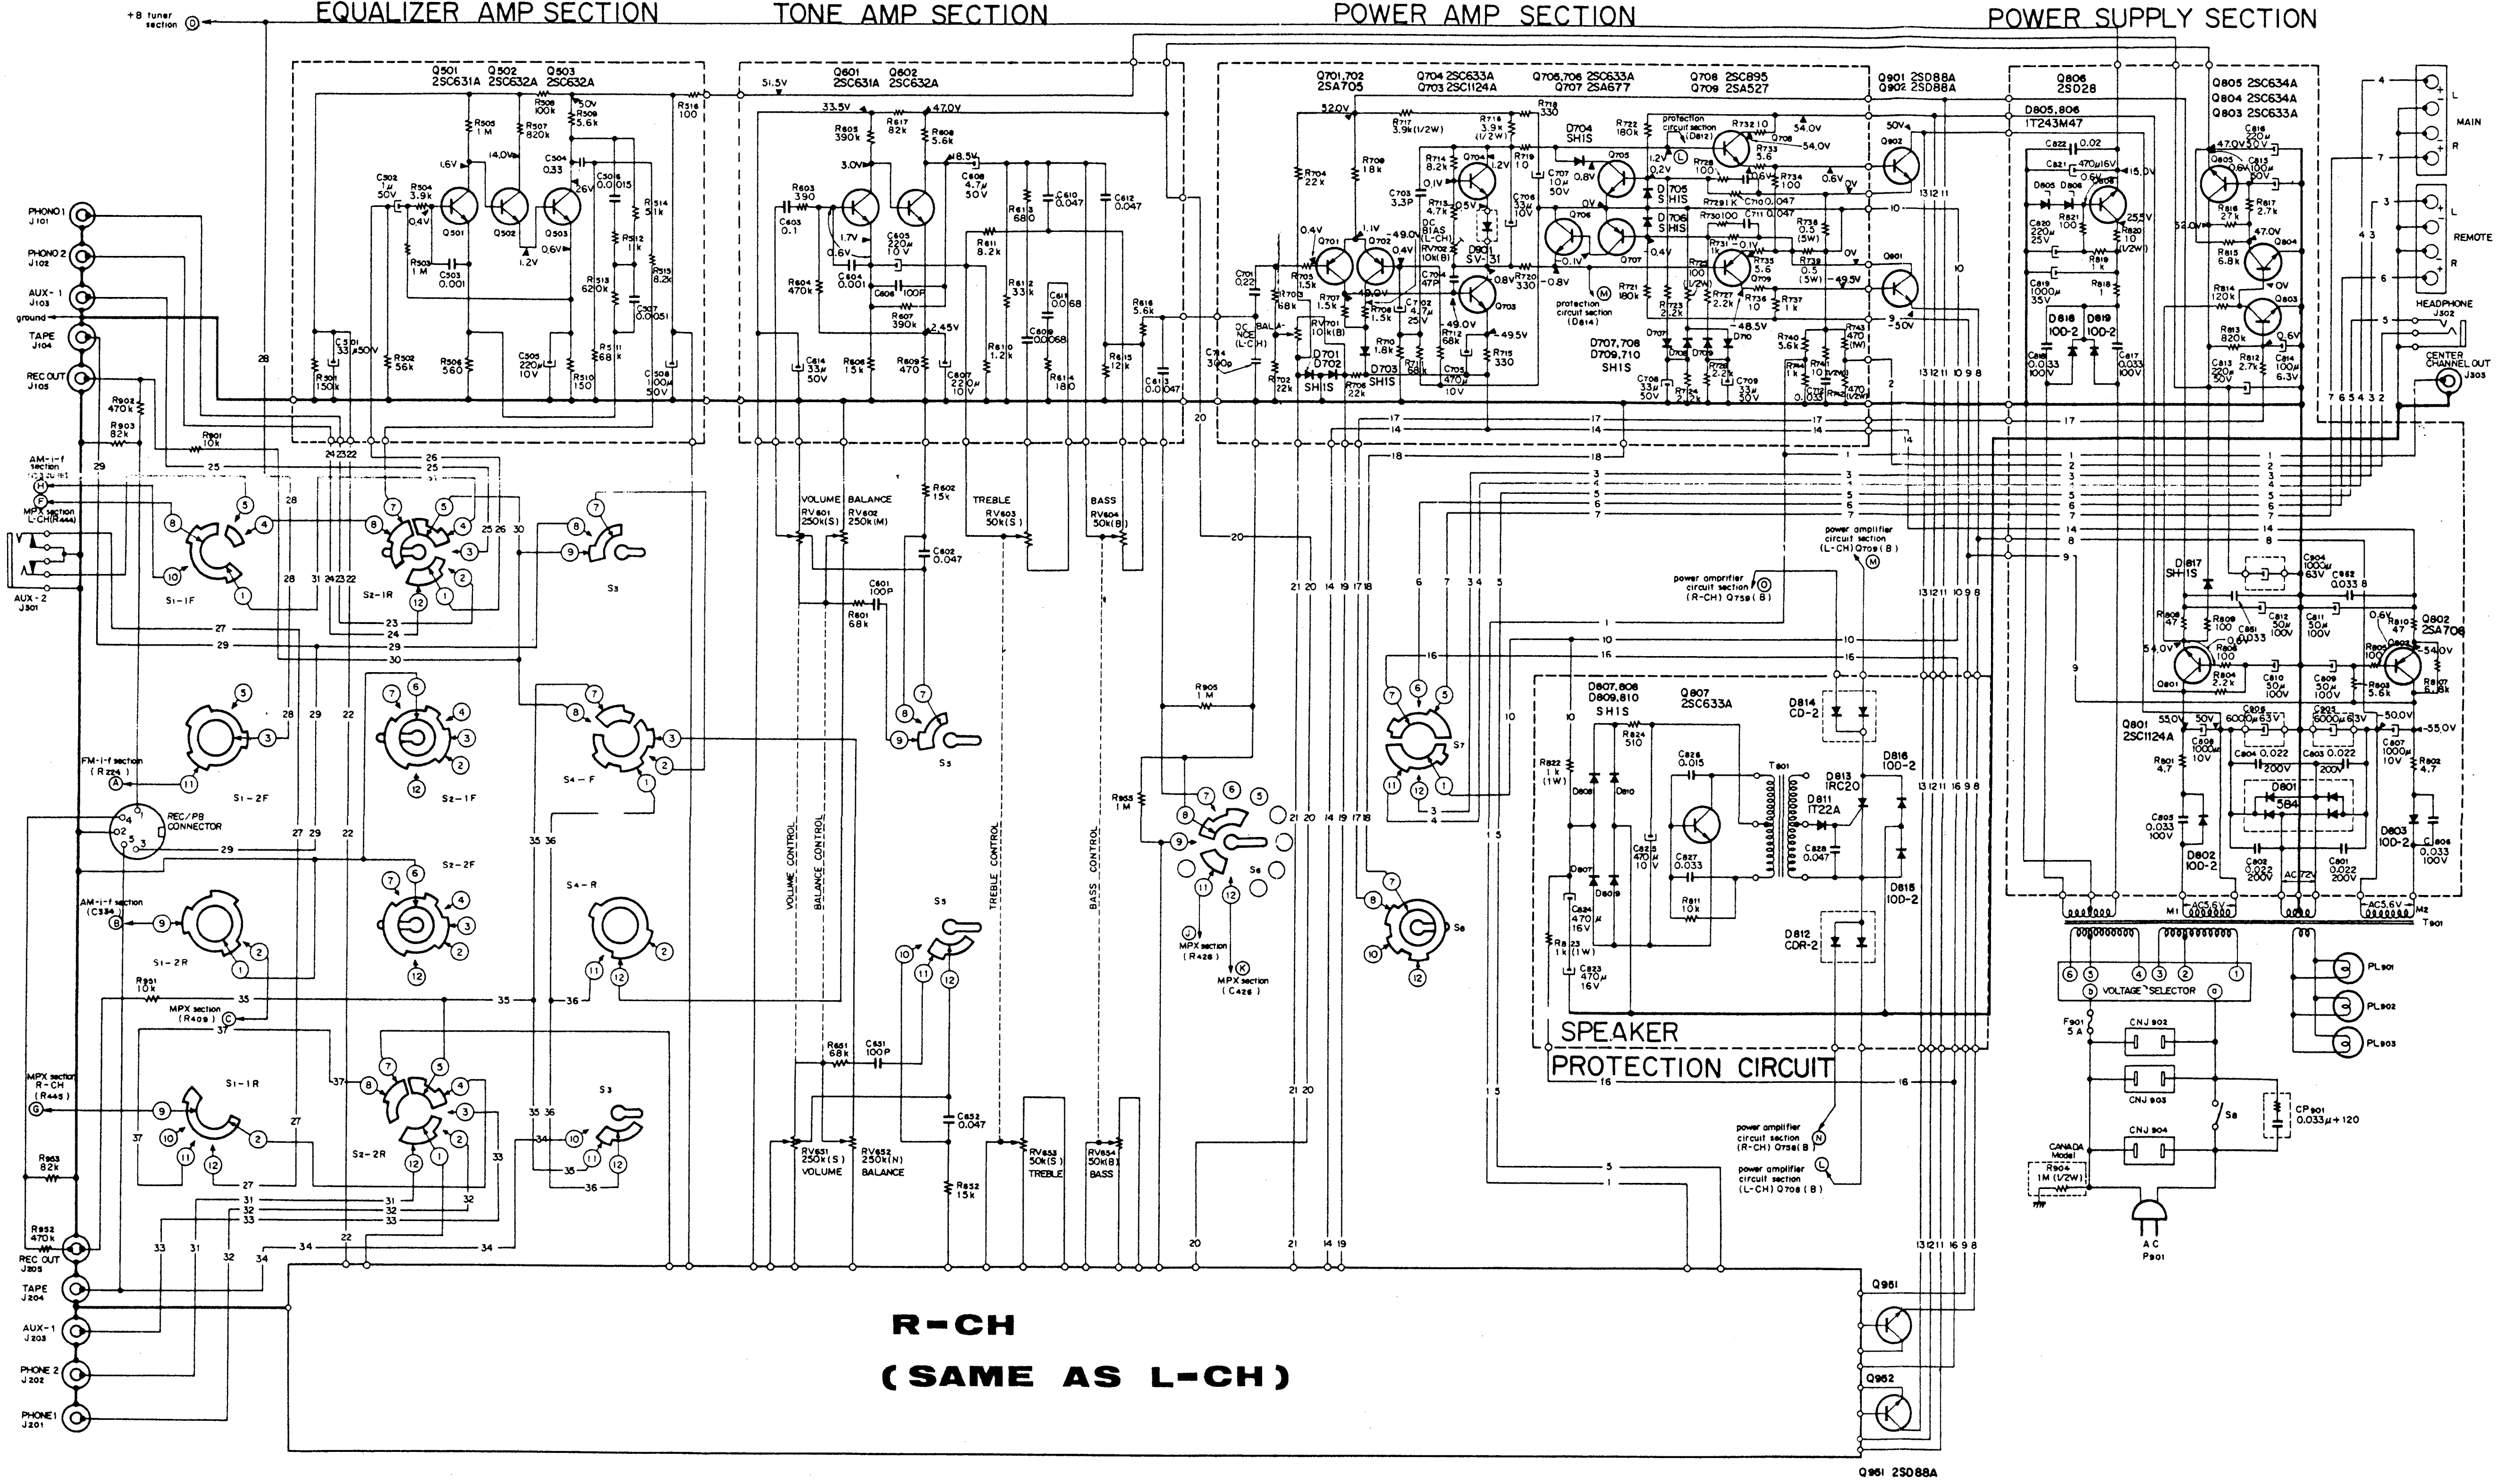
EQUALIZER AMP SECTION
TONE AMP SECTION
POWER AMP SECTION
POWER SUPPLY SECTION
+B tuner section
Q501 2SC631A Q502 2SC632A Q503 2SC632A
Q601 2SC631A Q602 2SC632A
Q701,702 2SA705
Q704 2SC633A Q703 2SC1124A
Q705,706 2SC633A Q707 2SA677
Q708 2SC895 Q709 2SA527
Q901 2SD88A Q902 2SD88A
Q806 2SD28
D805,806 1T243M47
Q805 2SC634A Q804 2SC634A Q803 2SC633A
Q802 2SA706
Q801 2SC1124A
D807,808 D809,810 SH1S
Q807 2SC633A
PHONO 1 J101
PHONO 2 J102
AUX-1 J103
ground
TAPE J104
REC OUT J105
AM-i-f section
MPX section L-CH
AUX-2 J301
FM-i-f section
REC/PB CONNECTOR
MPX section R-CH
S1-1F
S2-1R
S3
S1-2F
S2-1F
S4-F
S1-2R
S2-2F
S4-R
S1-1R
S2-2R
VOLUME
BALANCE
TREBLE
BASS
VOLUME CONTROL
BALANCE CONTROL
TREBLE CONTROL
BASS CONTROL
S5
S6
S7
S8
MPX section
power amplifier circuit section
protection circuit section
SPEAKER
PROTECTION CIRCUIT
MAIN
REMOTE
HEADPHONE J302
CENTER CHANNEL OUT J303
VOLTAGE SELECTOR
F901 5A
CNJ 902
CNJ 903
CNJ 904
CANADA Model
CP901 0.033μ+120
PL901
PL902
PL903
AC P901
T901
REC OUT J205
TAPE J204
AUX-1 J203
PHONE 2 J202
PHONE1 J201
R-CH
(SAME AS L-CH)
Q961
Q962
Q961 2SD88A
Q962 2SD88A

Ref. No.	Description	Position
S1	FUNCTION (1) (FM AUTO STEREO - FM MONO - AM - PHONO-2 - AUX-2)	AUTO STEREO
S2	FUNCTION (2) SW (AUX-1 - FUNCTION (1) - PHONO-1)	FUNCTION (1)
S3	MONITOR SW (SOURCE - TAPE)	SOURCE
S4	MODE SW (REVERSE - STEREO - L+R - LEFT - RIGHT)	STEREO

Ref. No.	Description	Position
S5	LOUDNESS SW	ON
S6	HIGH FILTER	OFF
S7	SPEAKER SW (REMOTE - OFF - MAIN - BOTH)	BOTH
S8	POWER SW	OFF

ROTARY SWITCH INDEX

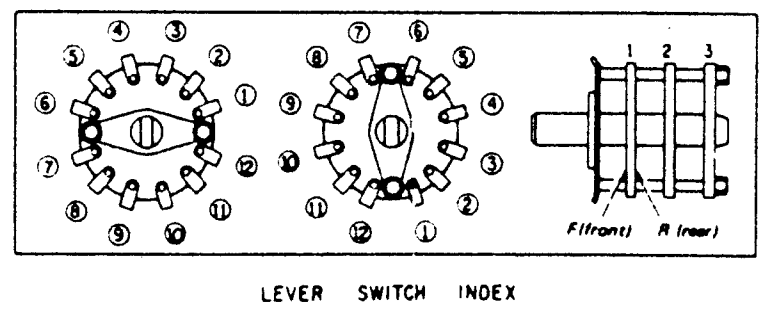
1
2
3
4
5
6
7
8
9
10
11
12
F(front)
R (rear)

LEVER SWITCH INDEX

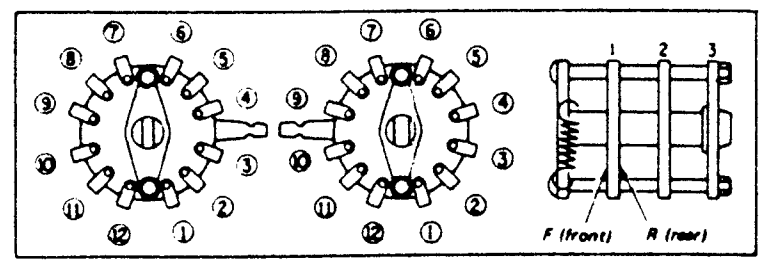
1
2
3
4
5
6
7
8
9
10
11
12
F (front)
R (rear)

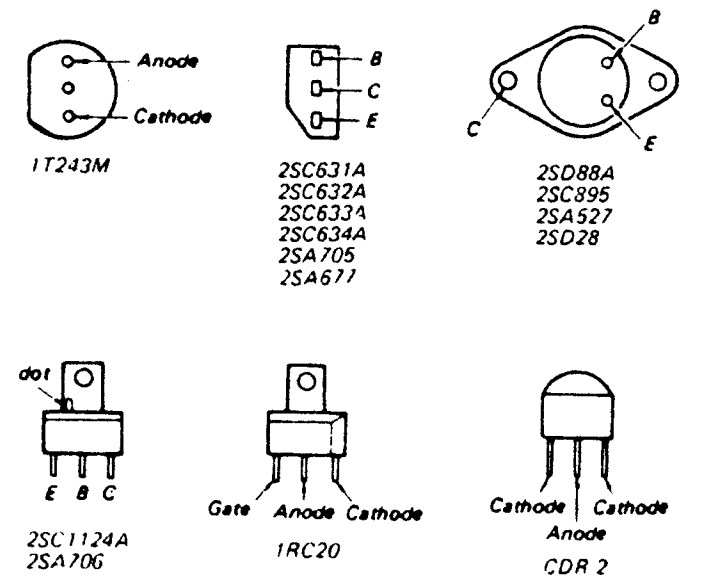
Anode
Cathode
1T243M
B
C
E
2SC631A
2SC632A
2SC633A
2SC634A
2SA705
2SA677
2SD88A
2SC895
2SA527
2SD28
dot
E B C
2SC1124A
2SA706
Gate
Anode
Cathode
1RC20
Cathode
Anode
Cathode
CDR 2

Note:
All resistance values are in ohms. k = 1,000, M = 1,000 k
All capacitance values are in μF except as indicated with p, which means μμF.
All voltages represent an average value and should hold within ±20%.
All voltages are dc measured with a VOM which has an input impedance of 20 k ohms/volt. No signal in.

SONY
STR-6065
© 1971

805

SONY®

Complete Spare Parts List

Model STR - 6065

Eingegangen
03. AUG. 1971
Erledigt ....

GENERAL EXPORT MODEL

"IMPORTANT"

When ordering parts, please do not fail to furnish us the following:

1. Part Number
2. Model Name
3. Description as mentioned in this parts list

We are now using EDPS (Electronic Data Processing System) in all the departments concerned, for procurement, inventory control, packing, warehousing, etc. Your orders are processed mainly from the PART NUMBERS referred by you. Incorrect part numbers, therefore, will result in incorrect parts shipment. To assure prompt shipment of correct parts, your cooperation will be appreciated.

NOTE:

Prices are subject to change without notice.

SONY CORPORATION

COMPLETE SPARE PARTS LIST FOR STR-6065

(General Export Model)

JULY, 1971

Part No.	Description	Unit Price
	I. MECHANICAL PARTS	
X-20437-13	Holder Ass'y, bar antenna	$0.06
X-20437-54	Flywheel Ass'y	0.26
X-20566-08	Bracket Ass'y, flywheel support	0.14
X-48028-02-1	Binding Post Ass'y, red	0.17
X-48028-02-2	Binding Post Ass'y, blue	0.17
X-48028-02-3	Binding Post Ass'y, black	0.17
X-48030-04	Knob Ass'y, MODE; FUNCTION and SPEAKER switch	0.18
X-48030-07	Knob Ass'y, TONE control (R-ch)	0.16
X-48030-08	Knob Ass'y, TONE control (L-ch)	0.18
X-48030-09	Knob Ass'y, LOUDNESS; HIGH FILTER; MUTING; MONITOR and POWER switch	0.13
X-48030-11	Knob Ass'y, TUNING	0.46
X-48034-07	Illuminator Ass'y, STEREO	0.07
X-48041-01	Chassis Ass'y	3.65
X-48041-02	Knob Ass'y, BALANCE control	0.10
X-48041-03	Bracket Ass'y (A), pulley support	0.07
X-48041-04	Back Plate Ass'y, dial scale	0.18
X-48041-05	Pointer Ass'y	0.17
X-48041-06	Knob Ass'y, VOLUME control	0.24
X-48041-07	Bracket Ass'y (B), pulley support	0.09
0-029-624	Coil-spring, tuning capacitor drive drum	0.01
0-051-263	Foot, rubber	0.01
2-029-928	Heat Sink	0.09
2-029-953	Label, power requirement indicating	0.01
2-043-749	Top Cover	1.87
2-047-106	Mask, light shield (MONITOR and POWER switch)	0.01
2-047-107	Mask, light shield (FUNCTION switch)	0.01
2-047-151	Band, bar antenna	0.01
2-047-154	Drive-drum, tuning capacitor	0.04
2-051-919	Escutcheon, HEADPHONE and AUX-2 jack	0.03
2-056-636	Hex-nut, FUNCTION and SPEAKER switch	0.04
2-056-637	Spacer	0.02
2-056-639	Shade, dial lamp	0.01
2-056-640	Cushion, dial scale	0.02
2-056-647	Rubber, light shield (front panel)	0.01

Part No.	Description	Unit Price
2-056-652	Cushion, light shield	$0.01
2-056-655	Label, de-emphasis indicating	0.01
2-057-730	Pulley, 10 ϕ	0.01
2-057-960	Insulator, power transformer	0.16
2-057-965	Mask, light shield (LOUDNESS, HIGH FILTER, MUTING switch)	0.01
2-066-107	Screw, top cover securing	0.07
2-068-548	Nut-plate, bar antenna	0.02
2-825-003	Spacer, mica	0.03
3-409-124	Washer, nylon	0.01
3-410-032	Strain Relief, power cord	0.02
3-442-022	Grommet, stereo lamp	0.02
3-701-030	Label, serial number	0.01
3-701-402	Rivet	0.01
3-827-021	Clamp, lead wire	0.02
4-010-743	Cushion, dial scale back plate	0.01
4-801-028	Washer (B), binding post ass'y	0.01
4-801-216	Heat Sink	0.07
4-801-224	Holder, heat sink	0.01
4-801-225	Label, caution	0.01
4-802-812	Washer (A), binding post ass'y	0.01
4-803-038	Cover, front-end ass'y	0.25
4-803-041	Shaft, tuning	0.08
4-803-957	Terminal Post	0.01
4-804-132	Label, specification	0.04
4-804-134	Heat Sink	1.04
4-804-135	Plate, power transformer mounting	0.14
4-804-136	Stopper, power supply board	0.04
4-804-137	Holder, tuning meter	0.08
4-804-138	Bracket, voltage changeover block support	0.03
4-804-139	Panel, front	2.36
4-804-140	Holder, dial scale	0.02
4-804-141	Sub-chassis, front	0.77
4-804-142	Cover, stereo lamp	0.02
4-804-143	Bracket, power supply board support	0.18
4-804-144	Bracket, power amplifier board support	0.17
4-804-145	Dial Scale	0.59
4-804-146	Panel, rear	0.65
4-804-147	Cushion, tuning meter	0.02
4-804-148	Cushion, electrolytic capacitor	0.02
4-804-150	Band, electrolytic capacitor	0.21
4-804-152	Cover, power transformer	0.79
4-804-153	Cushion, front panel	0.17

Part No.	Description	Unit Price
4-804-154	Instruction Sheet, dial cord restringing	$0.04
4-804-155	Plate, bottom	0.93
4-804-156	Holder, lead wire	0.07
4-804-157	Clamp (A), lead wire	0.02
4-804-158	Clamp (B), lead wire	0.01
	Hardwares	(Per 100)
7-621-773-86	Screw (+) B 2.6 x 4	0.62/100
7-623-108-18	Washer 3 ϕ	0.39/100
7-623-207-11	Washer, spring 2.6 ϕ	0.05/100
7-623-408-01	Washer, lock (external tooth) 3 ϕ	0.19/100
7-623-508-01	Lug 3 ϕ	0.13/100
7-623-611-01	Eyelet 1.5 x 3	0.05/100
7-624-109-01	Retaining Ring 5 ϕ	0.47/100
7-682-148-13	Screw (+) P 3 x 8	0.10/100
7-682-547-03	Screw (+) B 3 x 6	0.11/100
7-682-548-13	Screw (+) B 3 x 8	0.29/100
7-682-549-13	Screw (+) B 3 x 10	0.32/100
7-682-551-04	Screw (+) B 3 x 14	0.40/100
7-682-552-13	Screw (+) B 3 x 16	0.43/100
7-682-563-01	Screw (+) B 4 x 12	0.17/100
7-682-645-01	Screw (+) PS 3 x 4	0.29/100
7-682-647-01	Screw (+) PS 3 x 6	0.24/100
7-682-648-01	Screw (+) PS 3 x 8	0.29/100
7-682-649-03	Screw (+) PS 3 x 10	0.27/100
7-682-661-01	Screw (+) PS 4 x 8	0.27/100
7-682-947-01	Screw (+) PSW 3 x 6	0.53/100
7-682-948-01	Screw (+) PSW 3 x 8	0.43/100
7-684-013-01	Nut 3 ϕ	0.29/100
7-685-145-21	Screw, self-tapping (+) P 3 x 6	0.24/100
7-685-146-21	Screw, self-tapping (+) PS 3 x 8	0.27/100
7-685-543-21	Screw, self-tapping (+) B 3 x 4	0.24/100
7-685-545-21	Screw, self-tapping (+) B 3 x 6	0.24/100
7-685-545-23	Screw, self-tapping (+) B 3 x 6	0.24/100
7-685-546-21	Screw, self-tapping (+) B 3 x 8	0.27/100
7-685-547-21	Screw, self-tapping (+) B 3 x 10	0.24/100
7-685-549-21	Screw, self-tapping (+) B 3 x 14	0.23/100

Ref. No.	Part No.	Description	Unit Price
		II. ELECTRICAL PARTS	
		Mounted Circuit Boards	
	8-982-572-05	Tone Control Circuit Board	$4.25
	8-982-572-10	Fm Front-end Ass'y, FAF-013AW	9.70
	8-982-572-20	Fm I-f Circuit Board	10.00
	8-982-572-22	Power Amplifier Circuit Board	16.00
	8-982-572-45	Power Supply/Speaker Protection Circuit Board	10.58
	8-982-572-70	MPX Circuit Board	8.90
	8-982-572-81	A-m Circuit Board	4.77
	8-982-572-85	Loudness Control Circuit Board	2.55
	8-982-572-89	Equalizer Amplifier Circuit Board	2.93
		Semiconductors	
D101		Diode, 1S351	0.12
D102		Diode, 1T243	0.13
D201		Diode, 1S1555	0.07
D202		Diode, 1S1555	0.07
D203		Diode, 1S1555	0.07
D204		Diode, 1S1555	0.07
D205		Diode, 1S1555	0.07
D206		Diode, 1S1555	0.07
D207		Diode, 1T22A	0.05
D208		Diode, 1T22A	0.05
D209		Diode, 1S1555	0.07
D210		Diode, 1S1555	0.07
D211		Diode, 1T22A	0.05
D212		Diode, 1T22A	0.05
D213		Diode, 1S1555	0.07
D301		Diode, 1T22A	0.05
D302		Diode, 1T22A	0.05
D303		Diode, 1S1555	0.07
D401		Diode, 1S1555	0.07
D402		Diode, 1S1555	0.07
D403		Diode, 1S1555	0.07
D404		Diode, 1S1555	0.07

Ref. No.	Part No.	Description	Unit Price
D405		Diode, 1T22A	$0.05
D406		Diode, 1T22A	0.05
D407		Diode, 1T22A	0.05
D408		Diode, 1T22A	0.05
D409		Diode, 1S1555	0.07
D701(D751)		Diode, SH1S	0.07
D702(D752)		Diode, SH1S	0.07
D703(D753)		Diode, SH1S	0.07
D704(D754)		Diode, SH1S	0.07
D705(D755)		Diode, SH1S	0.07
D706(D756)		Diode, SH1S	0.07
D707(D757)		Diode, SH1S	0.07
D708(D758)		Diode, SH1S	0.07
D709(D759)		Diode, SH1S	0.07
D710(D760)		Diode, SH1S	0.07
D801		Diode, 5B4	0.95
D802		Diode, 10D2	0.11
D803		Diode, 10D2	0.11
D804		Diode, CD2	0.18
D805		Diode, 1T243M	0.13
D806		Diode, 1T243M	0.13
D807		Diode, SH1S	0.07
D808		Diode, SH1S	0.07
D809		Diode, SH1S	0.07
D810		Diode, SH1S	0.07
D811		Diode, 1T22A	0.05
D812		Diode, CDR2	0.18
D813		SCR, 1RC20	0.57
D814		Diode, CD2	0.18
D815		Diode, 10D2	0.11
D816		Diode, 10D2	0.11
D817		Diode, SH1S	0.07
D901(D951)		Diode, SV-31	0.07
Q101		FET, 2SK23	0.42
Q102		Transistor, 2SC710	0.12
Q103		Transistor, 2SC629	0.25
Q201		Transistor, 2SC403A	0.14
Q202		Transistor, 2SC710	0.12
Q203		Transistor, 2SC403A	0.14

Ref. No.	Part No.	Description	Unit Price
Q204		Transistor, 2SC403A	$0.14
Q205		Transistor, 2SC403A	0.14
Q206		Transistor, 2SC403A	0.14
Q207		FET, 2SK23	0.42
Q208		FET, 2SK23	0.42
Q209		Transistor, 2SC403A	0.14
Q210		Transistor, 2SC403A	0.14
Q301		Transistor, 2SC403A	0.14
Q302		FET, 2SK23	0.42
Q303		Transistor, 2SC403A	0.14
Q304		Transistor, 2SC403A	0.14
Q305		Transistor, 2SC403A	0.14
Q401		FET, 2SK23	0.42
Q402		Transistor, 2SC633A	0.14
Q403		Transistor, 2SC633A	0.14
Q404		Transistor, 2SC631A	0.17
Q405		Transistor, 2SC631A	0.17
Q406		Transistor, 2SC633A	0.14
Q407		Transistor, 2SC633A	0.14
Q501(Q551)		Transistor, 2SC631A	0.17
Q502(Q552)		Transistor, 2SC632A	0.17
Q503(Q553)		Transistor, 2SC632A	0.17
Q601(Q651)		Transistor, 2SC631A	0.17
Q602(Q652)		Transistor, 2SC632A	0.17
Q701(Q751)		Transistor, 2SA621	0.55
Q702(Q752)		Transistor, 2SA621	0.55
Q703(Q753)		Transistor, 2SC1124A	0.50
Q704(Q754)		Transistor, 2SC633A	0.14
Q705(Q755)		Transistor, 2SC633A	0.14
Q706(Q756)		Transistor, 2SC633A	0.14
Q707(Q757)		Transistor, 2SA610	0.21
Q708(Q758)		Transistor, 2SC895	0.50
Q709(Q759)		Transistor, 2SA527	1.67
Q801		Transistor, 2SC1124A	0.50
Q802		Transistor, 2SA621	0.55
Q803		Transistor, 2SC633A	0.14
Q804		Transistor, 2SC634A	0.14

Ref. No.	Part No.	Description	Unit Price
Q805		Transistor, 2SC634A	$0.14
Q806		Transistor, 2SD28	0.42
Q807		Transistor, 2SC633A	0.14
Q901(Q951)		Transistor, 2SD88A	1.25
Q902(Q952)		Transistor, 2SD88A	1.25

Transformers, Coils & Inductors

Ref. No.	Part No.	Description	Unit Price
B901	1-417-014	Balun	0.06
CFT301	1-403-150	CFT, 455 kHz	0.18
IFT101	1-403-295	IFT, fm 10.7 MHz	0.12
IFT301	1-403-149	IFT, a-m 455 kHz	0.10
L101	1-401-351	Coil, fm antenna	0.69
L102	1-425-446	Coil, fm rf	0.10
L103	1-425-446	Coil, fm rf	0.10
L104	1-405-377	Coil, fm osc.	0.12
L201	1-407-163	Inductor, micro 33 µH	0.03
L202	1-407-184	Inductor, micro 3.3 µH	0.04
L203	1-407-408	Inductor, micro 22 mH	0.07
L204	1-407-184	Inductor, micro 3.3 µH	0.04
L301	1-407-169	Inductor, micro 100 µH	0.03
L901	1-407-161	Inductor, micro 22 µH	0.03
L902	1-407-182	Inductor, micro 2.2 µH	0.05
L903	1-407-182	Inductor, micro 2.2 µH	0.05
L904	1-401-439-31	Bar Antenna, a-m	0.53
MU401	1-425-548	MPX Unit	0.67
T201	1-403-291	Transformer, discriminator 10.7 MHz	0.28
T202	1-403-299	IFT, fm 10.7 MHz	0.13
T301	1-405-459	Coil, a-m osc.	0.10
T401	1-425-260	Transformer, switching 38 kHz	0.33
T801	1-433-132	Transformer, osc.	0.19
T901	1-441-669	Transformer, power	10.96

Capacitors

All capacitance values are in µF except as indicated with p, which means µµF.

Ref. No.	Part No.	Description			Unit Price
C101	1-101-862	18 p	±5 %	50 V, ceramic	$0.02
C102	1-101-938	1.5 p	±10 %	500 V, ceramic	0.03
C103	1-101-862	18 p	±5 %	50 V, ceramic	0.02
C104	1-101-937	1 p	±10 %	500 V, ceramic	0.03
C105	1-101-961	12 p	±5 %	50 V, ceramic	0.02
C106	1-102-985	180 p	±5 %	50 V, ceramic	0.04
C107	1-101-072	0.01	+80 -20 %	25 V, ceramic	0.02
C108	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C109	1-101-072	0.01	+80 -20 %	25 V, ceramic	0.02
C110	1-101-072	0.01	+80 -20 %	25 V, ceramic	0.02
C111	1-101-869	27 p	±5 %	50 V, ceramic	0.02
C112	1-102-077	0.01	±20 %	50 V, ceramic	0.04
C113	1-101-873	15 p	±5 %	50 V, ceramic	0.02
C114	1-101-958	8 p	±0.5 p	50 V, ceramic	0.01
C115	1-101-978	10 p	±5 %	50 V, ceramic	0.02
C116	1-102-875	7 p	±5 %	50 V, ceramic	0.03
C117	1-101-072	0.01	+80 -20 %	25 V, ceramic	0.02
C118	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C119	1-101-918	0.001	+80 -20 %	25 V, ceramic	0.02
C120	1-101-978	10 p	±5 %	50 V, ceramic	0.02
C121	1-101-957	7 p	±0.5 p	50 V, ceramic	0.03
C122	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C123	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C124	~~1-121-353~~ 1-121-338-11	47	+100 -10 %	16 V, electrolytic	0.05
C125	1-105-679-12	0.033	±10 %	50 V, mylar	0.03
C126	1-121-391	1	+150 -10 %	50 V, electrolytic	0.03
C201	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02
C202	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02
C203	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02
C204	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C205	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C206	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02
C207	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02
C208	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02
C209	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02
C210	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02
C211	1-101-919	0.002	+80 -20 %	25 V, ceramic	0.02

Ref. No.	Part No.	Description			Unit Price
C212 C213	- Included in T201 -				
C214	1-101-073	0.02	+80 -20 %	25 V, ceramic ---------	$0.02
C215	1-105-689-12	0.22	±10 %	50 V, mylar -----------	0.09
C216	1-101-030	200 p	±5 %	50 V, ceramic ---------	0.02
C217	1-101-030	200 p	±5 %	50 V, ceramic ---------	0.02
C218	1-101-030	200 p	±5 %	50 V, ceramic ---------	0.02
C219	1-121-398	10	+100 -10 %	25 V, electrolytic ----	0.03
C220	1-107-140	240 p	±10 %	50 V, silvered mica ---	0.02
C221	1-101-424	500 p	±20 %	250 V, ceramic --------	0.02
C222	1-127-020	0.22	±20 %	10 V, solid, aluminum ------	0.06
C223	1-127-021	0.33	±20 %	10 V, solid, aluminum ------	0.04
C224	1-101-073	0.02	+80 -20 %	25 V, ceramic ---------	0.02
C225	1-121-398	10	+100 -10 %	25 V, electrolytic ----	0.03
C226	1-101-073	0.02	+80 -20 %	25 V, ceramic ---------	0.02
C229	1-101-872	33 p	±5 %	50 V, ceramic ---------	0.02
C230	1-101-073	0.02	+80 -20 %	25 V, ceramic ---------	0.02
C231	1-121-398	10	+100 -10 %	25 V, electrolytic ----	0.03
C232	- Included in T202 -				
C233	1-121-398	10	+100 -10 %	25 V, electrolytic ----	0.03
C234	1-101-922	4700 p	+80 -20 %	50 V, ceramic ---------	0.02
C235	1-101-073	0.02	+80 -20 %	25 V, ceramic ---------	0.02
C236	~~1-121-396~~ 1-121-466	4.7	+150 -10 %	50 V, electrolytic ----	0.04
C237	1-121-409	47	+100 -10 %	16 V, electrolytic ----	0.04
C239	1-101-073	0.02	+80 -20 %	25 V, ceramic ---------	0.02
C240	1-121-398	10	+100 -10 %	25 V, electrolytic ----	0.03
C241	1-101-073	0.02	+80 -20 %	25 V, ceramic ---------	0.02
C242	1-105-683-12	0.068	±10 %	50 V, mylar -----------	0.04
C243	1-105-689-12	0.22	±10 %	50 V, mylar -----------	0.09
C244	1-121-391	1	+150 -10 %	50 V, electrolytic ----	0.03
C301	1-103-617	470 p	±5 %	50 V, styrol ----------	0.03
C302	1-105-829-12	0.047	±20 %	50 V, mylar -----------	0.02
C303	1-105-837-12	0.022	±20 %	50 V, mylar -----------	0.02
C304	~~1-102-977~~ 1-101-585-11	200 p	±5 %	50 V, ceramic ---------	0.03
C305	1-102-945	8 p	±5 %	50 V, ceramic ---------	0.01
C306	1-105-679-12	0.033	±20 %	50 V, mylar -----------	0.03
C307	1-105-837-12	0.022	±20 %	50 V, mylar -----------	0.02
C308	- Included in CFT301 -				
C309	1-105-837-12	0.022	±20 %	50 V, mylar -----------	0.02
C310	- Included in CFT301 -				

Ref. No.	Part No.	Description			Unit Price
C311	1-105-837-12	0.022	±20 %	50 V, mylar	$0.02
C312	1-105-673-12	0.01	±20 %	50 V, mylar	0.02
C313	1-105-685-12	0.1	±20 %	50 V, mylar	0.05
C314	1-101-884	56 p	±5 %	50 V, ceramic	0.02
C315	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C316	- Included in IFT301 -				
C317	1-121-415	100	+100 -10 %	16 V, electrolytic	0.06
C318	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C319	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C320	1-127-019	0.1	±20 %	10 V, solid, aluminum	0.06
C321	1-102-073	0.02	+80 -20 %	50 V, ceramic	0.03
C322	1-121-395	4.7	+100 -10 %	25 V, electrolytic	0.07
C323	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C324	1-121-415	100	+100 -10 %	16 V, electrolytic	0.06
C325	1-121-456	3.3	+100 -10 %	25 V, electrolytic	0.04
C326	1-121-456	3.3	+100 -10 %	25 V, electrolytic	0.04
C327	1-121-413	100	+100 -10 %	6.3 V, electrolytic	0.05
C328	1-105-837-12	0.022	±20 %	50 V, mylar	0.02
C329	1-105-673-12	0.01	±20 %	50 V, mylar	0.02
C330	1-105-837-12	0.022	±20 %	50 V, mylar	0.02
C331	1-102-960	24 p	±5 %	50 V, ceramic	0.01
C332	- deleted -				
C333	1-102-935	2 p	±0.25 p	50 V, ceramic	0.01
C334	1-105-837-12	0.022	±20 %	50 V, mylar	0.02
C401	1-105-683-12	0.068	±10 %	50 V, mylar	0.04
C402	1-105-661-12	0.001	±10 %	50 V, mylar	0.02
C403	1-105-661-12	0.001	±10 %	50 V, mylar	0.02
C404	1-121-398	10	+100 -10 %	25 V, electrolytic	0.03
C405	1-105-669-12	0.0047	±10 %	50 V, mylar	0.02
C406	1-121-344	3.3	+150 -10 %	25 V, electrolytic	0.03
C407	1-121-413	100	+100 -10 %	6.3 V, electrolytic	0.05
C408	1-121-409	47	+100 -10 %	16 V, electrolytic	0.04
C409	1-103-575	4700 p	±5 %	50 V, styrol	0.13
C410	1-127-022	0.47	±20 %	10 V, solid, aluminum	0.06
C411	1-121-403	33	+100 -10 %	16 V, electrolytic	0.04
C412	1-121-403	33	+100 -10 %	16 V, electrolytic	0.04
C413 C414	- deleted -				
C415	1-121-402	33	+100 -10 %	6.3 V, electrolytic	0.05
C416	1-101-884	56 p	±5 %	50 V, ceramic	0.02
C417	1-101-884	56 p	±5 %	50 V, ceramic	0.02

Ref. No.	Part No.	Description			Unit Price
C418	1-121-391	1	+150 -10 %	50 V, electrolytic ----	$0.03
C419	1-121-391	1	+150 -10 %	50 V, electrolytic ----	0.03
C420	1-121-419	220	+100 -10 %	6.3 V, electrolytic ---	0.06
C421	1-121-419	220	+100 -10 %	6.3 V, electrolytic ---	0.06
C422	1-105-683-12	0.068	±10 %	50 V, mylar -----------	0.04
C423	1-105-683-12	0.068	±10 %	50 V, mylar -----------	0.04
C424	1-127-013	2.2	±20 %	6.3 V, solid, aluminum -----	0.24
C425	1-127-013	2.2	±20 %	6.3 V, solid, aluminum -----	0.24
C426	1-105-667-12	0.0033	±10 %	50 V, mylar -----------	0.02
C427	1-121-409	47	+100 -10 %	16 V, electrolytic ----	0.04
C428	1-127-021	0.33	±20 %	10 V, electrolytic ----	0.06
C501	1-121-405	33	+100 -10 %	50 V, electrolytic ----	0.06
C502(C552)	1-121-391	1	+150 -10 %	50 V, electrolytic ----	0.02
C503(C553)	1-105-661-12	0.001	±10 %	50 V, mylar -----------	0.02
C504(C554)	1-105-691-12	0.33	±10 %	50 V, mylar -----------	0.12
C505(C555)	1-121-420	220	+100 -10 %	10 V, electrolytic ----	0.07
C506(C556)	1-106-005-12	0.0015	±5 %	50 V, mylar -----------	0.04
C507(C557)	1-106-018-12	0.0051	±5 %	50 V, mylar -----------	0.03
C508	1-121-417	100	+100 -10 %	50 V, electrolytic ----	0.10
C601(C651)	1-107-085	100 p	±5 %	50 V, silvered mica ---	0.02
C602(C652)	1-105-681-12	0.047	±10 %	50 V, mylar -----------	0.03
C603(C653)	1-105-685-12	0.1	±10 %	50 V, mylar -----------	0.05
C604(C654)	1-105-661-12	0.001	±10 %	50 V, mylar -----------	0.02
C605(C655)	1-121-420	220	+100 -10 %	10 V, electrolytic ----	0.07
C606(C656)	1-107-131	100 p	±10 %	50 V, silvered mica ---	0.02
C607(C657)	1-121-420	220	+100 -10 %	10 V, electrolytic ----	0.07
C608(C658)	1-121-396	4.7	+150 -10 %	50 V, electrolytic ----	0.04
C609(C659)	1-105-671-12	0.0068	±10 %	50 V, mylar -----------	0.02
C610(C660)	1-105-681-12	0.047	±10 %	50 V, mylar -----------	0.03
C611(C661)	1-105-683-12	0.068	±10 %	50 V, mylar -----------	0.04
C612(C662)	1-105-681-12	0.047	±10 %	50 V, mylar -----------	0.03
C613(C663)	1-105-669-12	0.0047	±10 %	50 V, mylar -----------	0.02
C614	1-121-405	33	+100 -10 %	50 V, electrolytic ----	0.06
C701(C751)	1-105-689-12	0.22	±10 %	50 V, mylar -----------	0.09
C702(C752)	1-121-395	4.7	+150 -10 %	25 V, electrolytic ----	0.07
C703(C753)	1-107-044	3.3 p	±0.5 p	500 V, silvered mica --	0.02
C704(C754)	1-107-015	4.7 p	±10 %	500 V, silvered mica --	0.02
C705(C755)	1-121-425	470	+100 -10 %	10 V, electrolytic ----	0.12

Ref. No.	Part No.	Description			Unit Price
C706(C756)	1-121-402	33	+100 -10 %	10 V, electrolytic	$0.05
C707(C757)	1-121-738	10	+100 -10 %	50 V, electrolytic	0.04
C708(C758)	1-121-405	33	+100 -10 %	50 V, electrolytic	0.06
C709(C759)	1-121-405	33	+100 -10 %	50 V, electrolytic	0.06
C710(C760)	1-105-681-12	0.047	±10 %	50 V, mylar	0.03
C711(C761)	1-105-681-12	0.047	±10 %	50 V, mylar	0.03
C712(C762)	1-105-679-12	0.033	±10 %	50 V, mylar	0.03
C713	- deleted -				
C714	1-107-096	300 p	±5 %	50 V, silvered mica	0.02
C801	1-105-757-12	0.022	±10 %	200 V, mylar	0.05
C802	1-105-757-12	0.022	±10 %	200 V, mylar	0.05
C803	1-105-757-12	0.022	±10 %	200 V, mylar	0.05
C804	1-105-757-12	0.022	±10 %	200 V, mylar	0.05
C805	1-105-719-12	0.033	±10 %	100 V, mylar	0.05
C806	1-105-719-12	0.033	±10 %	100 V, mylar	0.05
C807	1-121-736	1000	+100 -10 %	10 V, electrolytic	0.12
C808	1-121-736	1000	+100 -10 %	10 V, electrolytic	0.12
C809	1-121-559	50	+100 -10 %	100 V, electrolytic	0.19
C810	1-121-559	50	+100 -10 %	100 V, electrolytic	0.19
C811	1-121-559	50	+100 -10 %	100 V, electrolytic	0.19
C812	1-121-559	50	+100 -10 %	100 V, electrolytic	0.19
C813	1-121-423	220	+100 -10 %	50 V, electrolytic	0.13
C814	1-121-413	100	+100 -10 %	6.3 V, electrolytic	0.05
C815	1-121-417	100	+100 -10 %	50 V, electrolytic	0.10
C816	1-121-423	220	+100 -10 %	50 V, electrolytic	0.13
C817	1-105-719-12	0.033	±10 %	100 V, mylar	0.05
C818	1-105-719-12	0.033	±10 %	100 V, mylar	0.05
C819	1-121-388	1000	+100 -10 %	35 V, electrolytic	0.22
C820	1-121-422	220	+100 -10 %	25 V, electrolytic	0.11
C821	1-121-426	470	+100 -10 %	16 V, electrolytic	0.12
C822	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C823	1-121-426	470	+100 -10 %	16 V, electrolytic	0.12
C824	1-121-426	470	+100 -10 %	16 V, electrolytic	0.12
C825	1-121-425	470	+100 -10 %	16 V, electrolytic	0.12
C826	1-105-675-12	0.015	±10 %	50 V, mylar	0.02
C827	1-105-679-12	0.033	±10 %	50 V, mylar	0.03
C828	1-105-681-12	0.047	±10 %	50 V, mylar	0.03
C851	1-105-719-12	0.033	±10 %	50 V, mylar	0.05
C852	1-105-719-12	0.033	±10 %	50 V, mylar	0.05
C901	1-101-073	0.02	+80 -20 %	25 V, ceramic	0.02
C902	1-105-679-12	0.033	±10 %	50 V, mylar	0.03

Ref. No.	Part No.	Description	Unit Price
C903	1-105-679-12	0.033 ±10 % 50 V, mylar	$0.03
C904	1-121-330	1000 +100 -10 % 63 V, electrolytic	0.57
C905,906	1-121-817	6000 +100 -10 % 63 V, electrolytic	2.83
CV101,102 CV103,104 CV301,302	1-151-191-13S	Capacitor, tuning	0.83
CT104	1-141-094	Ceramic Trimmer	0.35
CT301, CT302	1-141-095	Ceramic Trimmer	0.11

Resistors

All resistance values are in Ω, ±5 %, 1/4 W and carbon type unless otherwise specified.

Ref. No.	Part No.	Description	Unit Price
R101	1-244-665	470	0.02
R102	1-244-689	4.7 k	0.02
R103	1-244-697	10 k	0.02
R104	1-244-666	510	0.02
R105	1-244-673	1 k	0.02
R106	1-244-685	3.3 k	0.02
R107	1-244-677	1.5 k	0.02
R108	1-244-666	510	0.02
R109	1-244-692	6.2 k	0.02
R110	1-244-697	10 k	0.02
R111	1-244-721	100 k	0.02
R112	- deleted		
R113	1-244-642	51	0.02
R114	1-244-677	1.5 k	0.02
R115	1-244-697	10 k	0.02
R201	1-244-671	820	0.02
R202	1-244-677	1.5 k	0.02
R203	1-244-685	3.3 k	0.02
R204	1-244-653	150	0.02
R205	1-244-673	1 k	0.02
R206	1-244-673	1 k	0.02
R207	1-244-671	820	0.02
R208	1-244-677	1.5 k	0.02
R209	1-244-685	3.3 k	0.02
R210	1-244-653	150	0.02

Ref. No.	Part No.	Description	Unit Price
R211	1-244-673	1 k	$0.02
R212	1-244-673	1 k	0.02
R213	1-244-649	100	0.02
R214	1-244-657	220	0.02
R215	1-244-721	100 k	0.02
R216	1-244-671	820	0.02
R217	1-244-689	4.7 k	0.02
R218	1-244-675	1.2 k	0.02
R219	1-244-653	150	0.02
R220	1-244-663	390	0.02
R221	1-244-677	1.5 k	0.02
R222	1-244-679	1.8 k	0.02
R223	1-244-671	820	0.02
R224	1-244-673	1 k	0.02
R225	1-244-649	100	0.02
R226	1-244-679	1.8 k	0.02
R227	1-244-721	100 k	0.02
R228	1-244-659	270	0.02
R229	1-244-705	22 k	0.02
R230	1-244-695	8.2 k	0.02
R231	1-244-673	1 k	0.02
R232	1-244-721	100 k	0.02
R233	1-244-649	100	0.02
R234	1-244-665	470	0.02
R235	1-244-709	33 k	0.02
R236	1-244-697	10 k	0.02
R237	1-244-673	1 k	0.02
R238	1-244-673	1 k	0.02
R239	1-244-673	1 k	0.02
R240	1-244-649	100	0.02
R241	1-244-713	47 k	0.02
R242	1-244-713	47 k	0.02
R243	1-244-691	5.6 k	0.02
R244	1-244-691	5.6 k	0.02
R245	1-244-673	1 k	0.02
R246	1-244-673	1 k	0.02
R247	1-244-699	12 k	0.02
R248	1-244-745	1 M	0.02
R249	1-244-734	360 k	0.02
R250	1-244-745	1 M	0.02
R251	1-244-723	120 k	0.02
R252	1-244-735	390 k	0.02
R253	1-244-745	1 M	0.02

Ref. No.	Part No.	Description	Unit Price
R254	1-244-642	51	$0.02
R255	1-244-642	51	0.02
R256	1-244-632	20	0.02
R257	1-244-657	220	0.02
R258	1-244-703	18 k	0.02
R259	1-244-689	4.7 k	0.02
R260	1-244-632	20	0.02
R261	1-244-699	12 k	0.02
R262	1-244-642	51	0.02
R263	1-244-680	2 k	0.02
R264	1-244-699	12 k	0.02
R265	1-244-720	91 k	0.02
R266	1-244-701	15 k	0.02
R267	1-244-733	330 k	0.02
R268	1-244-701	15 k	0.02
R270	1-244-659	270	0.02
R271	1-244-705	22 k	0.02
R272	1-244-658	240	0.02
R301	1-244-691	5.6 k	0.02
R302	1-244-704	20 k	0.02
R303	1-244-708	30 k	0.02
R304	1-244-634	24	0.02
R305	1-244-647	82	0.02
R306	1-244-708	30 k	0.02
R307	1-244-673	1 k	0.02
R308	1-244-691	5.6 k	0.02
R309	1-244-649	100	0.02
R310	1-244-719	82 k	0.02
R311	1-244-691	5.6 k	0.02
R312	1-244-673	1 k	0.02
R313	1-244-684	3 k	0.02
R314	1-244-689	4.7 k	0.02
R315	1-244-645	68	0.02
R316	1-244-657	220	0.02
R317	1-244-689	4.7 k	0.02
R318	1-244-645	68	0.02
R319	1-202-565	470 ±10 % 1/2 W composition	0.02
R320	1-244-673	1 k	0.02
R321	1-244-673	1 k	0.02
R322	1-244-680	2 k	0.02
R323	1-242-657	220	0.02
R324	1-242-701	15 k	0.02
R325	1-244-691	5.6 k	0.02
R326	1-244-689	4.7 k	0.02
R327	1-244-645	68	0.02

Ref. No.	Part No.	Description	Unit Price
R328	1-244-673	1 k	$0.02
R329	1-244-701	15 k	0.02
R330	1-244-680	2 k	0.02
R331	1-244-671	820	0.02
R332	1-244-657	220	0.02
R333	1-244-717	68 k	0.02
R334	1-244-649	100	0.02
R335	1-244-649	100	0.02
R401	1-244-737	470 k	0.02
R402	1-244-673	1 k	0.02
R403	1-244-673	1 k	0.02
R404	1-244-706	24 k	0.02
R405	1-202-560	300 ±10 % 1/2 W, composition	0.02
R406	1-244-689	4.7 k	0.02
R407	1-244-709	33 k	0.02
R408	1-244-670	750	0.02
R409	1-244-731	270 k	0.02
R410	1-244-671	820	0.02
R411	1-244-690	5.1 k	0.02
R412	1-244-689	4.7 k	0.02
R413	1-244-673	1 k	0.02
R414	1-244-682	2.4 k	0.02
R415	1-244-649	100	0.02
R416	1-244-661	330	0.02
R417	1-244-661	330	0.02
R418	1-244-661	330	0.02
R419	1-244-661	330	0.02
R420	1-244-643	56	0.02
R421	1-244-643	56	0.02
R422	1-244-679	1.8 k	0.02
R423	1-244-679	1.8 k	0.02
R424	1-244-693	6.8 k	0.02
R425	1-244-693	6.8 k	0.02
R426	1-244-671	820	0.02
R427	1-244-671	820	0.02
R428	1-244-715	56 k	0.02
R429	1-244-715	56 k	0.02
R430	1-244-661	330	0.02
R431	1-244-661	330	0.02
R432	1-244-715	56 k	0.02
R433	1-244-715	56 k	0.02
R434	1-244-702	16 k	0.02
R435	1-244-702	16 k	0.02
R436	1-244-685	3.3 k	0.02
R437	1-244-685	3.3 k	0.02
R438	1-244-659	270	0.02
R439	1-244-659	270	0.02

Ref. No.	Part No.	Description	Unit Price
R440	1-244-677	1.5 k	$0.02
R441	1-244-677	1.5 k	0.02
R442	1-244-685	3.3 k	0.02
R443	1-244-685	3.3 k	0.02
R444	1-244-695	8.2 k	0.02
R445	1-244-695	8.2 k	0.02
R446	1-244-709	33 k	0.02
R448	1-244-702	16 k	0.02
R449	1-244-702	16 k	0.02
R501	1-242-725	150 k	0.02
R502(R552)	1-242-715	56 k	0.02
R503(R553)	1-242-745	1 M	0.02
R504(R554)	1-242-687	3.9 k	0.02
R505(R555)	1-242-745	1 M	0.02
R506(R556)	1-242-667	560	0.02
R507(R557)	1-242-743	820 k	0.02
R508	1-242-721	100 k	0.02
R509(R559)	1-242-691	5.6 k	0.02
R510(R560)	1-242-653	150	0.02
R511(R561)	1-242-717	68 k	0.02
R512(R562)	1-242-673	1 k	0.02
R513(R563)	1-242-740	620 k	0.02
R514(R564)	1-242-714	51 k	0.02
R515(R565)	1-242-695	8.2 k	0.02
R516	1-242-649	100	0.02
R601(R651)	1-242-717	68 k	0.02
R602(R652)	1-242-701	15 k	0.02
R603(R653)	1-242-663	390	0.02
R604(R654)	1-242-737	470 k	0.02
R605(R655)	1-242-735	390 k	0.02
R606(R656)	1-242-701	15 k	0.02
R607(R657)	1-242-735	390 k	0.02
R608(R658)	1-242-691	5.6 k	0.02
R609(R659)	1-242-665	470	0.02
R610(R660)	1-242-675	1.2 k	0.02
R611(R661)	1-242-695	8.2 k	0.02
R612(R662)	1-242-709	33 k	0.02
R613(R663)	1-242-669	680	0.02
R614(R664)	1-242-655	180	0.02
R615(R665)	1-242-699	12 k	0.02
R616(R666)	1-242-691	5.6 k	0.02
R617	1-242-719	82 k	0.02

Ref. No.	Part No.	Description	Unit Price
R702(R752)	1-242-705	22 k	$0.02
R703(R753)	1-242-717	68 k	0.02
R704	1-242-705	22 k	0.02
R705(R755)	1-242-677	1.5 k	0.02
R706	1-242-705	22 k	0.02
R707(R757)	1-242-677	1.5 k	0.02
R708(R758)	1-242-677	1.5 k	0.02
R709(R759)	1-242-703	18 k	0.02
R710(R760)	1-242-679	1.8 k	0.02
R711(R761)	1-242-717	68 k	0.02
R712(R762)	1-242-717	68 k	0.02
R713(R763)	1-242-689	4.7 k	0.02
R714(R764)	1-242-695	8.2 k	0.02
R715(R765)	1-242-661	330	0.02
R716(R766)	1-202-587	3.9 k ±5 % 1/2 W, composition	0.04
R717(R767)	1-202-587	3.9 k ±5 % 1/2 W, composition	0.04
R718(R768)	1-242-661	330	0.02
R719(R769)	1-242-625	10	0.02
R720(R770)	1-242-661	330	0.02
R721(R771)	1-242-727	180 k	0.02
R722(R772)	1-242-727	180 k	0.02
R723(R773)	1-242-681	2.2 k	0.02
R724(R774)	1-242-681	2.2 k	0.02
R725(R775)	1-202-549	100 ±5 % 1/2 W, composition	0.02
R726(R776)	1-242-681	2.2 k	0.02
R727(R777)	1-242-681	2.2 k	0.02
R728(R778)	1-242-649	100	0.02
R729(R779)	1-242-673	1 k	0.02
R730(R780)	1-242-649	100	0.02
R731(R781)	1-242-673	1 k	0.02
R732(R782)	1-242-625	10	0.02
R733(R783)	1-242-619	5.6	0.02
R734(R784)	1-242-649	100	0.02
R735(R785)	1-242-619	5.6	0.02
R736(R786)	1-242-625	10	0.02
R737(R787)	1-242-673	1 k	0.02
R738(R788)	1-205-803	0.5 ±10 % 5 W, wire wound	0.08
R739(R789)	1-205-803	0.5 ±10 % 5 W, wire wound	0.08
R740(R790)	1-242-691	5.6 k	0.02
R741(R791)	1-202-525	10 ±5 % 1/2 W, composition	0.02
R742(R792)	1-202-565	470 ±5 % 1/2 W, composition	0.02
R743(R793)	1-206-089	470 ±10 % 1 W, metal-oxide	0.04
R744	1-242-673	1 k	0.02

Ref. No.	Part No.	Description	Unit Price
R801	1-244-617	4.7	$0.02
R802	1-244-617	4.7	0.02
R803	1-244-691	5.6 k	0.02
R804	1-244-681	2.2 k	0.02
R805	1-244-649	100	0.02
R806	1-244-649	100	0.02
R807	1-244-693	6.8 k	0.02
R808	1-244-641	47	0.02
R809	1-244-649	100	0.02
R810	1-244-641	47	0.02
R811	1-244-697	10 k	0.02
R812	1-244-683	2.7 k	0.02
R813	1-244-743	820 k	0.02
R814	1-244-723	120 k	0.02
R815	1-244-693	6.8 k	0.02
R816	1-244-707	27 k	0.02
R817	1-244-683	2.7 k	0.02
R818	1-244-601	1	0.02
R819	1-244-673	1 k	0.02
R820	1-202-525	10 ±10 % 1/2 W composition	0.02
R821	1-244-649	100	0.02
R822	1-206-093	1 k ±10 % 1 W metal-oxide	0.04
R823	1-206-093	1 k ±10 % 1 W metal-oxide	0.04
R824	1-244-666	510	0.02
R901(R951)	1-244-697	10 k	0.02
R902(R952)	1-244-737	470 k	0.02
R903(R953)	1-244-719	82 k	0.02
R904	- deleted -		
R905(R955)	1-242-745	1 M	0.02
RV201	1-221-066	100 k (B), semi-fixed	0.10
RV401	1-222-948	3.3 k (B), semi-fixed	0.12
RV601(RV651)	1-222-392	250 k (S), variable (volume control)	1.87
RV602(RV652)	1-222-392	250 k (M), variable (balance control)	1.87
RV603(RV653)	1-222-373	50 k (S), variable (tone control, treble)	0.55
RV604(RV654)	1-222-374	50 k (B), variable (tone control, bass)	0.51
RV701(RV751)	1-221-967	10 k (B), semi-fixed	0.10
RV702(RV752)	1-221-967	10 k (B), semi-fixed	0.10
RT301	1-222-952	15 k (B), semi-fixed	0.08

Ref. No.	Part No.	Description	Unit Price
		Switches	
S1	1-514-770	Switch, rotary (FUNCTION 1)	$0.61
S2	1-514-681	Switch, lever (FUNCTION 2)	0.64
S3	1-513-338	Switch, lever (MONITOR)	0.46
S4	1-514-508	Switch, rotary (MODE)	0.36
S5	1-513-338	Switch, lever (LOUDNESS)	0.46
S6	1-514-511	Switch, lever (HIGH FILTER)	0.46
S7	1-514-507	Switch, rotary (SPEAKER)	0.57
S8	1-514-369-12S	Switch, lever (POWER)	1.18
S9	1-513-338	Switch, lever (MUTING)	0.46
S10	1-514-524	Switch, slide (DE-EMPHASIS)	0.12
		Filters	
CF201	1-403-562-11	Fm I-f, ceramic 10.70 MHz (red)	0.50
CF202	1-403-562-21	Fm I-f, ceramic 10.66 MHz (black)	0.50
CF203	1-403-562-31	Fm I-f, ceramic 10.74 MHz (white)	0.50
CF204	1-403-562-41	Fm I-f, ceramic 10.62 MHz (green)	0.50
CF205	1-403-562-51	Fm I-f, ceramic 10.78 MHz (yellow)	0.50
CF206			
LPF401	1-231-088	Filter, low-pass	1.27
		Miscellaneous	
	1-231-057	Encapsulated Component, 120 Ω+0.033 μF	0.12
	1-507-163	Phono Jack, 4-P	0.17
	1-507-176	Phono Jack, 1-P	0.05
	1-507-185	Phono Jack, 6-P	0.23
	1-507-190	Jack, HEADPHONE: AUX-2	0.34
	1-509-029	REC/P.B. Connector	0.09
	1-509-341	AC Outlet	0.11
	1-517-021	Socket, meter lamp	0.05
	1-518-017-02	Lamp, meter 8 V/0.15 A	0.03
	1-518-051-22	Lamp, stereo 4.5 V/40 mA	0.08
	1-518-070	Lamp, dial 8 V/300 mA	0.12
	1-520-097-21	Meter, tuning	0.99
	1-526-502	Socket, transistor	0.08
	1-526-165	Voltage Changeover Block	0.22
	1-532-214	Fuse 5 A	0.15
	1-533-051	Socket, dial lamp	0.04

Part No.	Description	Unit Price
1-533-051	Socket, dial lamp	$0.04
1-534-487-22	Cord, power	0.30
1-536-146	Terminal Strip, 1L1 (A)	0.02
1-536-179	Terminal Strip, 1L1 (C)	0.02
1-536-188	Terminal Strip, L1 (B)	0.01
1-536-286	Terminal Strip, 4-P	0.18

III. ACCESSORIES AND PACKING MATERIALS

Accessories

X-44900-02	Cloth, polishing	0.03
1-501-083-21	Ribbon Antenna, fm	0.39
1-506-138-11	Phono Plug, red	0.22
1-506-138-12	Phono Plug, white	0.22
1-506-191-11	Plug, binaural	0.15
3-701-020	Bag, polyethylene	0.01
3-790-941-11	Manual, instruction	0.53
3-793-183	Card, inspection	0.01

Packing Materials

X-48041-08	Carton Ass'y	2.46
(4-804-117)	Carton	-
(4-804-118)	Cushion	-
(4-804-119)	Cushion, upper	-
(4-804-120)	Corrugated Cardboard	-
(4-804-121)	Sheet, protection	-
3-701-026	Tack Label	0.01
3-701-269	Bag, polyethylene	0.04